

USER GUIDE AND INSTALLATION

CAMPER CONVERSION KIT FOR VANS



ROADLOFT



USER GUIDE AND INSTALLATION

Model :

Dodge Grand Caravan

Honda Odyssey 2018 and up

Ford Transit Connect

Nissan NV200

<u>Welcome in the RoadLoft community</u>	3
<u>List of pieces</u>	4
<u>Conversion kit installation steps</u>	5
<u>Opening the drawers</u>	10
<u>Setting up the table</u>	11
<u>Recommended use of your kit</u>	12
<u>Maintenance</u>	12
<u>Warranty</u>	13
<u>Your review helps us</u>	13

Your first installation? Take the time to familiarize yourself with the steps to ensure correct use. We guarantee that you will quickly become an expert in the installation of your RoadLoft conversion kit. For

any questions, contact us :

Email : info@roadloft.com

Tel : (418) 849-3087

WELCOME TO THE ROADLOFT COMMUNITY

Congratulations new RoadLofteur !

Your new RoadLoft kit, designed by nature and adventure enthusiasts, will keep you inspired even in nature.

Following your installation, you will be able to join the RoadLofteurs sharing group, an initiative of the clients and entirely managed by them!



Inspired by nature

Discover new landscapes, be in contact with nature and travel in complete freedom

Our conviction? Living in the moment and discovering nature contribute to well-being. At the company's core resides one goal; get you into nature while respecting it. This is why your set is designed from quality eco-responsible materials, made with meticulousness by our team of experts to accompany you on all your adventures.

We sincerely hope that your RoadLoft set will bring you more spontaneity and make you travel in complete freedom. Now it's up to you to let yourself be inspired by nature while respecting it!





LIST OF PIECES

2 boxes of the central module



Leveling pads


Variable quantity depending on the model*



Bench



A U-clip
2 connector pieces
10 screws

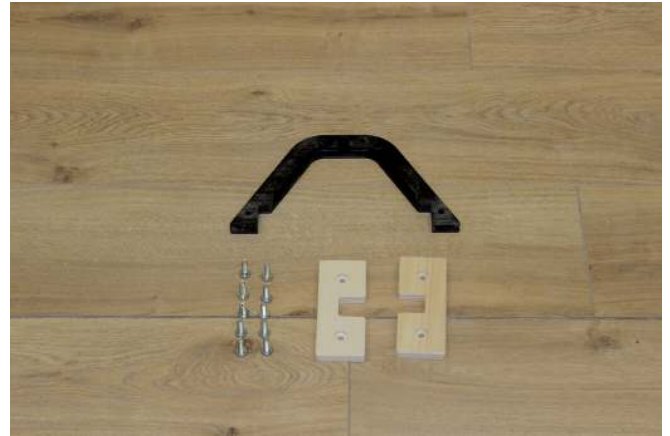

Rear boxes

1 burner drawer | 1 sink drawer



Bookcase



*Dodge Grand Caravan and Honda Odyssey 2018+ : 3 long, 4 short

*Ford Transit Connect : 8 short pads

*Nissan NV200 : 6 short pads

Central panel



INSTALLATION

Before you start, you will need:

- A flat screwdriver
- An impact screwdriver (optional)

Installation steps



1. In the car, remove the back seats.



2. Secure the two boxes of the central module together. To do this, place the two boxes side by side.



2.1 Insert the connector piece on each side so that the hole in the connector piece aligns with the box with a black insert.



Install the two screws.



Repeat the steps for the second fitting piece.



2.2 Secure the boxes together by affixing the screw on the inner side of the central module. The screw must be inserted in the box which has no hardware (black insert).

Repeat for the other side.



2.3 Screw the clip into the inserts of the central module.



3. Insert the leveling pads (4 small for the sides and 3 long for the underside) on the central box.



4. Insert the central housing into the vehicle and place it in the center of the space.



5. Insert the two rear boxes (sink drawer and burner drawer) in the fastening system of the central box.



6. Lock out the caissons. To do this, slide the lock of the drawers towards the central box.




7. Make sure that the front of the rear boxes rests against the corner of the vehicle. Thereby, the central box will be found in its exact position. Take care to move the central unit AND the drawer units at the same time. Do not pull only on the drawer units to adjust the position.



8. Insert the front bench into the vehicle.



9. Adjust the position of the front box by inserting the bookcase box into each attachment part (front and center box).

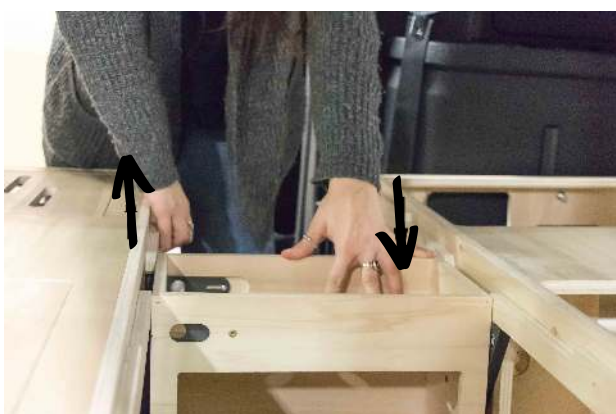

10. If necessary, slightly lift the front box to fully insert the bookcase.



11. Place the leveling pads in the right places on the central module. Differs depending on the models.*

11.1 Adjust the height of the leveling pads so that the central box is fully resting on the ground and is level with the front box and the bookcase.



12. Make sure that the bookcase is correctly positioned: all the upper edges must be at the same level.

*Dodge Grand Caravan and Honda Odyssey 2018+ : 3 long below, 4 short on the sides

*Ford Transit Connect : 8 short on the sides

*Nissan NV200 : 6 short on the sides



13. Lock the bookcase section.



14. Using a flat screwdriver, turn the leveling pads until the central module is firmly seated against the walls of the car. In this way, the conversion set will not move and be secure.



15. Place the central panel between the rear boxes, mattresses and set up the table (see below). Your kit is now installed. If your module emits noise on the road, it is because it is incorrectly installed. Then review each step. Before hitting the road, read the rest of the recommendations below.

OPENING THE DRAWERS



The drawers have a lock system, preventing them from opening when driving. To open the drawers, press down on the black plastic piece located on the side of the drawer, while pulling the drawer by the handle. Make sure to remove your finger when opening the drawer.

TABLE INSTALLATION



To change from bed to table position, remove the table, then fold the two sections to the sides.



Screw the leg into the table and insert the lower part into the bookcase section. Turn the key to tighten the leg and prevent the table from turning.



RECOMMENDED USE

1. Recommended maximum weight of 220 pounds per person.
2. Always close drawers before sitting on the module.
3. Do not be seated on the bench while opening drawers.
4. Do not exceed the load capacity of the drawers (100lbs).
5. Sit on the mattress and not directly on the module.
6. When installed in the vehicle, make sure that the boxes are blocked by the locks, in order to secure the module.
7. Never drive with your view blocked by the curtains.
8. When uninstalling the module, release the locks before removing the drawers.
9. Always remove your finger from the drawer lock system before opening the drawer.
10. Do not leave your fingers in the openings of the hatches while opening or closing the drawers.
11. Do not lean on the table.
12. Always make sure that the rear drawers have a support (either on the edge of the vehicle or have their tab).
13. To adjust the position of your kit, remove the bookcase and push on the central module. Never pull on your drawers for this maneuver.
14. Let the mattress recover its shape for 48 hours by leaving the zipper open. If it has not regained its shape after 72 hours, take it out of the cover.

MAINTENANCE

Conversion kit: Store in a dry place. Store flat.

Mattress and Curtain Cover: Machine wash gentle cycle in cold water. Hang to dry.

WARRANTY

Visit our website Roadloft.com for any question related to the [warranty](#).

YOUR REVIEW HELPS US

If you would like to help us, we would very much appreciate your feedback on our [Facebook page](#) and our [Google page](#). Thanks in advance! Your opinion is very important to us.

You have questions? Do not hesitate to contact us. It will be our pleasure to discuss with you and help you. We are happy to contribute to your next adventures! We look forward to seeing you on the road!



Join the RoadLofteurs community : [Roadloft Van Life](#)

Our address :

695 carbon street, suite 300, Quebec, Qc, Canada, G2N 2K7

Email : info@roadloft.com

Tel : (418) 849-3087