ROADLOFT

USER GUIDE AND INSTALLATION

CAMPER CONVERSION KIT FOR VANS

USER GUIDE AND INSTALLATION

Chrysler Pacifica

<u>Welcome in the RoadLoft community</u>	3
<u>List of pieces</u>	4
Conversion kit installation steps	5
<u>Opening the drawers</u>	21
<u>Setting up the table</u>	22
<u>Recommended use of your kit</u>	23
<u>Maintenance</u>	23
<u>Warranty</u>	24
<u>Your review helps us</u>	24

Your first installation? Take the time to familiarize yourself with the steps to ensure correct use. We guarantee that you will quickly become an expert in the installation of your RoadLoft conversion kit. For any questions, contact us : Email : info@roadloft.com <u>Tel</u> : (418) 849-3087

配 ROADLOFT

WELCOME TO THE ROADLOFT COMMUNITY

Congratulations new RoadLofteur ! Your new RoadLoft kit, designed by nature and adventure enthusiasts, will keep you inspired even in nature.

Following your installation, you will be able to join the <u>Roadlofters</u> sharing group, an initiative of the clients and entirely managed by them!





Discover new landscapes, be in contact with nature and travel in complete freedom

Inspired by nature

Our conviction? Living in the moment and discovering nature contribute to well-being. At the company's core resides one goal; get you into nature while respecting it. This is why your set is designed from quality ecoresponsible materials, made with meticulousness by our team of experts to accompany you on all your adventures

We sincerely hope that your RoadLoft set will bring you more spontaneity and make you travel in complete freedom.

Now it's up to you to let yourself be inspired by nature while respecting it!





LIST OF PARTS

2 boxes of the central module and its panels, 2 connecting piece, 10 screws and leveling pads

3 long below, 4 short on the sides



2 pieces of the bench, a v-tie, 8 screws, a table, a pole and a bookcase

*Solo kit : 1 piece of the bench



Kitchen drawers : 1 burner drawer and 1 sink drawer and the central panel



Solo kit : A small table replace the big table





Bench legs : 2 pieces A, 2 B, 2 C, 2 D and 4 E, 8

screws and 8 washers (not applicable for the hybrid model)



LIST OF TOOLS

Before you start, you will need:

- A flat screwdriver
- A #3 star screwdriver

INSTALLATION STEPS

First assembly of the sections

Upon receipt of your conversion kit, a first assembly is necessary to create your bench seat and your central module.

Since you may decide to keep these sections assembled when storing your kit, these steps may be optional for future installations in your vehicle.



偑



1. Fix the two casings of the central module together. To do this, lay the two boxes side by side.



2. Insert the connectior piece on each side so as to align the hole of the connector piece with that of the casing with a black insert.



3. Screw the two screws.

Repeat the steps for the second connector piece.



4. Fix the boxes together by affixing the screw on the interior side of the central module. The screw must be inserted in the box having no insert.

Repeat the manipulation for the other side.



5. Screw the U-bracket into the center module inserts. Screw from the inside and use a screw and a washer per hole.

If you are in solo mode, refer to pages 10-13 for where to attach your U-bracket.



6. Insert the leveling pads on the central box. Refer to the parts list section to identify the number and location of short and long pads according to your vehicle model.

Bench assembly - Duo mode



1. Place the two boxess A and B of the bench seat module side by side so that the drawer openings face each other.



2. When opening a drawer, screw three screws in the back of box A into the inserts of box B (see next picture).



3. When opening the other drawer, screw three screws in the back of box B in the inserts of box A. Take one screw and one washer per hole.



4. Attach the U-bracket to the center of the two boxes.

To do so, screw the U-shaped plastic clip from the inside of boxes A and B.

Take one screw and one washer per hole.





5. Screw the table supports in the duo position (at the ends of the cabinet). Take one screw and one washer per hole.

GO TO PAGE 14 IF YOU DO NOT HAVE THE SOLO OPTION

Bench assembly - Solo mode



ጤ

1. First, if you are going from duo mode to solo mode, separate the boxes. To do this, follow the steps of the duo mode assembly, but in reverse.



2. Fix the black plastic U-bracket to the desired solo mode position. Refer to pages 10-13 for where to attach your U-bracket.



3. If you choose scenarios 4 or 7, move the drawer lock to the opposite side.

To do this, unscrew the lock, move it to the other side and screw it back on.



4. Place the table supports on the bench on the opposite side of the U-bracket.To do this, screw from the inside of the box and use a washer and one screw per hole.



5. Place the table supports on the central module on the chosen half opposite the U-bracket.

To do this, screw from the inside of the box and use a washer and one screw per hole.

Solo mode installation scenarios

Scenario 1

偑



Scenario 3



Scenario 5



Scenario 2



Scenario 4



Scenario 6



User guide | Roadloft 2023 | Version 6_EN

Scenario 7

偑



Scenario 8



U-bracket installation position according to your desired scenario

Scenario 1

Placement of the U-bracket - central module



Scenario 2

Placement of the U-bracket - central module



Placement of the U-bracket - bench



Placement of the U-bracket - bench





Placement of the U-bracket - central module



Scenario 4

Placement of the U-bracket - central module



Scenario 5

Placement of the U-bracket - central module



Placement of the U-bracket - bench



Placement of the U-bracket bench (place lock on other side)



Placement of the U-bracket - bench



Scenario 6

ጤ

Placement of the U-bracket - central module



Scenario 7

Placement of the U-bracket - central module



Scenario 8

Placement of the U-bracket - central module



Placement of the U-bracket - bench



Placement of the U-bracket bench (place lock on other side)



Placement of the U-bracket bench





Placement of the U-bracket - central module



Scenario 8

Placement of the U-bracket - central module



Placement of the U-bracket -

Placement of the U-bracket -


bench (place lock on other side)



14




Installation of the bench legs

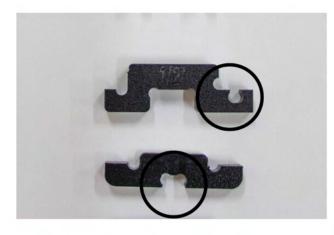

1. Assemble parts A and B of the leg. To do so, insert the hooked part of part A into the hole in the center of part B.





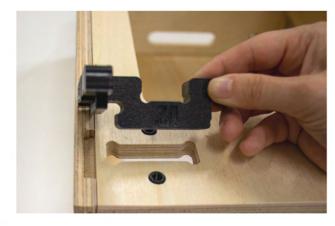

2. Insert parts A and B into the slots provided under the bench.

Get you into nature, while respecting it





3. Fix part C to the top of part A.



4. Repete steps 1 to 3 for the 4 legs in solo mode or the 8 legs in duo mode.



Installation steps



1. In the car, remove the back seats.



2. Insert the central module into the vehicle and place it in the center of the space.



3. Install the drawer tie straps into the anchorage at the rear of the vehicle. Make sure it's the right way round.



3.1 Insert the tip of the strap into the anchor.





3.2 Leave the strap installed after anchoring and proceed to installing the drawers.



3.3 Insert the two rear boxes (sink drawer and burner drawer) in the fastening system of the central module.



4. Lock out the caissons. To do this, slide the lock of the drawers towards the central module.



5. Make sure that the front of the rear boxes rests against the corner of the vehicle. Thereby, the central box will be found in its exact position. Take care to move the central unit AND the drawer units at the same time. Do not pull only on the drawer units to adjust the position.



╗

6. Insert the front bench into the vehicle. Align it with the central module.

If you are in solo mode, place the half-bench on the side where you fixed the U-bracket on the central module.



7. Adjust the position of the front box by inserting the bookcase box into each attachment part (bench and center module).

8. If necessary, slightly lift the bench box to fully insert the library.

9. Adjust the height of the leveling pads so that the central box is fully resting on the ground and is level with the front box and the bookcase.



10. Make sure that the table fits well and is well supported by the support in bed mode.If the edges are not all at the same level, adjust the height of the leveling pads.



11. Lock the bookcase section.

12. Make sure the table fits into the space and is well supported by the supports when lying down.

If not, revisit the bench assembly steps.



13. Using a flat screwdriver, turn the leveling pads until the central module is firmly seated against the walls of the car. In this way, the conversion set will not move and be secure.




14. Open the kitchen drawer and squeeze the black latches simultaneously on each side of the drawer to open it an additional half inch.



14.1 This will give you easier access to the slot to attach the strap to the drawer.Take the upper part of the strap (the tip) and insert it from below the drawer.



14.2 Then insert the tip into the strap attachment.

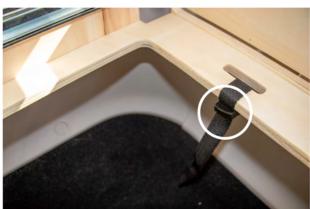

14.3 Tighten the strap well so that the drawer cannot move. Make sure the clip is underneath and not blocking the drawer from closing.

Repeat for the second kitchen drawer.



11. Place the surface hatches into the designated places. Set up the table and your mattress.

Your kit is now properly installed. If your conversion kit makes noise on the road it means that it is not properly installed. Review each step. Before hitting the road, see the recommendations bellow.

OPENING THE DRAWERS



The drawers have a lock system, preventing them from opening when driving. To open the drawers, press down on the black plastic lock located on the side of the drawer, while pulling the drawer by the handle. Make sure to remove your finger when opening the drawer.

TABLE INSTALLATION





To change from bed to table position, remove the table, then fold the two sections to the sides.





Screw the leg into the table and insert the lower part into the library box. Turn the tumb screw to tighten the leg and prevent the table from turning

RECOMMENDED USE

1. Recommended maximum weight of 220 pounds per person.

2. Always close drawers before sitting on the module.

3. Do not be seated on the bench while opening drawers.

4. Do not exceed the load capacity of the drawers (100lbs).

5. Sit on the mattress and not directly on the module.

6. When installed in the vehicle, make sure that the boxes are blocked by the locks, in order to secure the module.

7. Never drive with your view blocked by the curtains.

8. When uninstalling the module, release the locks before removing the drawers.

9. Always remove your finger from the drawer lock system before opening the drawer.

10. Do not leave your fingers in the openings of the hatches while opening or closing the drawers.

11. Do not lean on the table.

12. Always make sure that the rear drawers have a support (either on the edge of the vehicle or have their tab).

13. To adjust the position of your kit, remove the bookcase and push on the central module. Never pull on your drawers for this maneuver.

14. Let the mattress recover its shape for 48 hours by leaving the zipper open. If it has not regained its shape after 72 hours, take it out of the cover.

MAINTENANCE

Conversion kit: Store in a dry place. Store flat.

Mattress and Curtain Cover: Machine wash gentle cycle in cold water. Hang to dry.



WARRANTY

Visit our website Roadloft.com for any question related to the warranty.

YOUR REVIEW HELPS US

If you would like to help us, we would very much appreciate your feedback on our <u>Facebook page</u> and our <u>Google page</u>. Thanks in advance! Your opinion is very important to us.

You have questions? Do not hesitate to contact us. It will be our pleasure to discuss with you and help you. We are happy to contribute to your next adventures! We look forward to seeing you on the road!



Join the RoadLofteurs community : Roadloft van life

Our address :

695 carbon street, suite 300, Quebec, Qc, Canada, G2N 2K7 **Email** : info@roadloft.com **Tel** : (418) 849-3087