



ROADLOFT



USER GUIDE AND INSTALLATION

SUV CAMPER KIT



This guide is valid for every compatible SUV and HATCHBACK model

| | |
|---|----|
| Welcome to the Roadloft community | 3 |
| List of parts | 4 |
| Installation steps of the Camping DUO kit | 7 |
| Opening the drawers | 15 |
| Recommended use of your kit | 15 |
| Warranty | 16 |
| Your review helps us | 16 |

Your first installation? Take the time to familiarize yourself with the steps to ensure proper use. We guarantee that you will quickly become an expert in installing your Roadloft SUV camper kit. For any question, contact us:

Email: info@roadloft.com

Phone: 1 (418) 849-3087



WELCOME TO THE ROADLOFT COMMUNITY

Congratulations on your brand new Roadloft kit!

Your choice not only reflects your commitment to nature, but also your desire to fully live each moment.

With your Roadloft kit, passionately designed and prepared by our team, you are ready to explore new horizons and discover the beauty of the world around you.



Inspired by nature

Discover new landscapes, be in contact with nature and travel freely

We are convinced that your Roadloft will inspire you to head out spontaneously and create unforgettable memories in nature, all while respecting it. By joining the Roadloft community, you'll be able to share your experiences, tips, and adventures with other enthusiasts.

May your Roadloft kit lead you to countless nature getaways, filled with wonder and genuine adventures, while also helping to preserve the beauty of our planet!

Now it's up to you, let yourself be inspired by nature!





List of Components

Kitchen

1 kitchen unit



1 connecting piece, 8 screws,
and 8 washers




1 small cabinet



1 connecting piece for the small
cabinet to the kitchen unit leg



6 cabinet legs, 12 screws

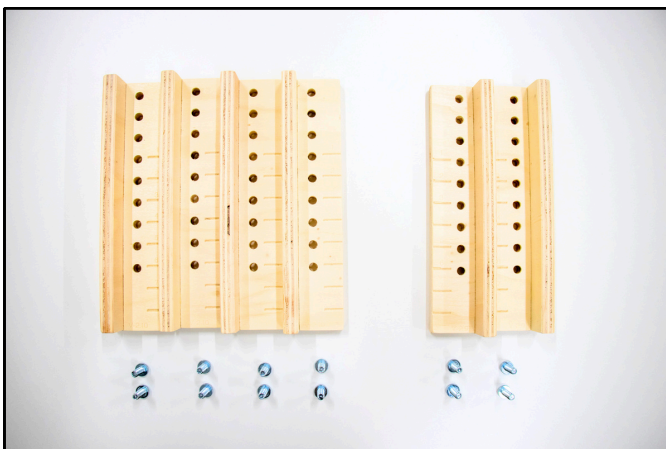

1 central kitchen panel





Bring you into nature, while respecting it

4 vehicle attachment straps




2 connecting attachment straps



Bed

4 spars

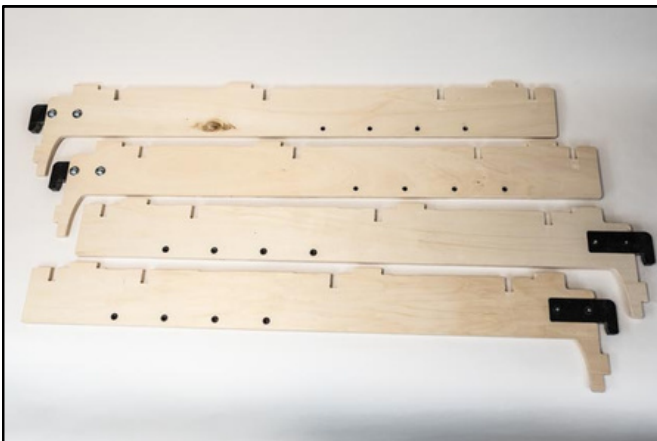

4 long legs for the bed and 8 screws



4 short crosspieces



2 long crosspieces






2 central panels



2 driver panels



4 short legs for the bed
(if needed)

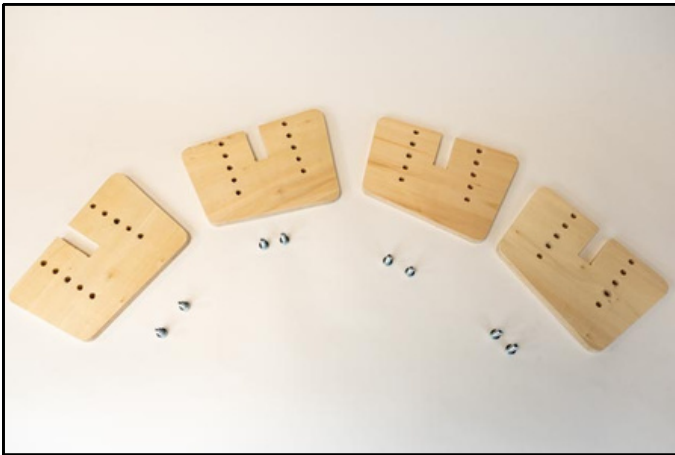

List of Necessary Tools

Before you begin, you will need:

- A Phillips screwdriver

Installation Steps for the DUO Camping Kit


Step 1



Lower the rear seats of the vehicle.

Check the minimum height required to open the kit by placing a bracket in the deep part of the vehicle, at the edge of the trunk.

Step 2

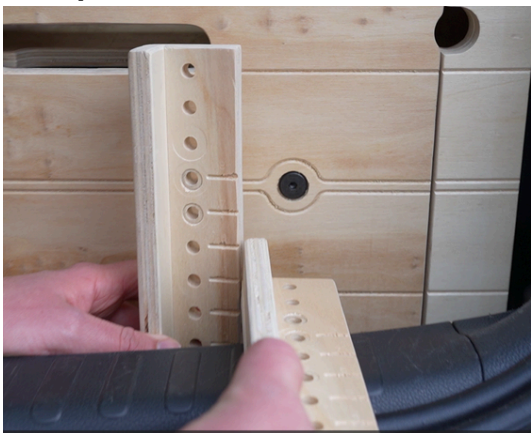

To install the brackets of the kitchen unit, open the drawer so that you can access the two latches on the sides. Press both latches while pulling on the drawer. Then remove the drawer




Step 3



Flip the kitchen unit and the small cabinet onto the floor to see the four slots needed for the legs' installation. Place on a clean blanket to prevent damage

Using a screwdriver, install and adjust the height of the legs for both the kitchen unit and the small cabinet. Use 2 screws per leg.

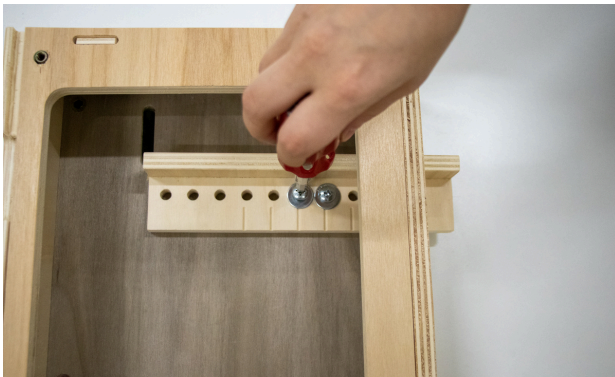

Attach the 6 legs (4 on the kitchen unit, 2 on the small cabinet). Ensure they are securely attached before flipping the kitchen unit back over.

While adjusting your legs, ensure that they all have support in the vehicle and that the kit is level




Flip the kitchen unit back over, legs facing down.

Reinstall the drawer by aligning the two sliders. Put the drawer back in.

To help you properly reinsert the sliders, hold the sliders of the cabinet and push the drawer. A click should be heard on each side. Resistance is possible when replacing the drawer. However, once completely closed, your drawer will no longer have resistance.




Step 4

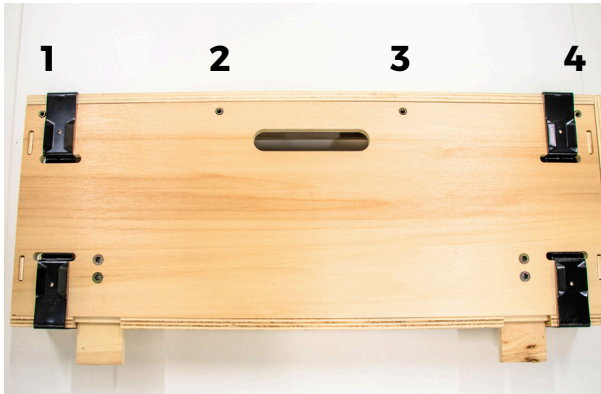

Using a screwdriver, secure the 4 vehicle attachment straps.

2 outside the small cabinet and 2 outside the kitchen unit.

The goal is to create a tension angle to secure the modules in the vehicle.

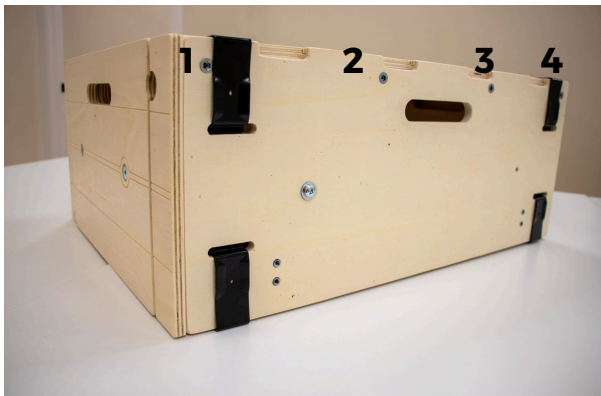

Using a screwdriver, secure the 2 attachment straps to the cabinets. One inside the small cabinet and one inside the kitchen unit, near the facades.





Step 5



Using a screwdriver, secure the small cabinet to the connecting piece. For this, place the cabinet face down on a clean blanket to prevent damage.

Lift the pivot part of the connecting piece, then screw this piece onto the back face of the small cabinet. You will need 4 screws and 4 washers.

Ensure that the small cabinet is securely attached to the connecting piece before installing it in the vehicle.

Vehicle Installation

Step 6



Install the small cabinet and the connecting piece in the vehicle



Then, install the kitchen unit at the right end of the connecting piece.

Using a screwdriver, secure the kitchen unit to the connecting piece. You will need 4 screws and 4 washers.



Fit the 'E' piece under the two front legs of the cabinets, then attach the cabinet attachment straps.



Attach the straps to the vehicle's anchors.

Check that the tailgate closes well. If needed, move the conversion kit a few centimeters.




Tighten the four straps to the vehicle's anchor points. This way, both the small cabinet and the kitchen unit will not move and will be secured.





Bed Module

Step 7

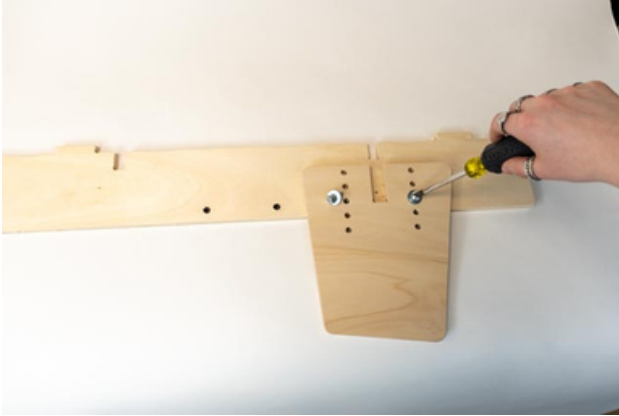

Using a screwdriver, install and adjust the height of the legs of the bed module according to your vehicle model.

While adjusting your legs, ensure that they all have support on the folded seats and that the bed is level.

Step 8



Insert the 4 spares (2 for solo). For this, raise the pivot part of the kitchen module's connecting piece

Be careful not to force the hinges.



Fit the toothed part of the spar into the long slot of the connecting piece. Move the spar laterally in the smaller slot to lock the spar.



Lift the pivot part of the bed module's connecting piece and insert a long crosspiece.

Step 9



Insert the second long crosspiece into the notches of the rails.



Insert the 4 crosspieces into the notches of the rails. Note, there is a wide side and a short side, the wide side goes on the outside of the bed.



Fit the notches of the spar into the movable part of the connecting piece.



Step 10



Install the 4 panels (2 for solo) that make up the bed base. To do this, install the panels in the notches of the spars. Start with the central panels.



Repeat for the driver panels.

Step 11



Ensure that the bed module and cabinets are straight. Readjust the legs as needed.

All that's left is to install your mattress!

Your kit is now ready for use.

If your module makes noise on the road, it means it is improperly installed. Please review each step again.



Opening the Drawers



The kitchen unit has a locking system to prevent it from opening while driving. To open it, insert your finger into the hole, press the black plastic piece to the left while pulling the drawer by the handle.

Recommended Use

1. Maximum recommended weight of 220 pounds per person.
2. Do not exceed the load capacity of the drawers (100lbs).
3. Sit on a mattress, not directly on the wooden platform.
4. When installed in the vehicle, ensure the kit is securely fastened with straps to secure the module.
5. When uninstalling the module, we recommend disassembling the kitchen unit from the connecting piece before removing it from the vehicle.
6. Do not leave your fingers in the hatch openings when opening or closing the drawers.
7. When storing, keep in a dry and flat place.
8. If you are adjusting the legs, ensure they all have support in the vehicle and that the bed is level.



Warranty

Visit our website roadloft.com for any warranty-related questions

Your feedback helps us improve

If you would like to help us, we would greatly appreciate your feedback on our Facebook page and our Google listing. Thank you in advance! Your opinion is extremely important to us.

Do you have any questions? Do not hesitate to contact us. It will be a pleasure to talk with you and help you. We are happy to contribute to your next adventures! Looking forward to meeting you on the road!



Join the Roadloft Van Life Community : [Roadloft Van Life](#)

Our address :

695 rue du carbone, suite 300, Québec, QC, Canada, G2N 2K7

Email : info@roadloft.com

Phone : (418) 849-3087