




# ROADLOFT

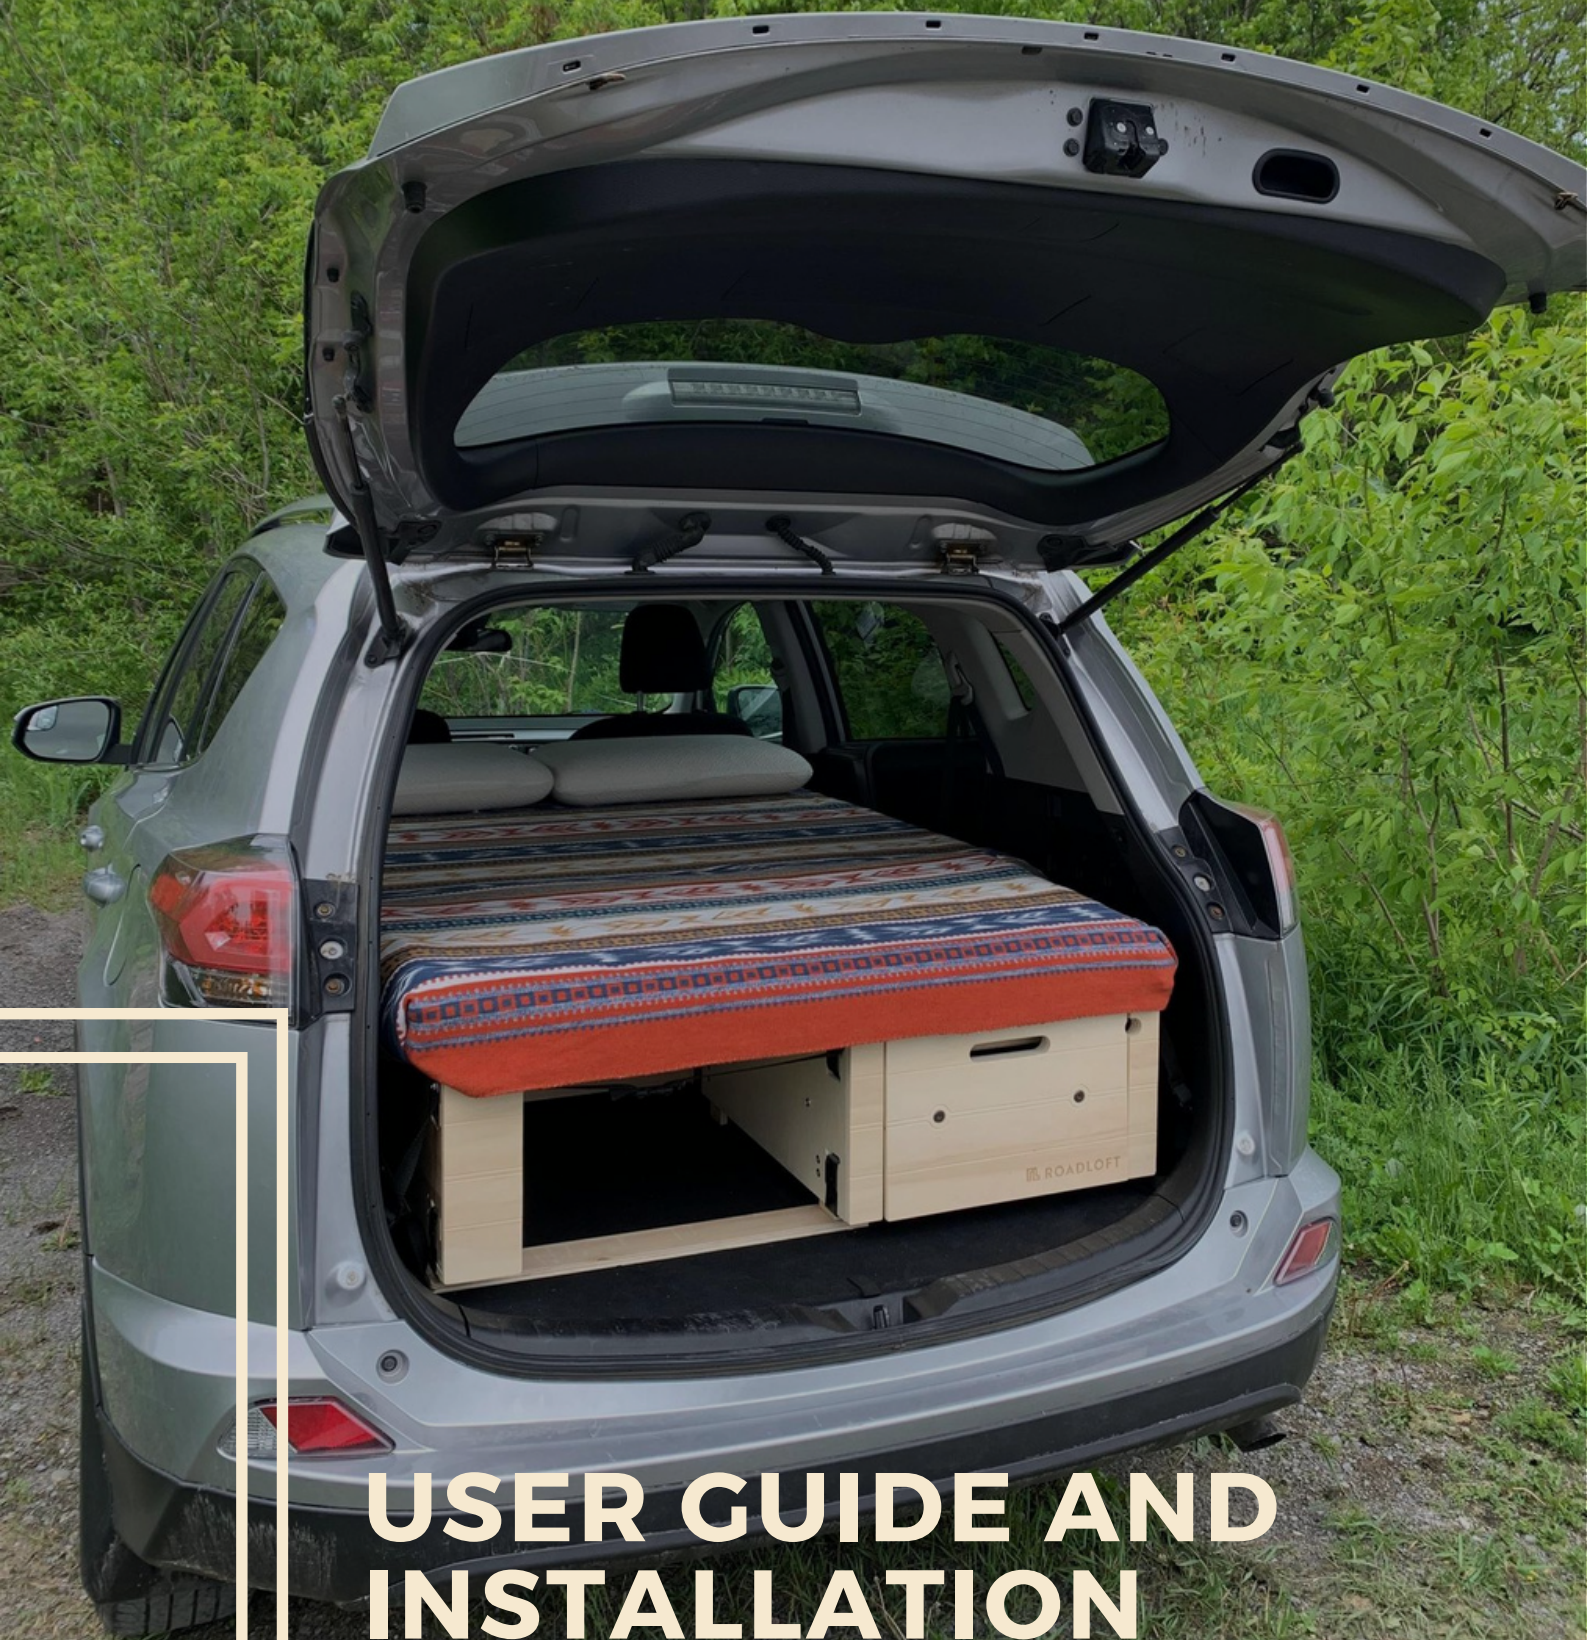

## USER GUIDE AND INSTALLATION

SUV CAMPING KIT





## This guide is valid for every compatible SUV model

Welcome to the Roadloft community	3
List of parts	4
Installation steps of the Camping DUO kit	7
Installation steps of the Camping SOLO kit	16
Opening the drawers	19
Recommended use of your kit	19
Warranty	20
Your review helps us	20

Your first installation? Take the time to familiarize yourself with the steps to ensure proper use. We guarantee that you will quickly become an expert in installing your Roadloft SUV camping kit. For any questions, contact us:

Email: [info@roadloft.com](mailto:info@roadloft.com)

Phone: 1 (418) 849-3087



# WELCOME TO THE ROADLOFT COMMUNITY

Congratulations new Roadlofter !  
Your new Roadloft kit, designed by nature and  
adventure enthusiasts, will keep you inspired  
even in nature.

After your installation, if it's not already the  
case, you can join the sharing of Roadlofters, a  
customer initiative and fully managed by them!



Inspired by nature

## Discover new landscapes, be in contact with nature and travel freely

Our belief? Making the most of the present moment and  
discovering nature contribute to well-being.

At the heart of the company is therefore an objective: to  
bring you in nature, while respecting it.

That's why your kit is made of quality eco-responsible  
materials, meticulously made by our team of experts to  
accompany you in all your adventures.

We sincerely hope that your Roadloft camping kit will  
bring you more spontaneity and will make you travel in  
total freedom. Now it's up to you to let yourself be  
inspired by nature while respecting it!





# List of parts

## Kitchen

1 kitchen box




1 small box




1 connecting piece, 8 screws et 8 washers



1 piece E

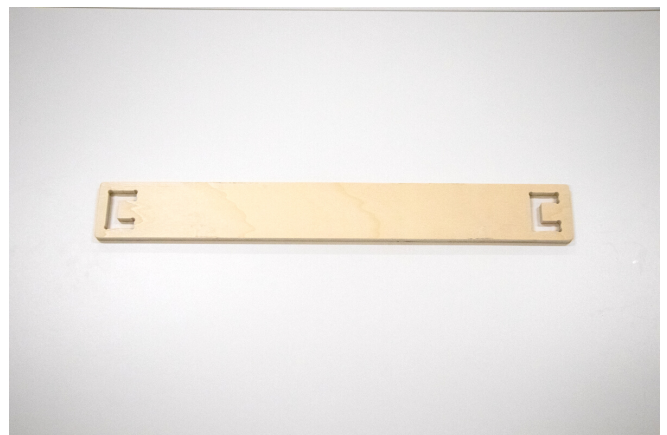

6 box legs and 12 screws

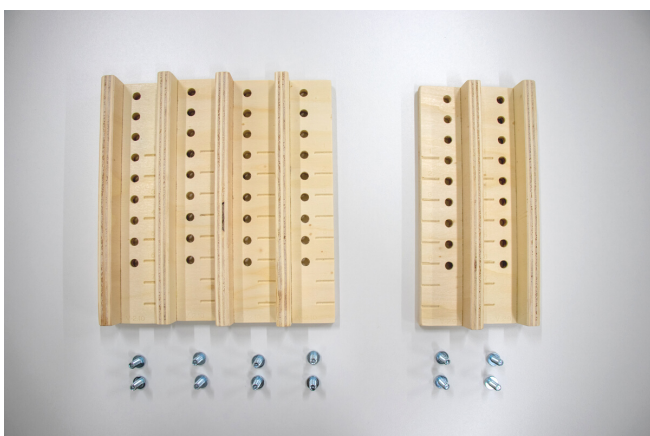

Kitchen central panel







4 vehicle fastening straps



2 box straps



## Bed

3 spars V-1.5, 3 long legs for the bed and 6 screws



1 spar V-1.4



3 spars V-1.3




Spar V1.1, V-1.2 (duo) and V-1.14 (solo)








Driver panel

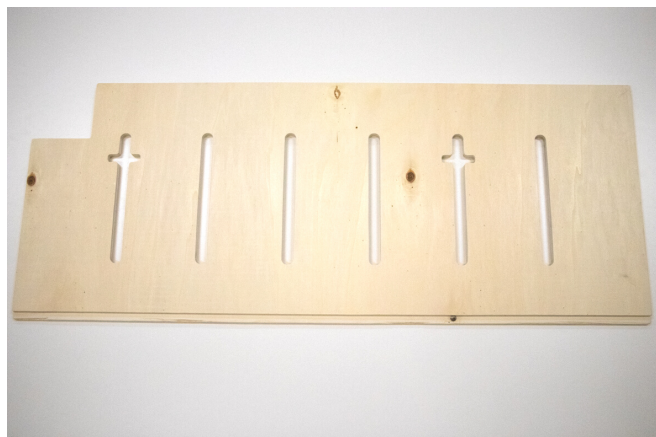

Passenger panel




Large central panel

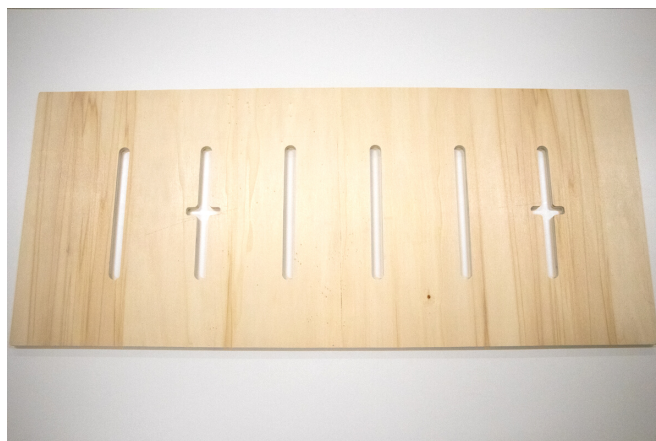

Solo central panel



3 small legs for the bed  
(if needed)

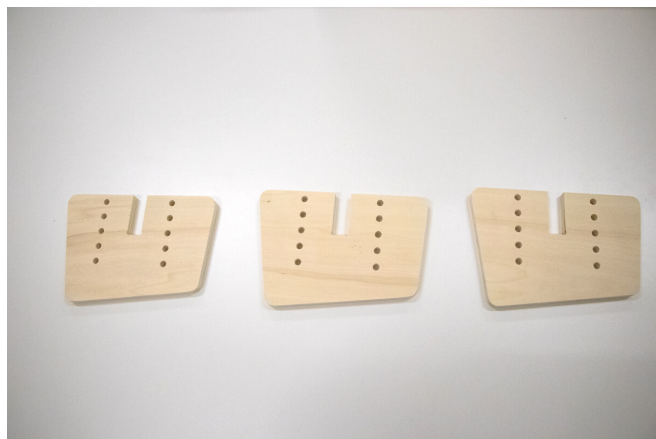



## List of tools needed

Before you start, you will need:

- A star screwdriver


## Installation steps of the Duo Camping kit

### Step 1



Lower the rear seats of the vehicle.

### Step 2

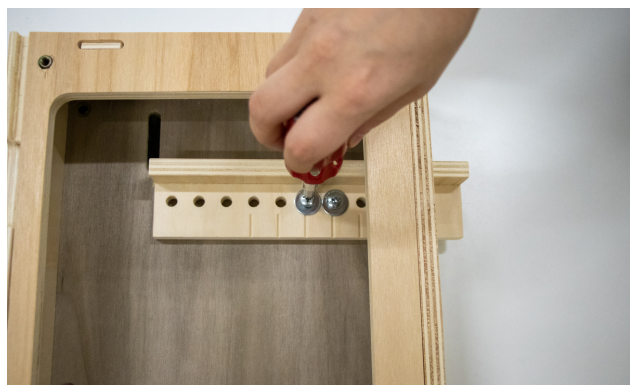

Using a star screwdriver, install and adjust the height of the legs of the kitchen unit and the small unit.

Refer to the 2nd tab of the following [file](#) to find out the recommended height for your vehicle.





To install the kitchen box legs, open the drawer so that you can access the two triggers on the sides. Squeeze both triggers while pulling out the drawer. Remove the drawer.



Turn the kitchen unit back against the floor so that you can see the four slots needed to install the legs. Place on a clean blanket to avoid breakage.

Fix the 4 legs. Make sure that these are securely fastened before turning the kitchen unit over.

When adjusting your legs, make sure they all have support in the vehicle and that the kit is level.



Turn the kitchen unit, legs on the floor.


Install the drawer by aligning the two slides. Close the drawer.

To help you replace the slides properly, hold the drawer slides and push the drawer. You should hear a click on each side. Resistance is possible when putting the drawer back. On the other hand, once completely closed, your drawer will no longer have any resistance.






## Step 3

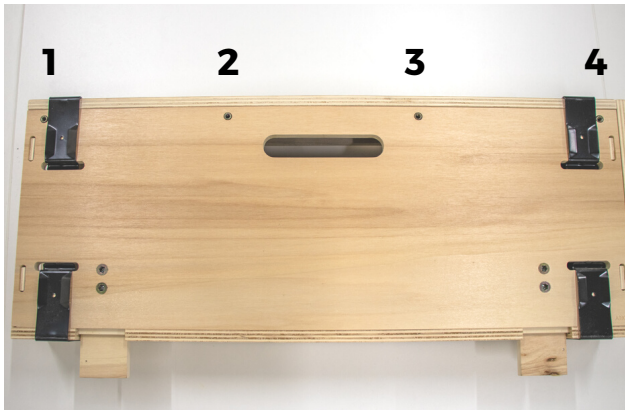

Using a star screwdriver, fix the 4 vehicle securing straps. 2 outside the small box and two outside the kitchen box.

Refer to the the 2nd tab of the [following file](#) to find out the recommended straps position for your vehicle.

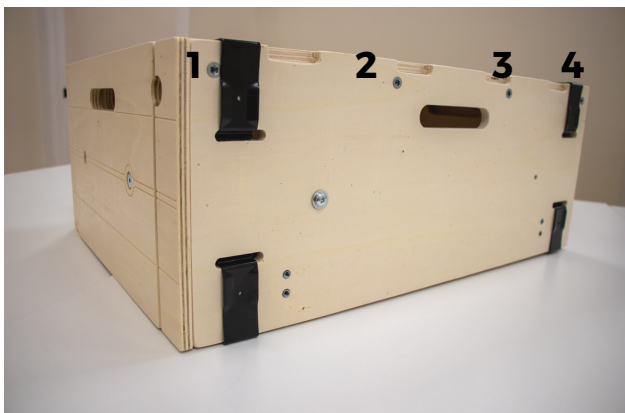

Using a star screwdriver, fix the 2 fastening straps to the boxes. One on the inside of the small box and one on the inside of the kitchen box, near the facades.





## Step 4



Using a star screwdriver, fix the small box with the connecting piece. To do so, lay the box face down on a clean blanket to prevent breakage.

Raise the pivoting part of the connecting piece, then screw this piece onto the rear face of the small box. You will need 4 screws and 4 washers.

Make sure that the small box is firmly attached to the connecting piece before installing it in the vehicle.

## Installation in the vehicle

### Step 5



Install the small box and the connecting piece in the vehicle.



Then, install the kitchen box at the right end of the connecting piece.

Using a star screwdriver, fix the kitchen box to the connecting piece. You will need 4 screws and 3 washers.





Fit part E under the two front legs of the boxes, then attach the box fixing straps.



Fix the fastening straps to the vehicle anchors.

Check that the tailgate closes properly. If necessary, move the conversion kit a few centimetres.




Tighten the four straps on the vehicle anchors. This way, the small box and the kitchen box will not move and will be secure.



## Bed module

### Step 6

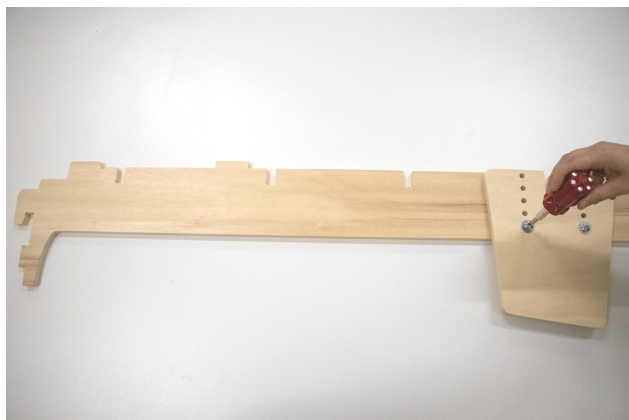

Using a star screwdriver, install and adjust the height of the legs of the bed module according to your vehicle model.

Refer to the 2nd tab of the [following file](#) to find out the recommended height for your vehicle.

As you adjust your legs, make sure they all have support on the seats and the bed is level.

### Step 7




Insert the 3 spars V-1.5. To do so, raise the pivoting part of the bed module connecting piece.

Be delicate during this step to not force the hinges.




Fit the toothed part of the spar into the long slot of the connecting piece. Move the spar V-1.5 laterally in the smallest slot so as to lock the spar.



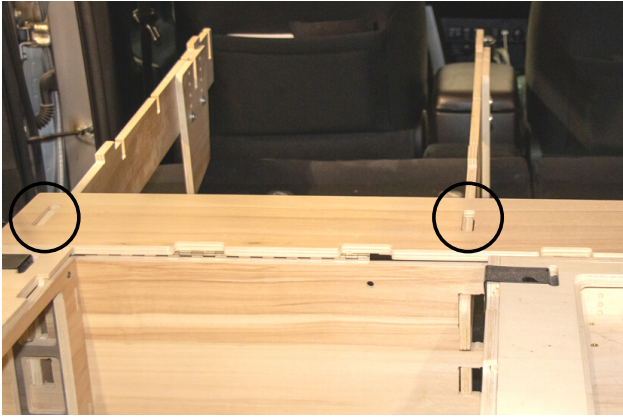

Fit the notches of the beams into the moving part of the connecting piece.

## Step 8

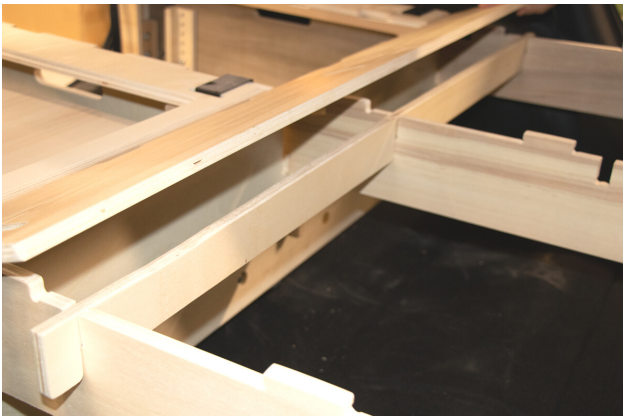

Lift the pivoting part of the bed module connecting piece and fit the crosspiece V-1.4.



Fit the 3 crosspieces V-1.3 alternately from left to right in the notches of the spars.

\*It is important not to put 2 or 3 V-1.3 crosspieces in a row on the same side. This could affect the sturdiness of the bed module.



Insert the crosspiece V-1.1 and the crosspiece V1.2 in the notches of the side members V1.5

The crosspiece V-1.1 is positioned behind the driver's bench and the V-1.2 is positioned behind the passenger bench.



## Step 9



Make sure that the bed module and the boxes are straight. Readjust the legs as needed.

## Step 10



Install the 3 panels making up the bed base. To do this install the large central panel in the notches of the spars V-1.5.



Insert the driver panel so that it fits under the large central panel.





Repeat for passenger panel.

## Step 11



Install the kitchen central panel and the kitchen box panel.

All you have to do is install your mattress!

Your kit is now installed.

If your module gives off road noise, it is incorrectly installed.

Then review each step.

# Installation steps of the SoLO Camping kit

Repeat steps 1 to 6

## Step 7



Insert the 2 spars V-1.5. To do so, raise the pivoting part of the bed module connecting piece.

Be delicate during this step to not force the hinges.



Fit the toothed part of the spar into the long slot of the connecting piece. Move the spar V-1.5 laterally in the smallest slot so as to lock the spar.



Fit the notches of the spars into the moving part of the connecting piece.





## Step 8



Lift the pivoting part of the bed module connecting piece and fit a crosspiece V-1.3.



Fit the crosspiece V-1.14 in the notches near the driver and passenger bench.

Then, fit the other 2 crosspieces V-1.3 into the notches of the spars.

It is not necessary for the other 2 crosspieces C to follow each other.

## Step 9



Make sure that the bed module and the boxes are straight. Readjust the legs if needed.



## Step 10



Install the 2 panels making up the bed base. To do this install the solo central panel in the notches of the spars V-1.5.



Insert the driver panel so that it fits under the solo central panel.



Install the kitchen central panel and the kitchen box panel.



## Opening the drawers



The kitchen box has a system of locks, preventing it from opening when driving. To open it, insert your finger in the hole, press on the black plastic piece on the left while pulling the drawer by the handle. Be sure to remove your finger when opening the drawer.

## Recommended Use

1. Recommended maximum weight of 220 pounds per person.
2. Do not exceed the load capacity of the drawers (100lbs).
3. Sit on the mattress and not directly on the module.
4. When installed in the vehicle, ensure that the kit is well fixed with the straps, to secure the module.
5. When uninstalling the module, we recommend disassembling the kitchen unit from the connecting piece before removing it from the vehicle.
6. Always remove your finger from the drawer lock system before opening the drawer.
7. Do not leave your fingers in the openings of the hatches while opening or closing the drawers.
8. When storing, keep in a dry, flat place.
9. If you adjust your legs, make sure they all have support in the vehicle and the bed is level.

## Warranty

Visit our website [roadloft.com](https://roadloft.com) for any warranty related questions.

## Your review helps us

If you would like to help us, we would very much appreciate your review on our Facebook page and our Google page. Thanks in advance! Your opinion matters a lot to us.

You have questions? Don't hesitate to contact us. It will be a pleasure to discuss with you and help you. We are happy to contribute to your next adventures!

See you on the road!



Join the RoadLofters community : [Roadloft Van Life](#)

Our address:

695 rue du carbone, suite 300, Québec, QC, Canada, G2N 2K7

Email: [info@roadloft.com](mailto:info@roadloft.com)

Phone: 1 (418) 849-3087