



ROADLOFT

USER GUIDE AND INSTALLATION

Hatchback Camping Kit

© COPYRIGHT ROADLOFT 2025



This guide is valid for every compatible Hatchback model

Welcome to the Roadloft community	3
List of parts	4
Installation steps of the Camping DUO kit	7
Installation steps of the Camping SOLO kit	15
Opening the drawers	18
Recommended use of your kit	19
Warranty	20
Your review helps us	20

Your first installation? Take the time to familiarize yourself with the steps to ensure proper use. We guarantee that you will quickly become an expert in installing your Roadloft SUV camping kit. For any questions, contact us:

Email: info@roadloft.com

Phone: 1 (418) 849-3087



Congratulations new Roadlofter !
Your new Roadloft kit, designed by nature
and adventure enthusiasts, will keep you
inspired even in nature.
After your installation, if it's not already the
case, you can join the sharing of
Roadlofters, a customer initiative and fully
managed by them!

Discover new landscapes, be in
contact with nature and travel
freely

A view from inside a tent looking out at a mountain range at sunset. The foreground shows the interior of the tent with a striped blanket. The middle ground features a line of evergreen trees and a body of water. The background is dominated by a range of jagged mountains under a sky with soft, colorful clouds. The tent's interior is dimly lit, with a small light source visible on the left.



List of parts

Kitchen

1 kitchen box



1 small box




2 connecting pieces, 11 screws et 11 washers



Kitchen central panel



6 box legs and 12 screws

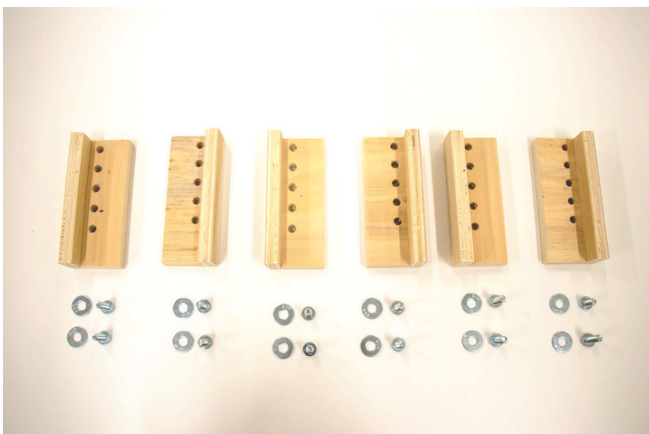

The sink shelf, the sink and the cutting board





Depending on your vehicle model, the sink shelf is either removable or sliding.



4 vehicle fastening straps



2 box straps




Bed

4 spars, 4 short legs for the bed and 8 screws



2 long spars, 4 short spars

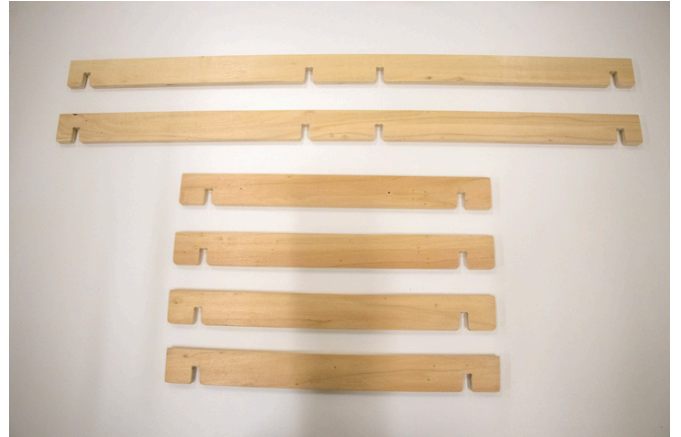

4 panels for the bed



4 long legs for the bed (if needed)



List of tools needed


Before you start, you will need:

- A star screwdriver


Installation steps of the Duo Camping kit



1. Lower the rear seats of the vehicle.

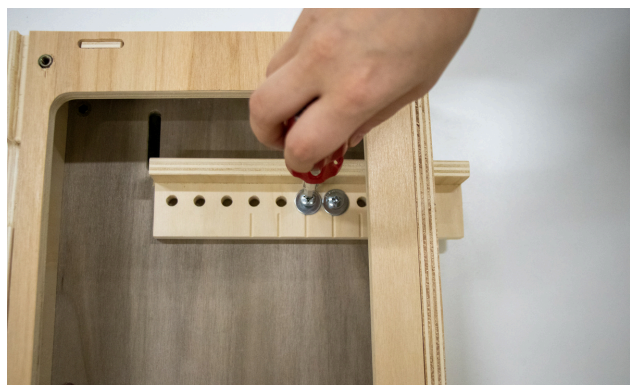


2. If necessary, install and adjust the height of the legs of the kitchen box and the small box according to the vehicle model.

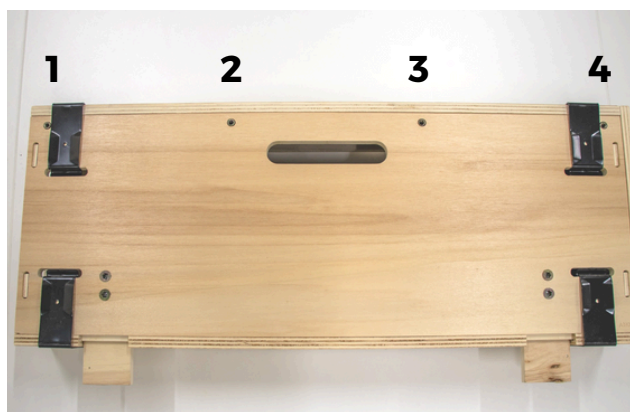

3. Using a star screwdriver, fix the 4 vehicle securing straps.

2 outside the small box and two outside the kitchen box.

Refer to the position of your vehicle anchors to find out the best place to attach them.

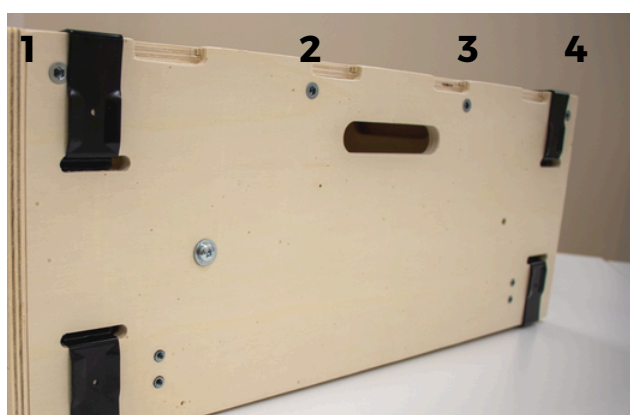

3.1 Using a star screwdriver, fix the 2 fastening straps to the boxes. One on the inside of the small box and one on the inside of the kitchen box, near the facades.





Using a star screwdriver, fix the small box with the connecting piece.

Raise the pivoting part of the connecting piece, then screw this piece onto the rear face of the small box. You will need 7 screws and 7 washers.

Make sure that the small box is firmly attached to the connecting piece before installing it in the vehicle.



Installation in the vehicle




5. Install the small cabinet and the connecting piece in the vehicle

Then, install the kitchen unit at the right end of the connecting piece.



5.2 Using a screwdriver, secure the kitchen unit to the connecting piece. You will need 4 screws and 4 washers.

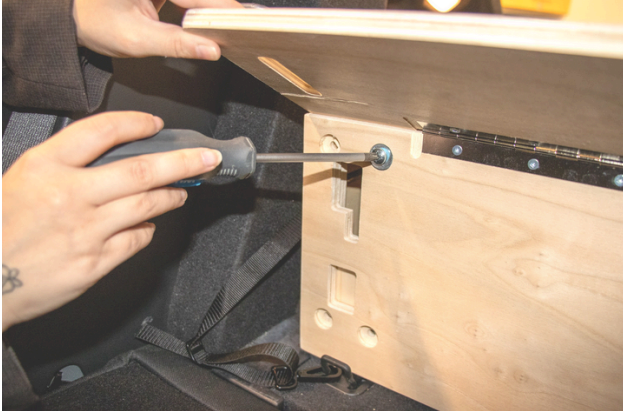


5.2 Using a star screwdriver, fix the kitchen box to the connecting piece. You will need 7 screws and 7 washers.



5.3 Fix the fastening straps to the vehicle anchors.

Check that the tailgate closes properly. If necessary, move the conversion kit a few centimetres.

Bed Module

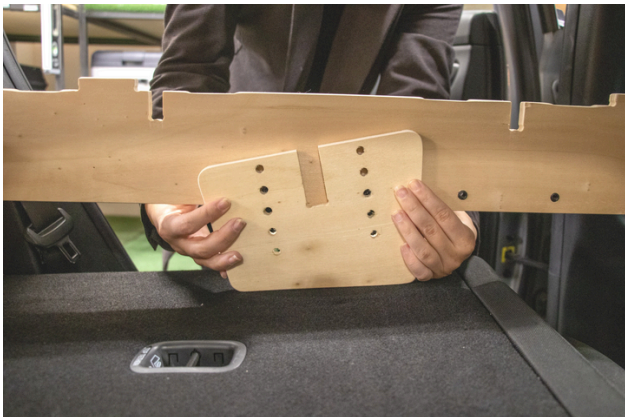


6. Insert one spar to check the height to which to screw the legs.



6.1 To do so, raise the pivoting part of the connecting piece and fit the toothed part of the spar into the long slot of the connecting piece.

Be delicate during this step to not force the hinges.

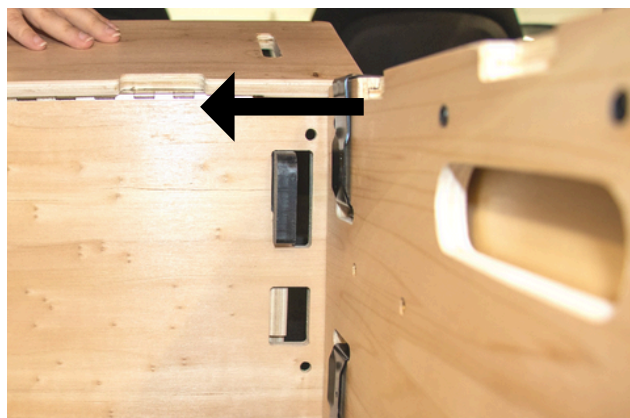

6.2 Move the spar laterally in the smallest slot so as to lock the spar.



6.3 Using a star screwdriver, install and adjust the height of the bed module legs.

When adjusting your legs, make sure they all have support on the seats and that the bed is level.



Repeat these steps for the four spars.



6.4 Fit the notches of the beams into the moving part of the connecting piece.



7. Lift the pivoting part of the bed module connecting piece and fit one crosspiece.



7.1 Insert the second crosspiece into the second notch in the side members. Leave the notches near the seats free.



7.2 Fit the four crosspieces into the notches of the side members. Two at the end of the bed, near the seats and two near the connecting piece.



8. Make sure that the bed module and the boxes are straight. Readjust the legs if needed.



9. Install the panels making up the bed base. To do this, install the panels in the notches of the spars.



9.1 Insert the panels so that they fit into each other.



Make sure to place the panels with the hooks toward the kitchen. The widened bed platform therefore above the seats.



10. Install the kitchen central panel and the kitchen box panel.

Your kit is now installed.

All you have left to do is install your mattress!

If your module gives off road noise, it is incorrectly installed. Then review each step.


Installation steps of the SOLO Camping kit

Repeat steps 1 to 6



7. Insert 2 spars. To do so, raise the pivoting part of the bed module connecting piece.


Be delicate during this step to not force the hinges.

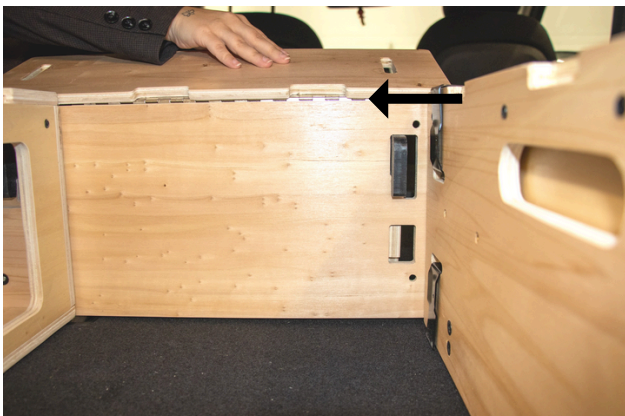

7.1 Fit the toothed part of the spar into the long slot of the connecting piece. Move the spar laterally in the smallest slot so as to lock the spar.



7.2 Fit the notches of the spars into the moving part of the connecting piece.

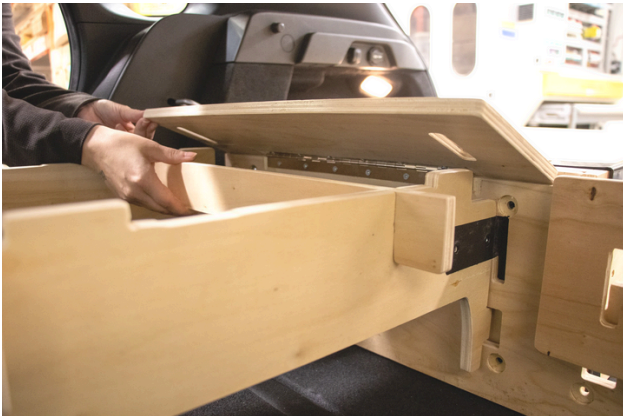

8. Lift the pivoting part of the bed module connecting piece and fit a crosspiece.



8.1 Fit the three other crosspieces into the notches of the side members.



9. Make sure that the bed module and the boxes are straight. Readjust the legs if needed.



10. Install the 2 panels making up the bed base. To do this install the first panel in the notches of the spars.



10.1 Insert the second panel so that it fits under the first one.



10.2 Install the kitchen central panel and the kitchen box panel.

You can then raise your bench.

Opening the drawers



The kitchen box has a system of locks, preventing it from opening when driving. To open it, insert your finger in the hole, press on the black plastic piece on the left while pulling the drawer by the handle. Be sure to remove your finger when opening the drawer.

Installing the sink



To install the sink, take the sink shelf and align it with the notches in the drawer.



Take the legs of the shelf and align them with the notches provided for this purpose, around the drawer slides.



Install the sink into the hole in the shelf and you're done.

Recommended Use

1. Recommended maximum weight of 220 pounds per person.
2. Do not exceed the load capacity of the drawers (100lbs).
3. Sit on the mattress and not directly on the module.
4. When installed in the vehicle, ensure that the kit is well fixed with the straps, to secure the module.
5. When uninstalling the module, we recommend disassembling the kitchen unit from the connecting piece before removing it from the vehicle.
6. Always remove your finger from the drawer lock system before opening the drawer.
7. Do not leave your fingers in the openings of the hatches while opening or closing the drawers.
8. When storing, keep in a dry, flat place.
9. If you adjust your legs, make sure they all have support in the vehicle and the bed is level.

Warranty

Visit our website roadloft.com for any warranty related questions.

Your review helps us

If you would like to help us, we would very much appreciate your review on our Facebook page and our Google page. Thanks in advance! Your opinion matters a lot to us.

You have questions? Don't hesitate to contact us. It will be a pleasure to discuss with you and help you. We are happy to contribute to your next adventures!

See you on the road!



Join the RoadLofters community : [Roadloft Van Life](#)

Our address:

695 rue du carbone, suite 300, Québec, QC, Canada, G2N 2K7

Email: info@roadloft.com

Phone: 1 (418) 849-3087