



ROADLOFT



USER GUIDE AND INSTALLATION

CAMPER CONVERSION KIT
FOR PICKUP TRUCK

USER GUIDE AND INSTALLATION

PICK-UP TRUCK CAMPER KIT

<u>Welcome in the RoadLoft community</u>	3
<u>List of pieces</u>	4
<u>List of tools required for installation</u>	7
<u>Installation of the conversion kit in the vehicle</u>	7
<u>Use of the integrated tables</u>	18
<u>Secure your kit</u>	19
<u>Use of the outside table</u>	19
<u>Recommended use of your kit</u>	22
<u>Maintenance</u>	22
<u>Warranty</u>	23
<u>Your feedback matters</u>	23

Your first installation? Take the time to familiarize yourself with the steps to ensure correct use. We guarantee that you will quickly become an expert in the installation of your RoadLoft conversion kit. For any questions, contact us :

Email : info@roadloft.com

Tel : (418) 849-3087

WELCOME TO THE ROADLOFT COMMUNITY

Congratulations new RoadLifter !
Your new RoadLoft kit, designed by nature and
adventure enthusiasts, will keep you inspired
even in nature.

Following your installation, you will be able to
join the Roadlofters sharing group, an initiative
of the clients and entirely managed by them!



Inspired by nature

Discover new landscapes, be in
contact with nature and travel
in complete freedom

Our conviction? Living in the moment and discovering
nature contribute to well-being. At the company's core
resides one goal; get you into nature while respecting it.


This is why your set is designed from quality eco-
responsible materials, made with meticulousness by our
team of experts to accompany you on all your adventures.
We sincerely hope that your RoadLoft set will bring you
more spontaneity and make you travel in complete
freedom.

Now it's up to you to let yourself be inspired by nature
while respecting it!




LIST OF PIECES


2 corner storage units - left and right (A and C)

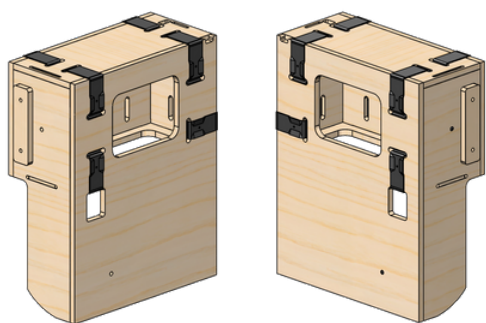


1 left side storage unit with table (B)

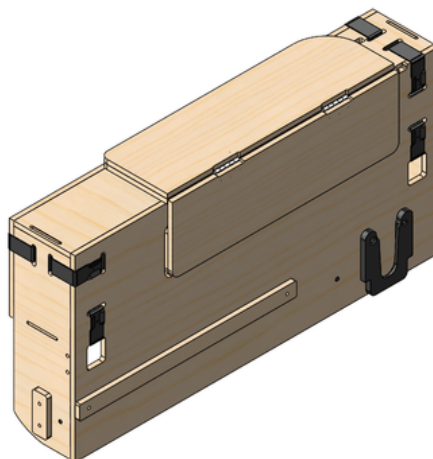


1 right side storage unit with table (L-shaped) (D)

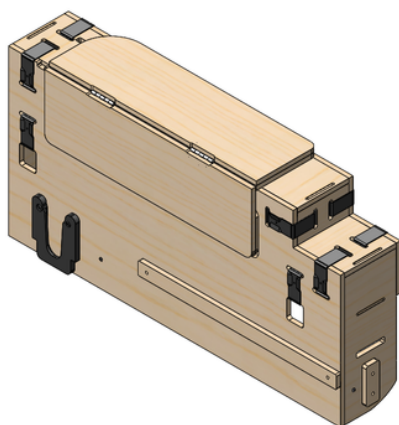

1 left bed unit (E)

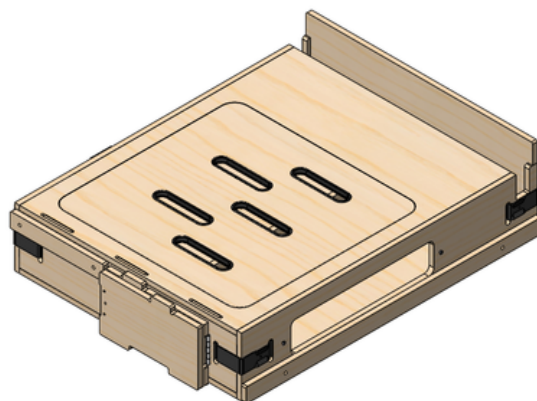

1 right bed unit (F)

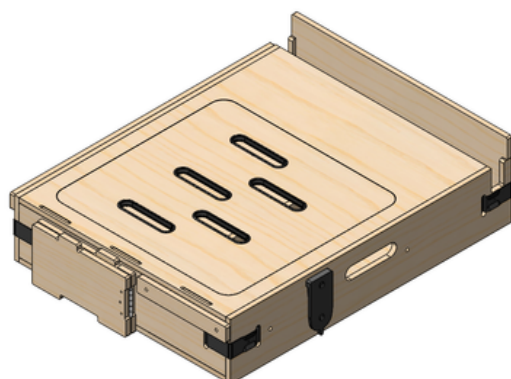


1 kitchen drawer - burner (G)







1 kitchen storage drawer (H)

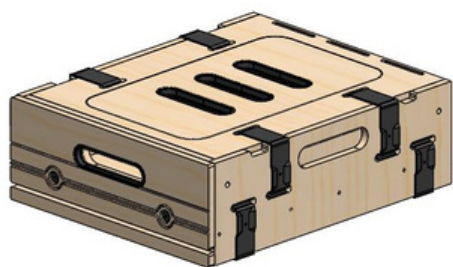

1 kitchen unit with drawer and sink (I)

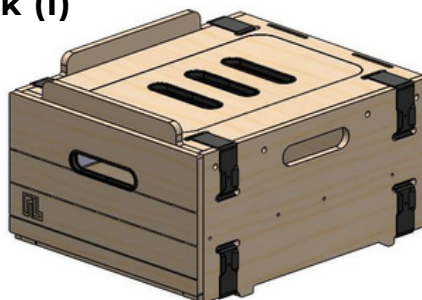

2 folding bed panels

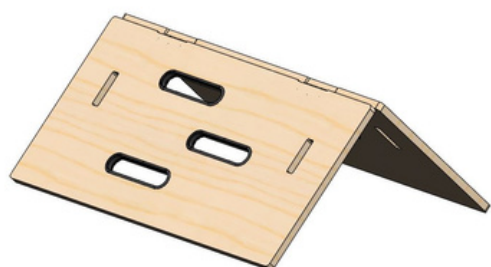


2 removable storage units




1 panel to complete the bed's foot





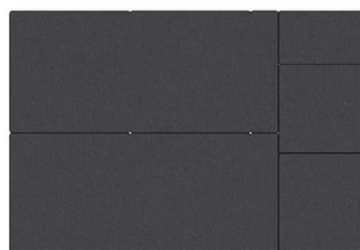

1 sectional mattress

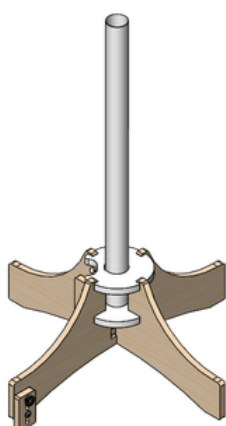

1 pole and table feet



<u>Identification</u>	<u>Hardware</u>	<u>Images</u>	<u>Quantity</u>
X	1/2" long butterfly screw		6
Y	1" long butterfly screw		8
Z	1 3/8" long butterfly screw		2
W	Cam-buckle tie-down strap.		2

First assembly of the modules

Upon receiving your conversion kit, an initial assembly is necessary to create your modules. Please refer to the assembly guide.

LIST OF REQUIRED TOOLS

Before you begin, you will need:

- Your two hands or a 3/16" Allen key.

INSTALLATION STEPS


Installation of the units in the bed.



OR



1. Insert unit A (left corner storage) at the back of the bed. Depending on your vehicle model, it may be different.

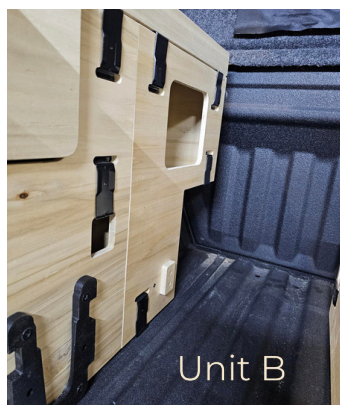

2. Install unit B (left side storage).




Get into nature, while respecting it



2.1 To do this, insert the "male" part of unit A into the "female" part of unit B.



2.2 Secure the two units together with a 1" long butterfly screw (screw Y).

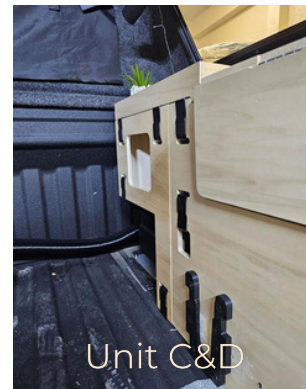

3. Repeat the same steps for the right side.

3.1 Insert unit C (right corner storage) at the back of the bed.

3.2 Install unit D (right side storage unit in an "L" shape).




3.2 To do this, insert the "male" part of unit C into the "female" part of unit D.



3.3 Secure the two units with a 1" long butterfly screw (screw Y).



4. Install the left bed unit E (the one with the bed support on the right) by inserting the black plastic piece from box E into the black plastic "U" of box B.

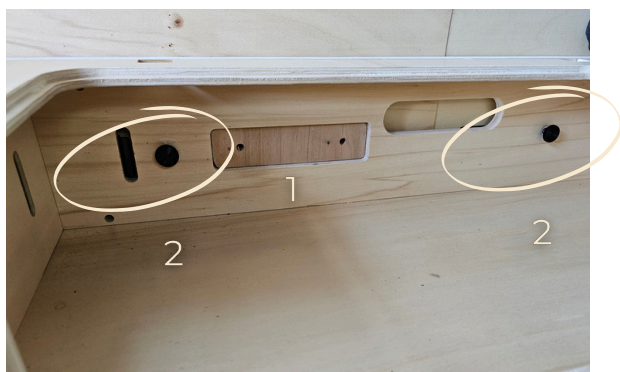

4.1 Insert the "male" side of unit B into unit E.

4.2 Secure with 2 butterfly screws that are 1" long (screws Y).



5. Install the right bed unit F (the one with the bed support on the left) by inserting the black plastic piece from box F into the black plastic "U" of box D..



5.1 Insert the "male" side of unit D into unit F.

5.2 Secure with 2 butterfly screws that are 1" long (screws Y).



6. Fix the two bed units together.

6.1 Align the two bed units E and F.



6.2 Secure with 2 butterfly screws that are 1 3/8" long (screws Z).




Here's what the result of the previous steps looks like.

Preparation of the kitchen units



7. Secure the tie-down straps on the two kitchen units G and H with 1/2" butterfly screws (screws X).

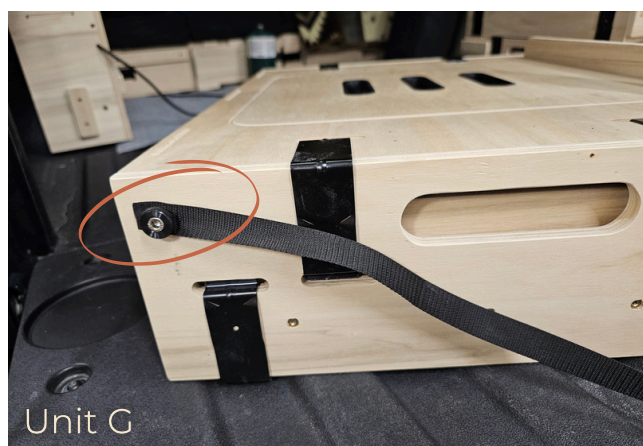

Installation of the kitchen units



8. Install the burner kitchen drawer G on the left.



8.1 To do this, insert the "male" side of unit B into the "female" side of unit G.

8.2 Secure with a 1" long butterfly screw (screw Y).



9. Install the storage kitchen drawer H on the right.



9.1 To do this, insert the "male" side of unit D into the "female" side of unit H.

9.2 Secure with a 1" long butterfly screw (screw Y).



10. Install the metal U between the kitchen units G and H.



10.1 Secure the metal U in units G and H with 4 butterfly screws that are 1/2" long (screws X).




Here's what the result of the previous steps looks like.




11. Install the panel on units E, F, G and H.

Installation of the elastic strap

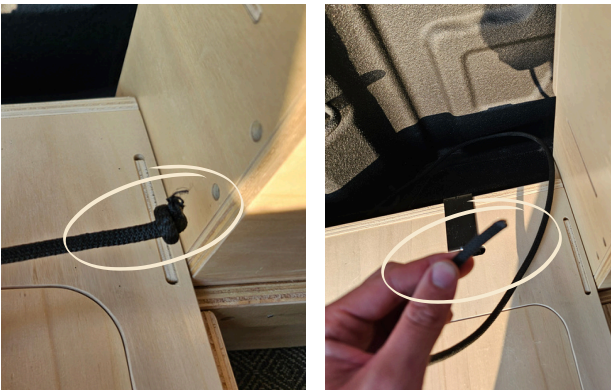


12. Make sure there is one end with a knot and one end without a knot.

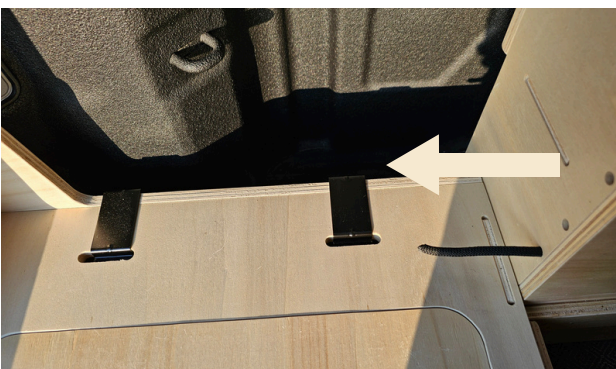


12.1 Insert the end of the unknotted rope into the bottom hole of box B from the inside.

12.2 Ensure that the knot is positioned inside the box.

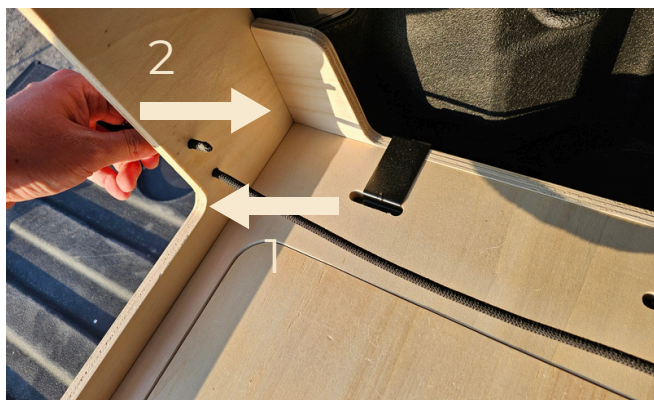


13. Pass the end without a knot through the bottom hole from the back of the front of box G and then bring it back through the front of the façade.

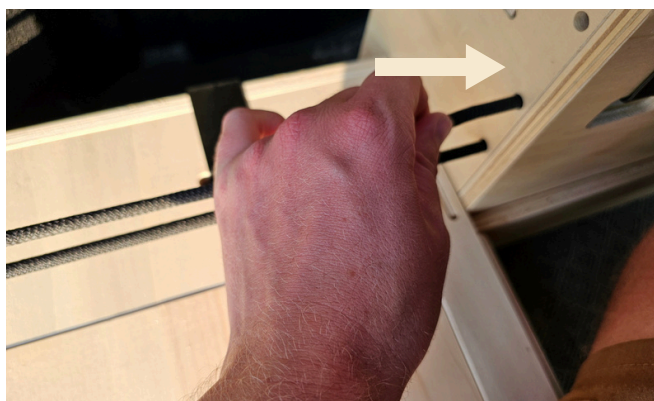

14. Pass the end without a knot into box B so that it ends up at the back.




15. Tie a knot to secure the elastic and prevent it from coming out.

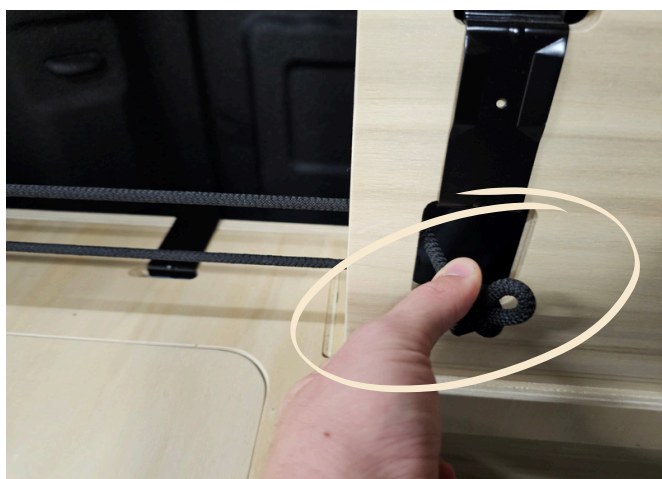

16. Tie a knot to secure the elastic and prevent it from slipping out.

Installation of the foldable bed panels in backrest mode

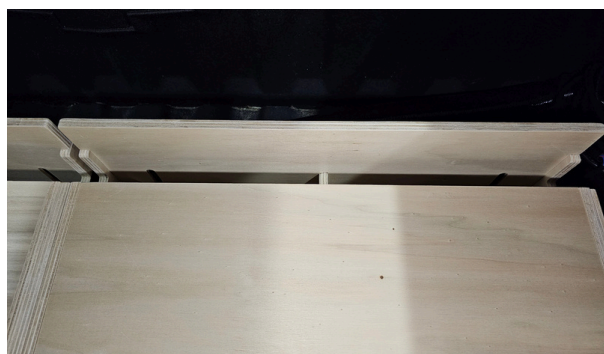

17. Fold the bed panels and insert them into the slot behind boxes E and F.



Here is the positioning of the foldable bed panels in backrest mode.

Installation of the removable storage boxes



18. Attach the supports of the removable storage box to boxes A and B. Repeat for boxes C and D.

Installation of unit I (removable sink)



19. Insert the supports of box I into the upper part of box H.




You will notice that the unit I is removable. You can move it to your picnic table to have everything within reach, or place it inside your vehicle's cabin to set up the bed across its full width.

Installation in bed mode



20. Unfold the bed supports.

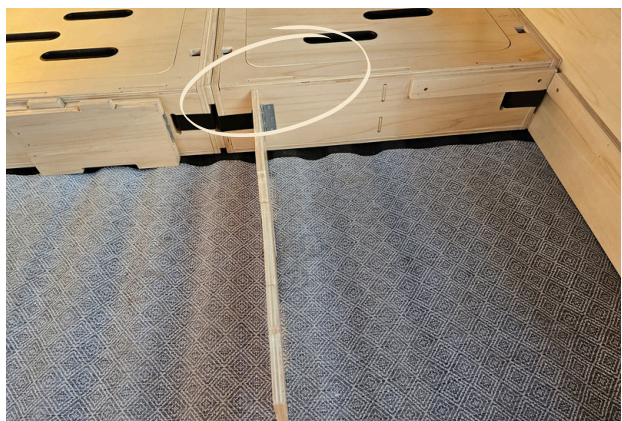

21. Extend the bed supports perpendicular to the bed box.



22. Take the foldable bed panel and unfold it to create the bed surface.



23. Adjust the position of the bed support so that the heads fit perfectly into the holes of the foldable bed panel.

Use of the integrated tables



24. Lift the flap that covers the cutout of the side storage box.



25. Rotate the table to support the flap via the box.




26. Move the table closer or farther away according to your comfort.

Secure the kit in your vehicle



27. Secure cabinets G and H using the straps previously attached to the cabinet, fastening them to the vehicle's anchor points.

Use of the outside table

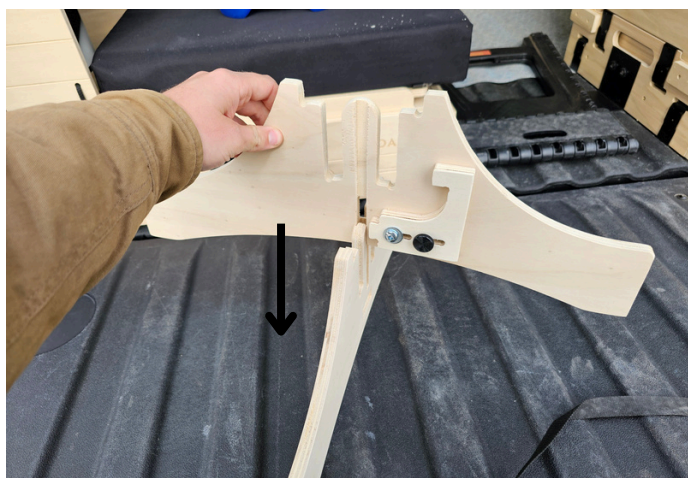

28. Insert the part with the hook latch into the other part from the top.




This is how it should look like.



29. Insert the white ring with the larger notch.



30. Insert the second white ring, which will remain on top.

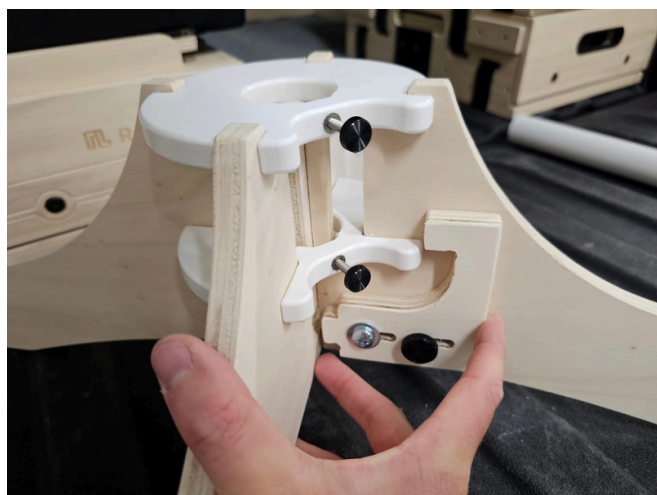

31. Secure the bottom white ring by sliding the lock into the slot, ensuring that the top hook holds the white ring in place.






32. Insert the pole.



33. Secure the pole with screws,

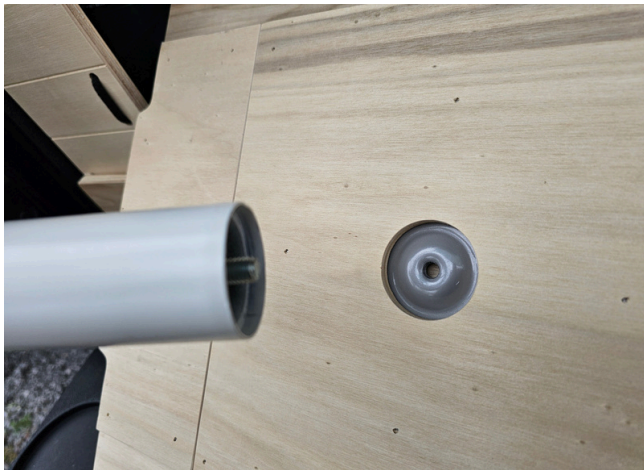

34. Screw the table onto the pole.



This is how it should look like.

RECOMMENDED USE

1. Maximum recommended weight of 220 pounds per person.
2. Always close the drawers before sitting on a module.
3. Do not exceed the load capacity of the drawers (100 pounds).
4. Sit on the mattress, not directly on a module.
5. Never drive with your view obstructed by curtains.
6. When uninstalling the kit, unscrew the compartments before removing them.
7. Keep your fingers clear of the hatch openings when opening or closing the drawers.
8. Do not lean on the table.
9. Allow the mattress to regain its shape for 24 hours by leaving the zipper open. If it hasn't regained its shape after 48 hours, remove it from the cover.
10. Always secure kitchen compartments G and H to the vehicle.

MAINTENANCE

Conversion kit: Store in a dry place. Store flat.

Mattress cover: Machine wash on a delicate cycle in cold water. Hang to dry. Re-waterproof after each wash.

WARRANTY

Visit our website Roadloft.com for any question related to the warranty.

YOUR FEEDBACK IS IMPORTANT TO US

If you would like to help us, we would very much appreciate your feedback on our [Facebook page](#) and our [Google page](#). Thanks in advance! Your opinion is very important to us.

You have questions? Do not hesitate to contact us. It will be our pleasure to discuss with you and help you. We are happy to contribute to your next adventures! We look forward to seeing you on the road!



Join the RoadLofteurs community : [Roadloft Van Life](#)

Our address :

695 carbon street, suite 300, Quebec, Qc, Canada, G2N 2K7

Email : info@roadloft.com

Tel : (418) 849-3087