# ASSEMBLY GUIDE CAMPER CONVERSION KIT

FOR MID-SIZE PICKUP TRUCK

**(GNO)** 

ROADL


# ASSEMBLY GUIDE OF THE PICKUP TRUCK CAMPER KIT

<u>3D Visualisation</u>	3
List of Tools and Hardware	4
Pieces Identification	13
<u>Assembly Steps</u>	19
<u>User Guide</u>	44
<u>Your Feedback Matters</u>	44





## **3D Visualisation**

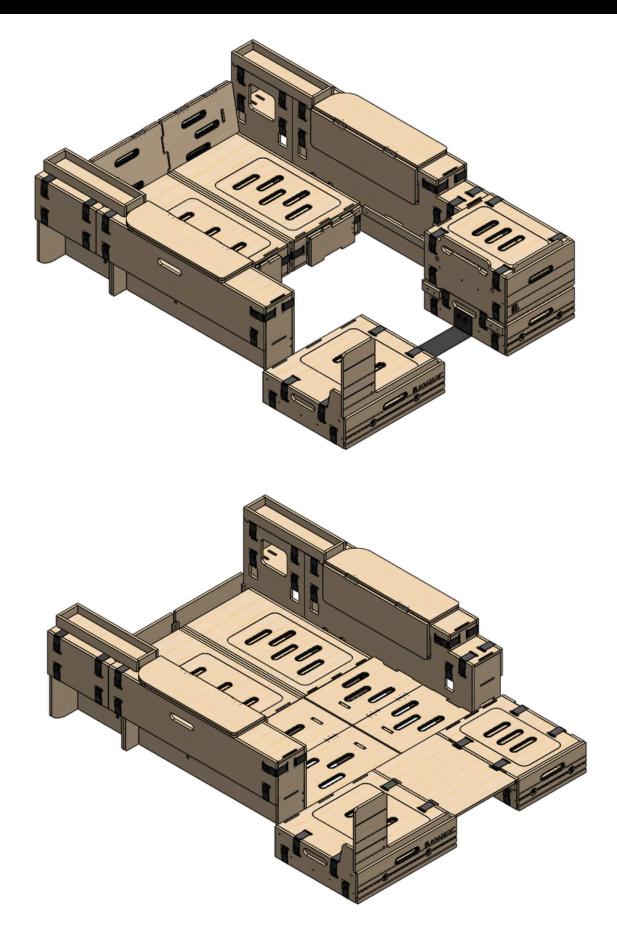



# List of recommended tools

You will need:


• 3/16" Allen wrench

#### Hardware

<u>Identification</u>	<u>Hardware</u>	<u>lmage</u>	<u>Quantity</u>
А	Clip		76
В	Facade screw		4
С	Shelf bracket	A	2
D	Table bracket	•	2
E	1" 1/2 long butterfly screw		4
F	l" long butterfly screw		2



#### Burner unit

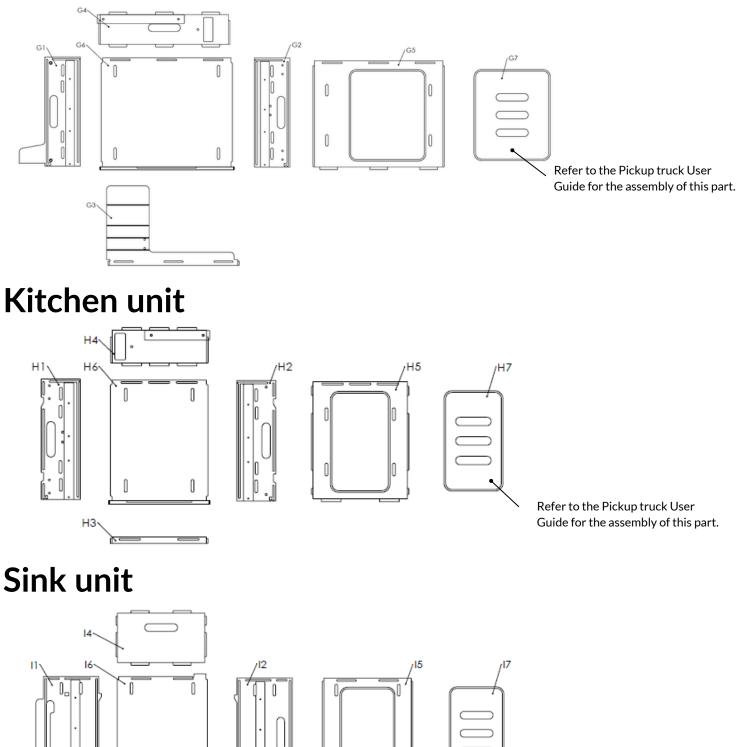

43

Refer to the Pickup truck User Guide for the assembly of this part.

0"


0

------


÷




## **Burner drawer**

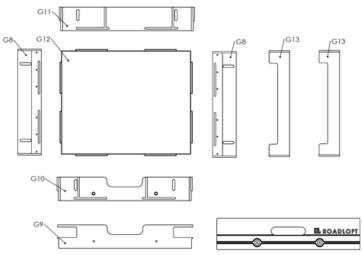

#### **Kitchen drawer**

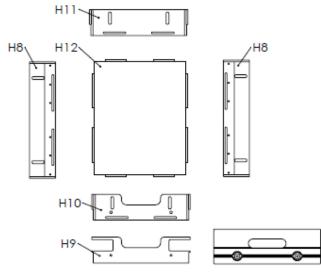


#### Sink drawer

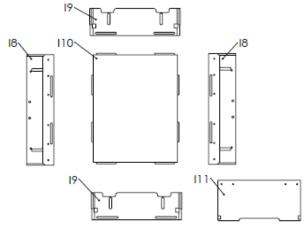





# Left rear storage unit

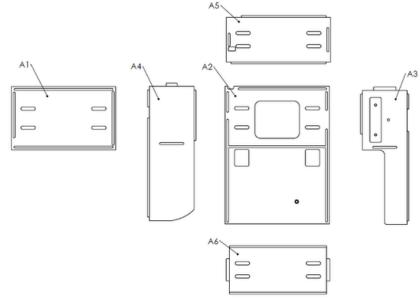

#### **Right rear storage unit**

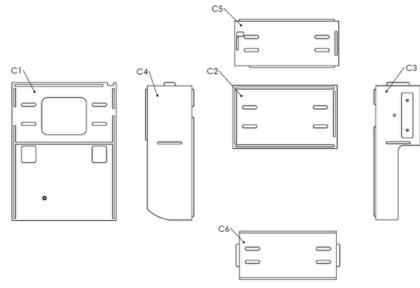


#### Removable storage unit (2X)

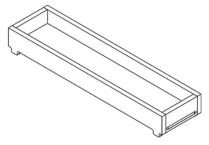





#### Left side storage unit

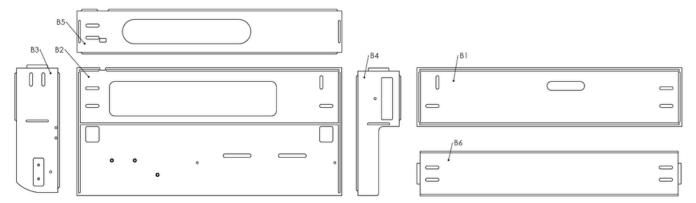

#### **Right side storage unit**

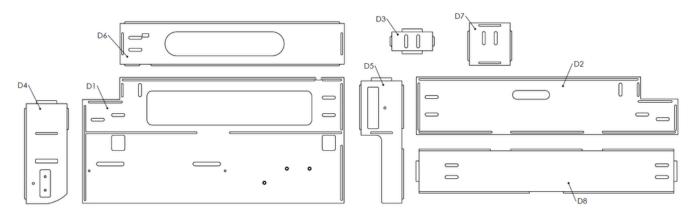


#### Swivel tales (left and right)

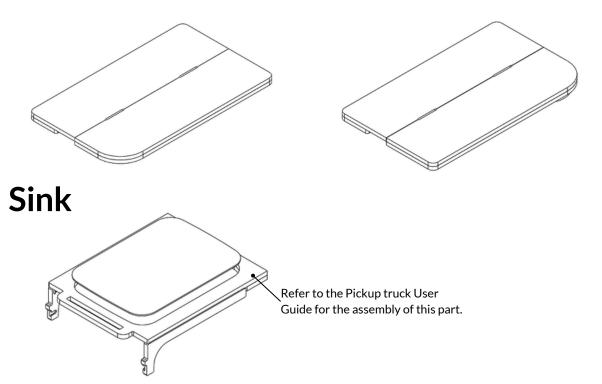



# Left bed unit

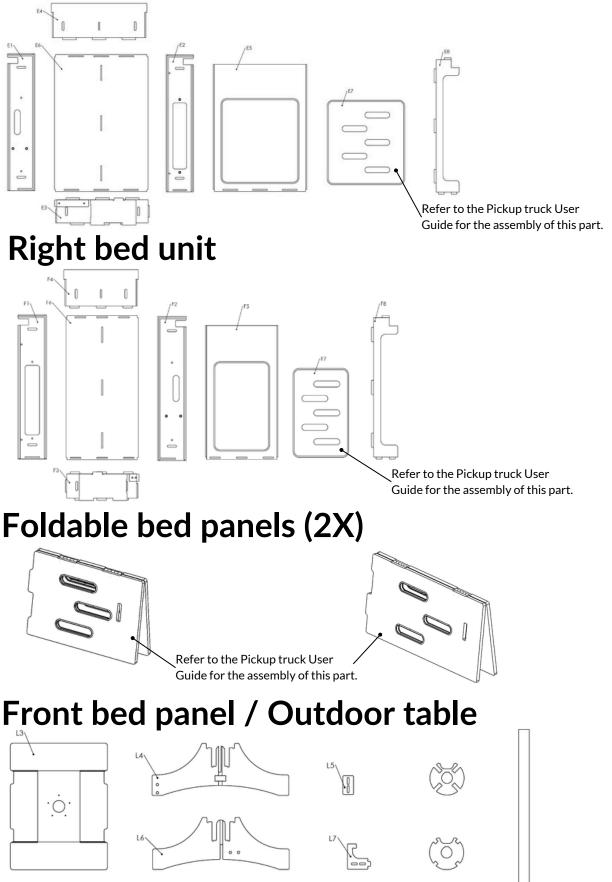





#### Assembly steps


Before starting the assembly of your kit, sort the parts based on their purpose by referring to the number engraved on each piece.


Place your parts on a clean blanket.


During assembly, make sure the pieces are aligned on the outside of the unit.

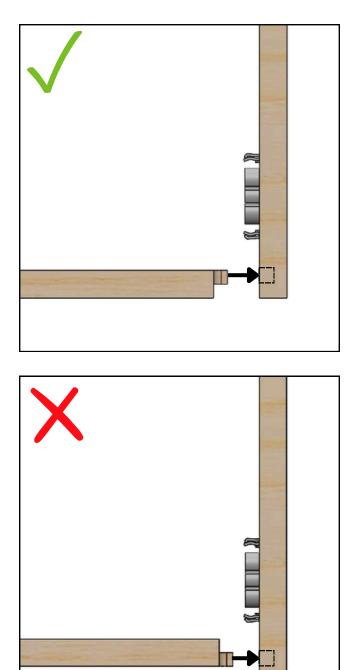


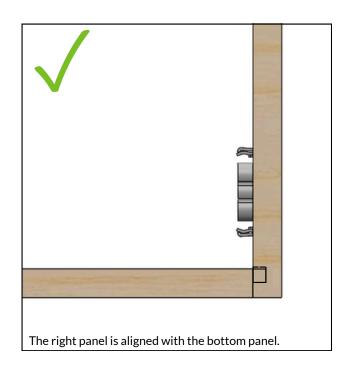


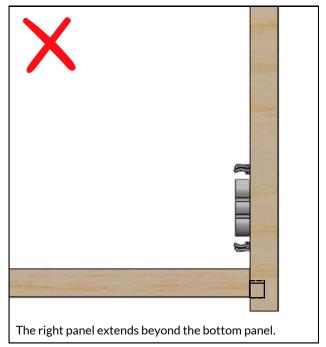


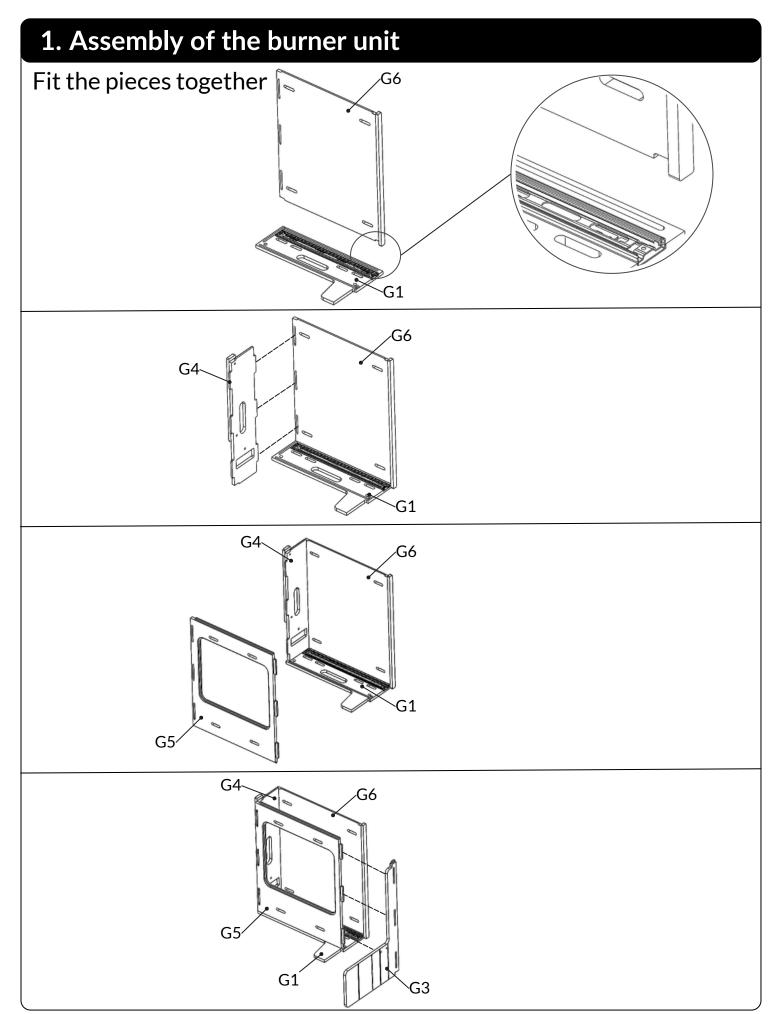


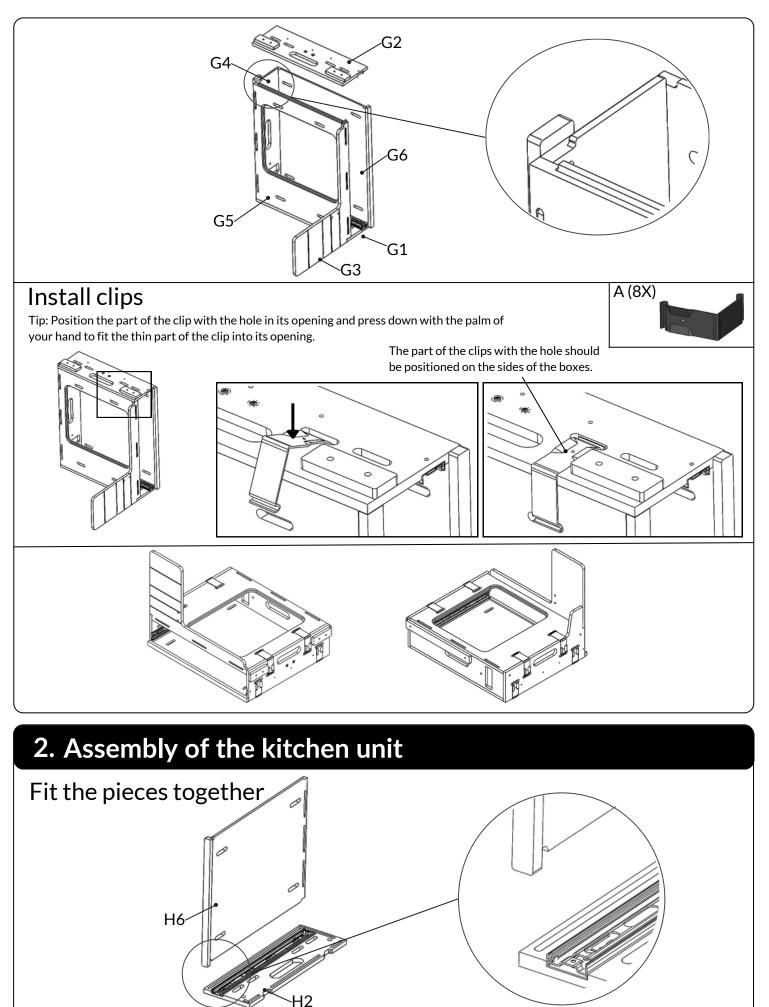

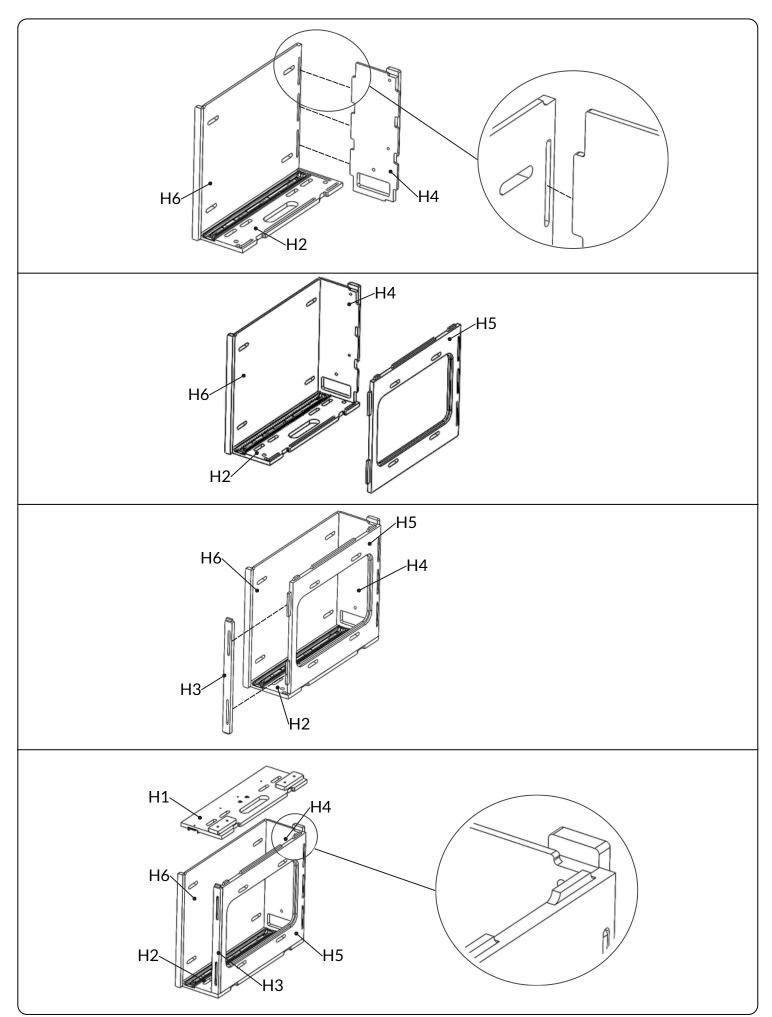


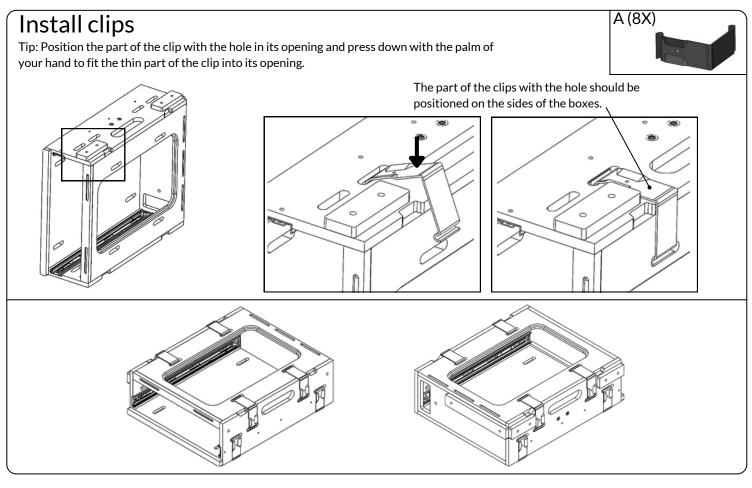


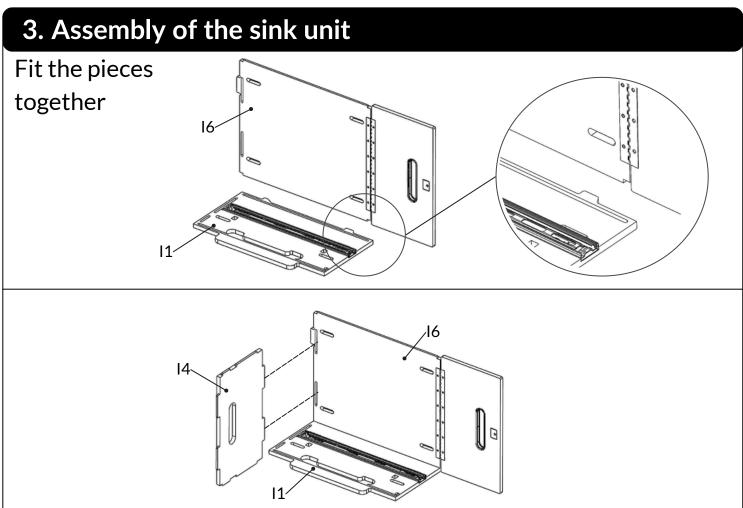


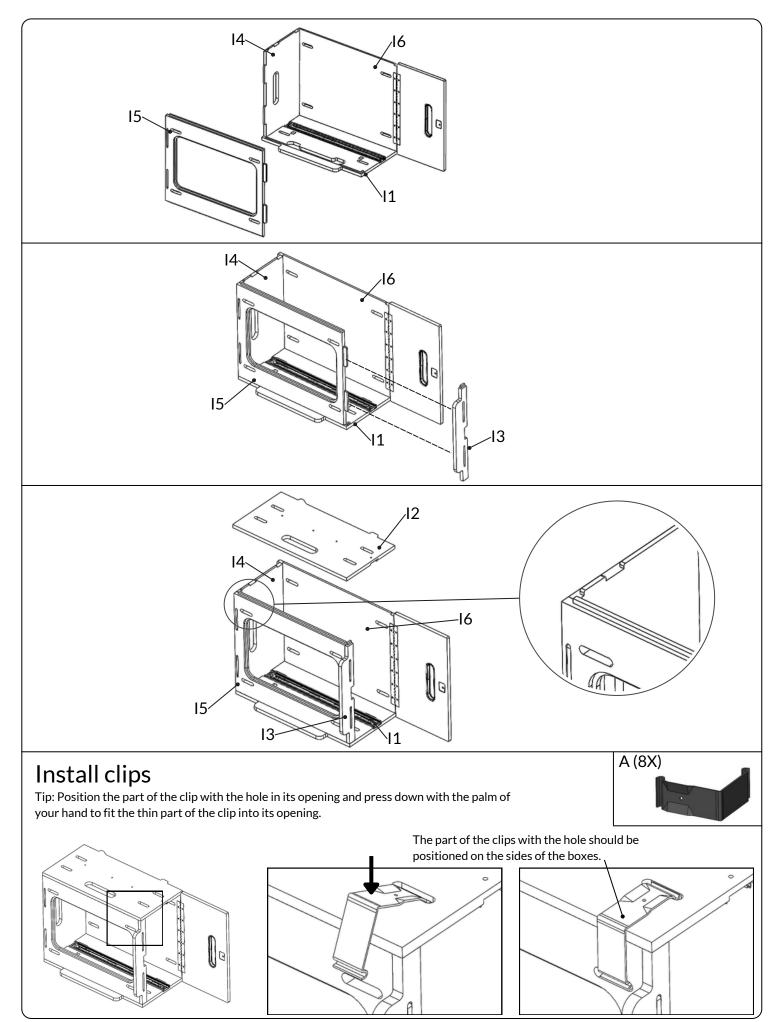




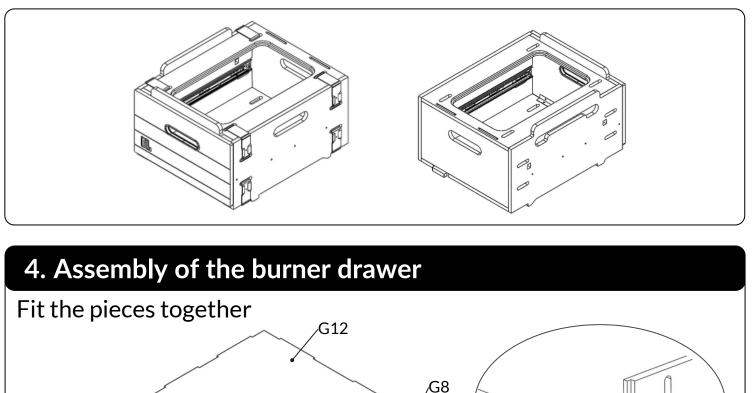


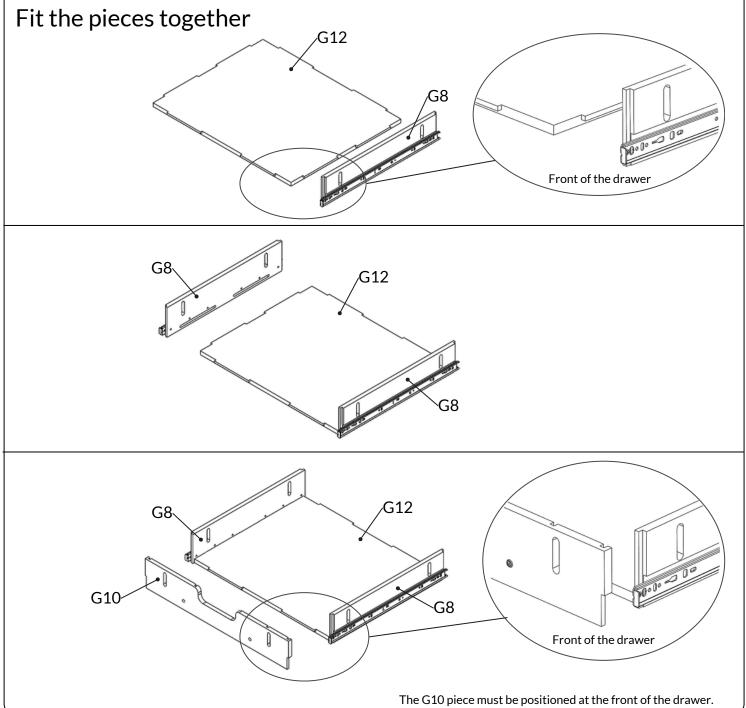


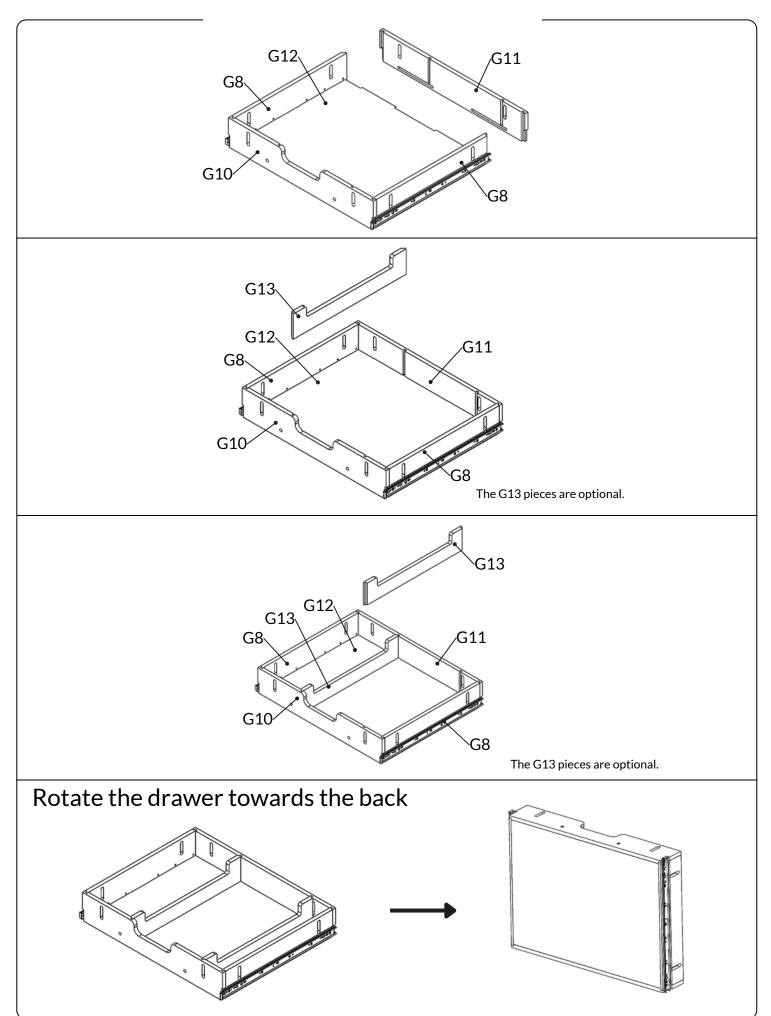

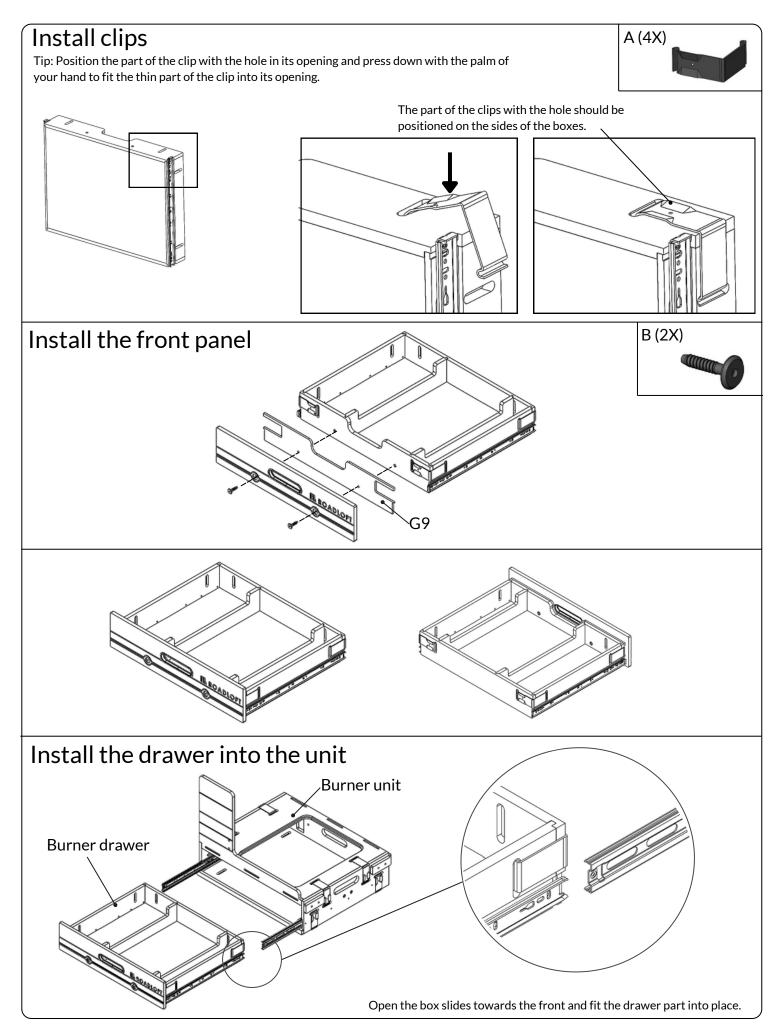





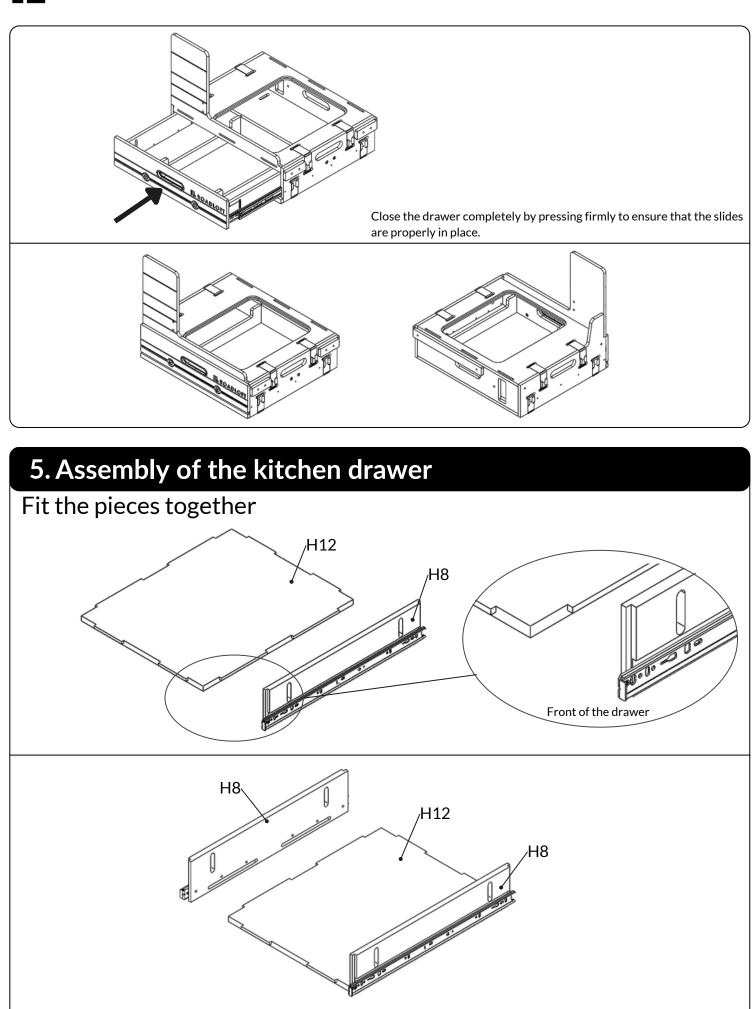

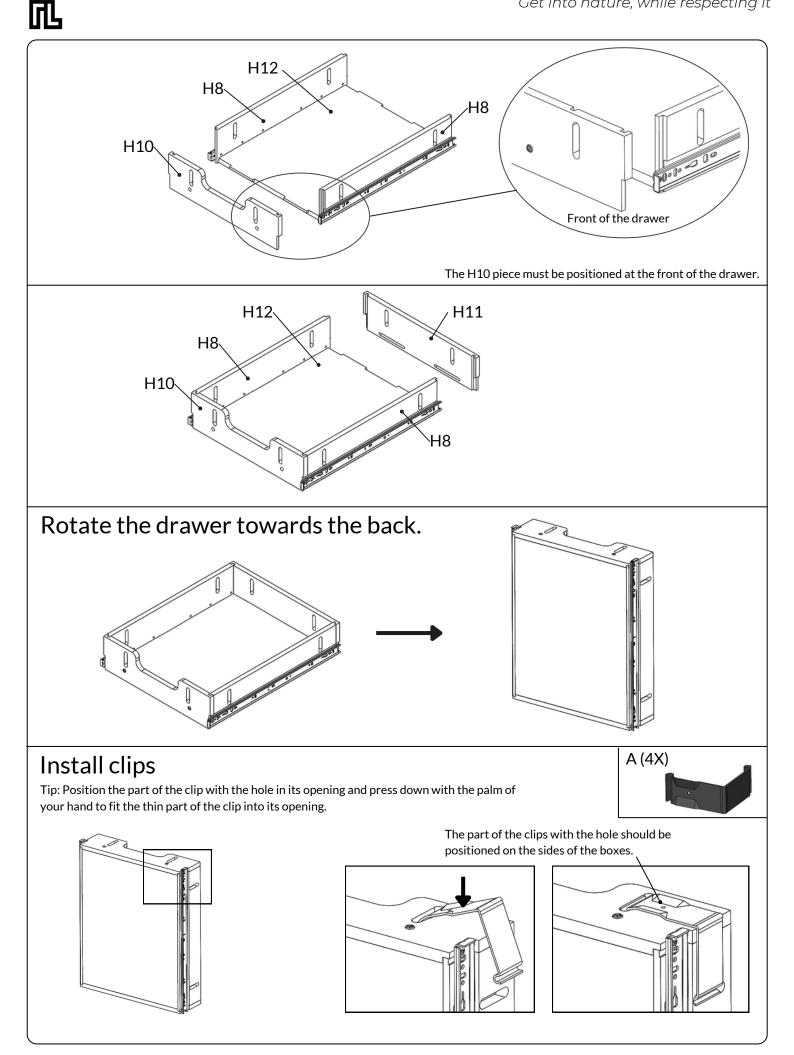





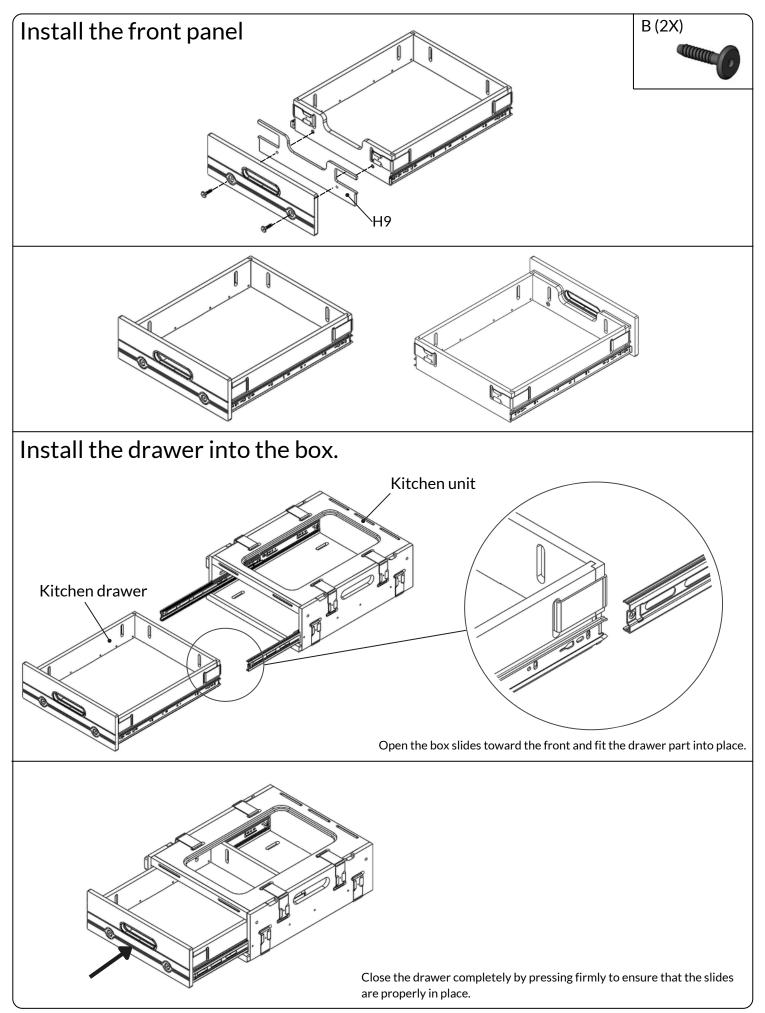


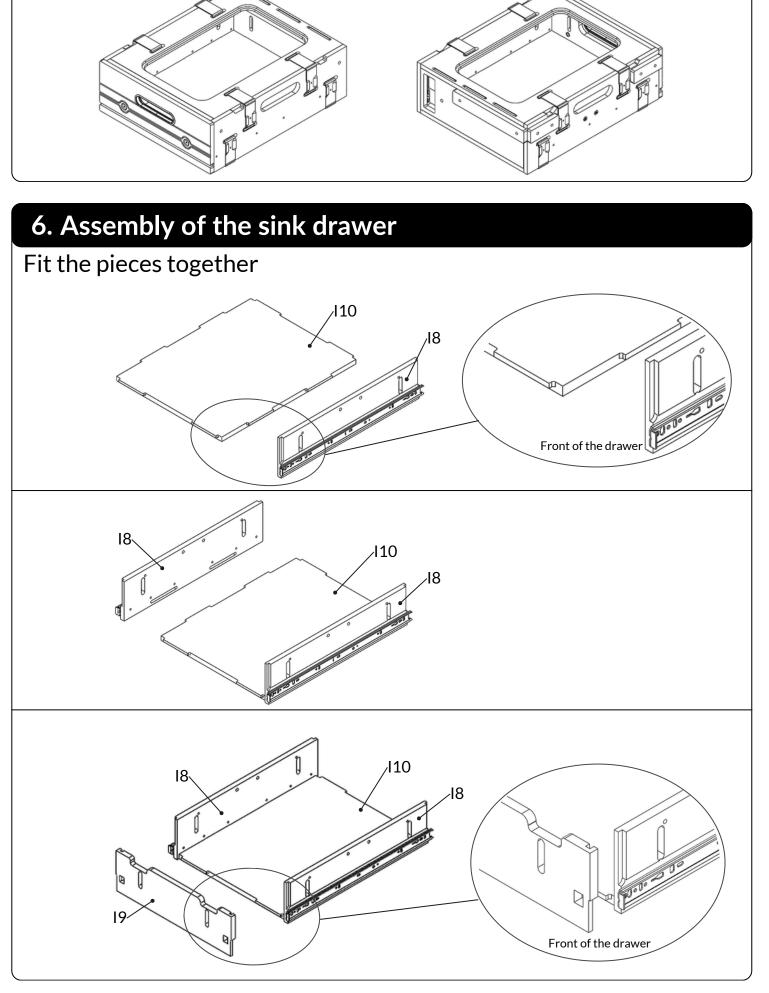





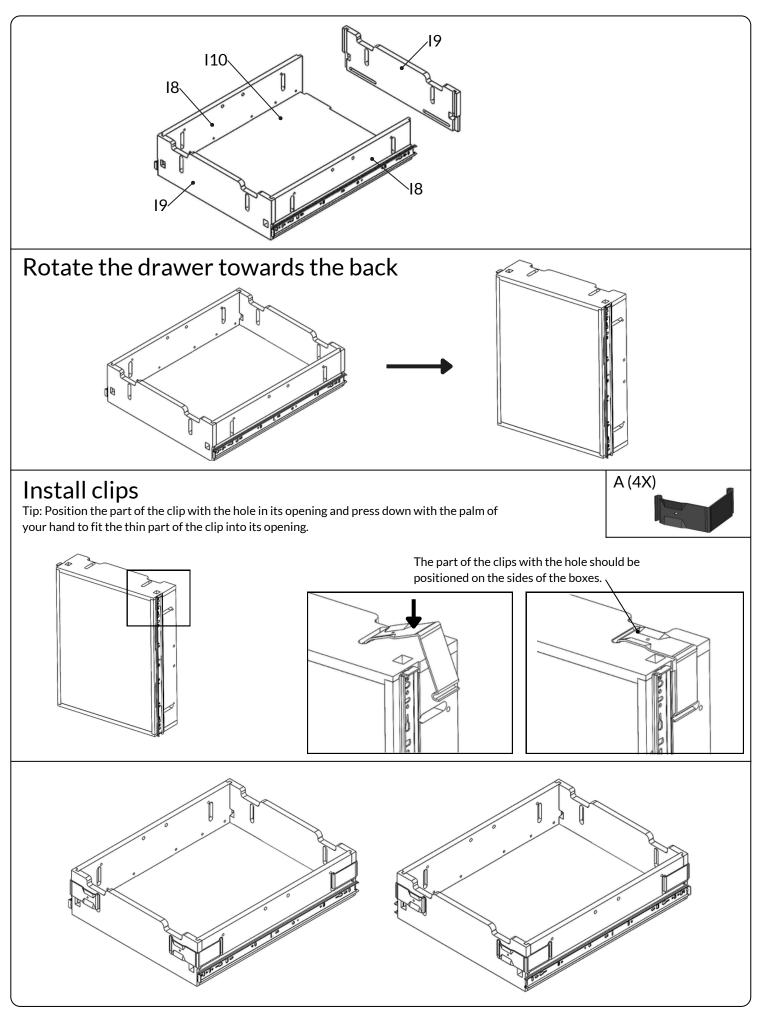

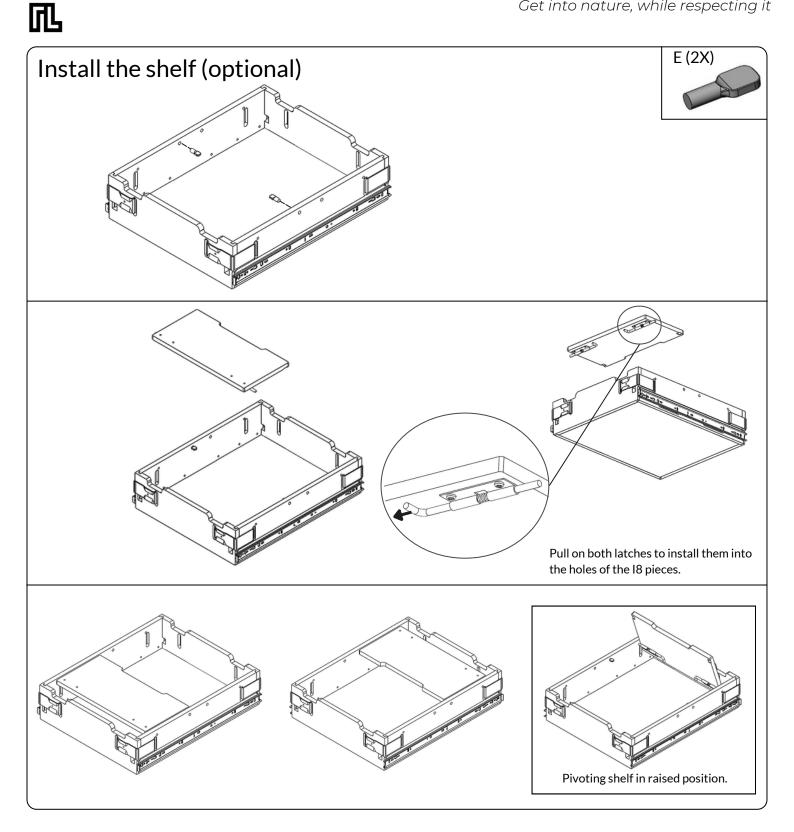


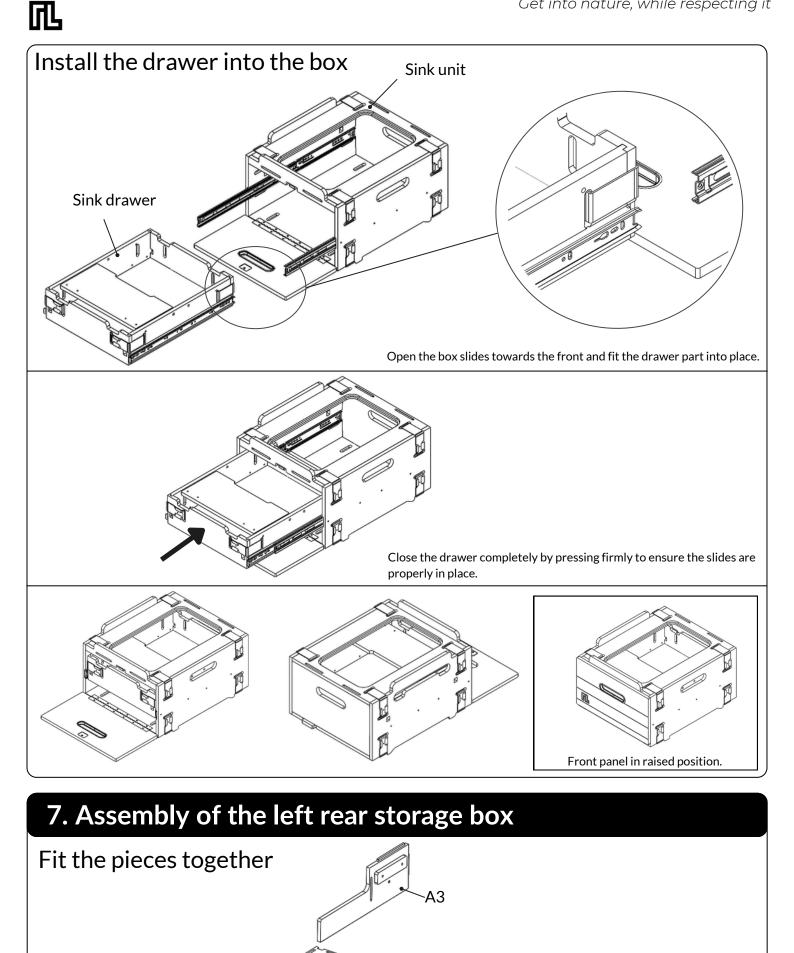


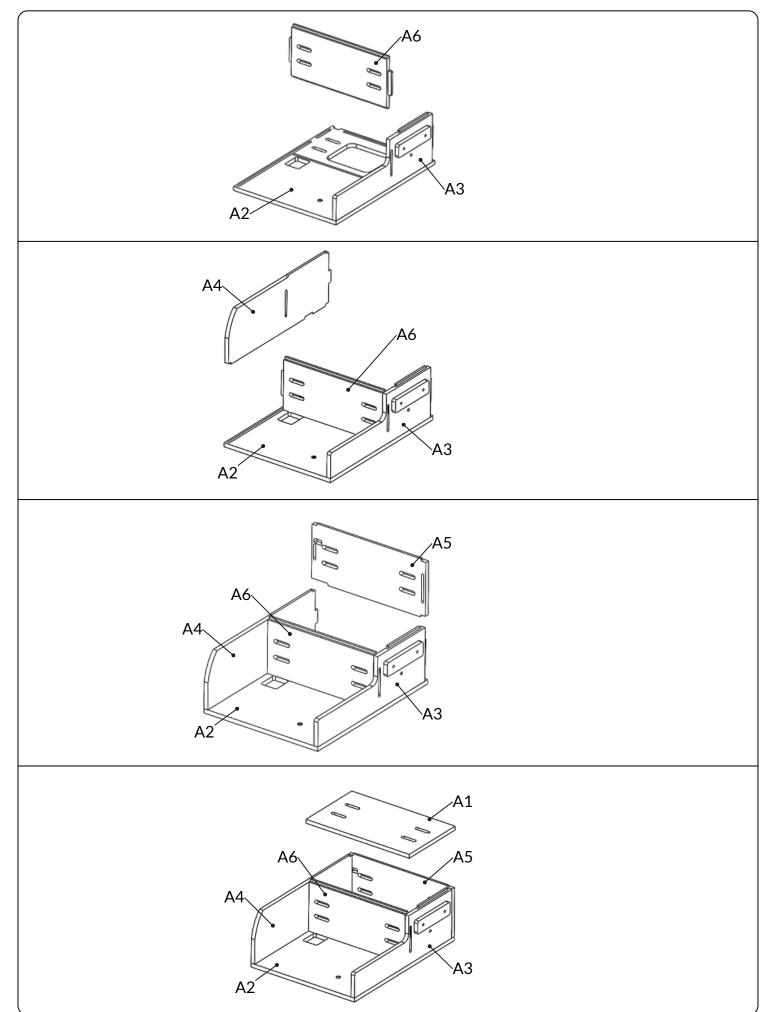


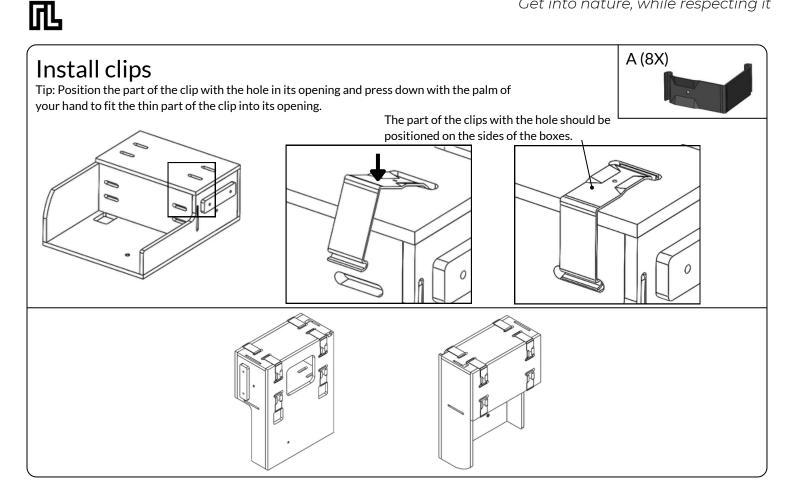


#### 8. Assembly of the right rear storage unit

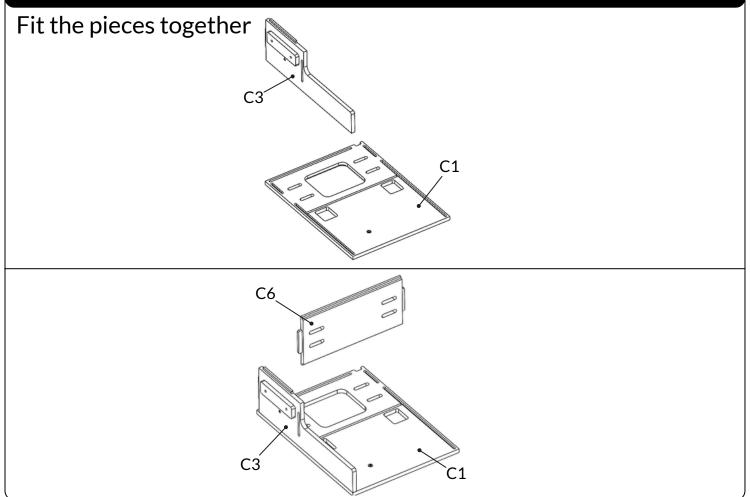

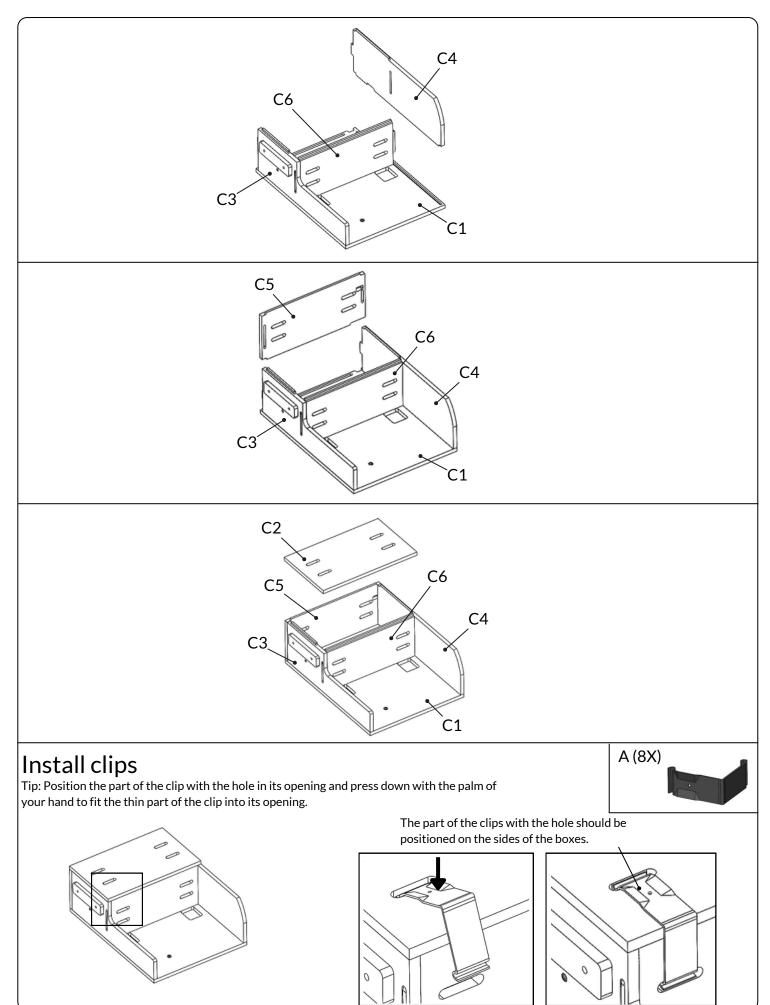


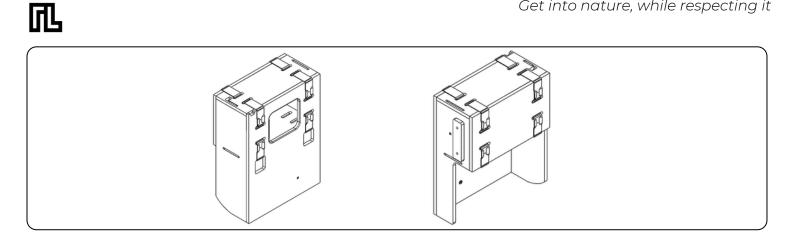



#### 9. Assembly of the left side storage unit

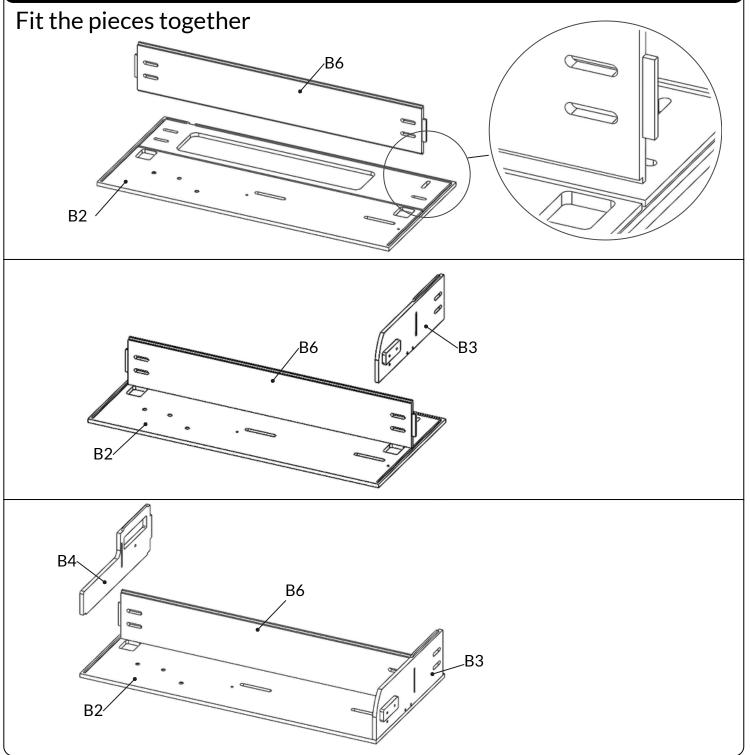




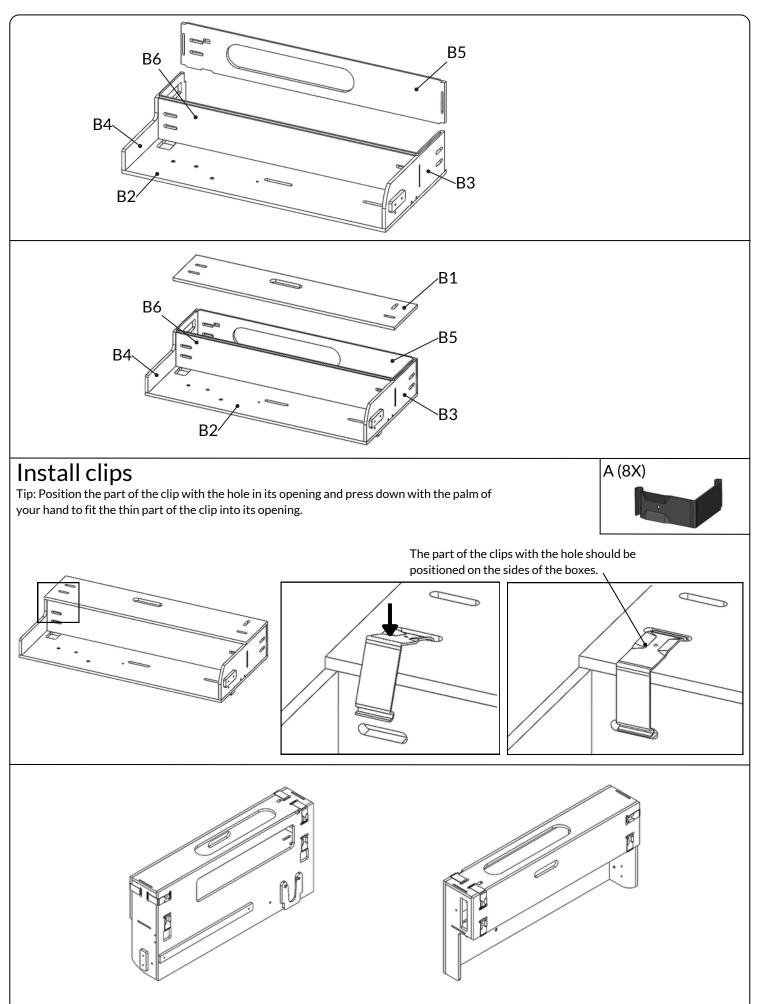


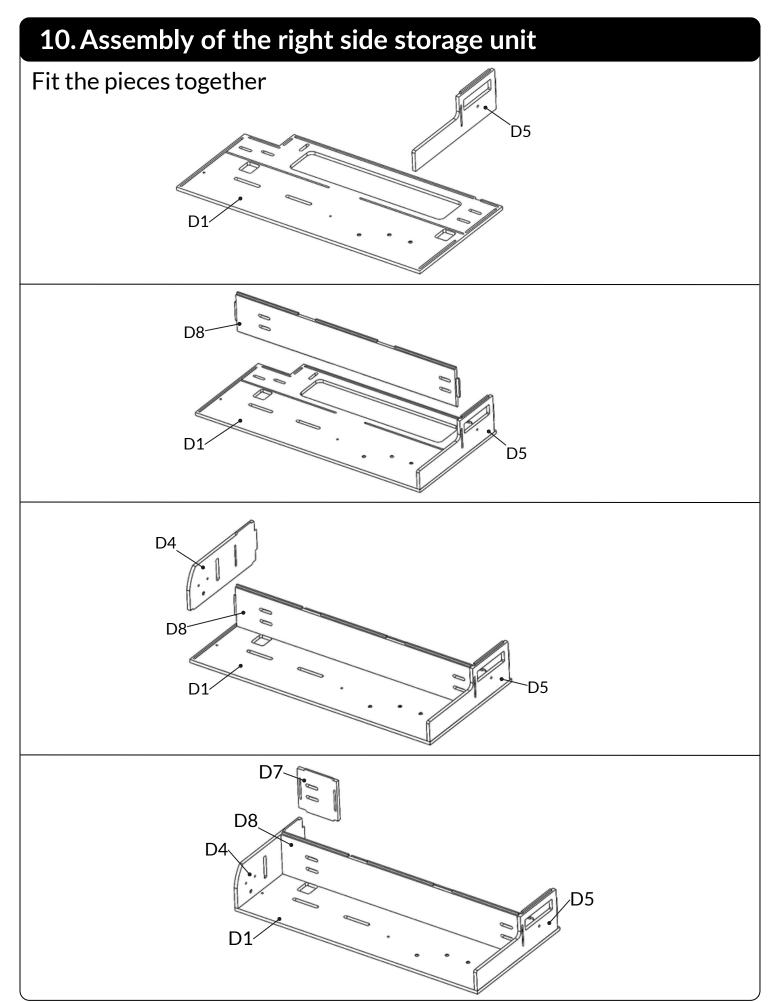


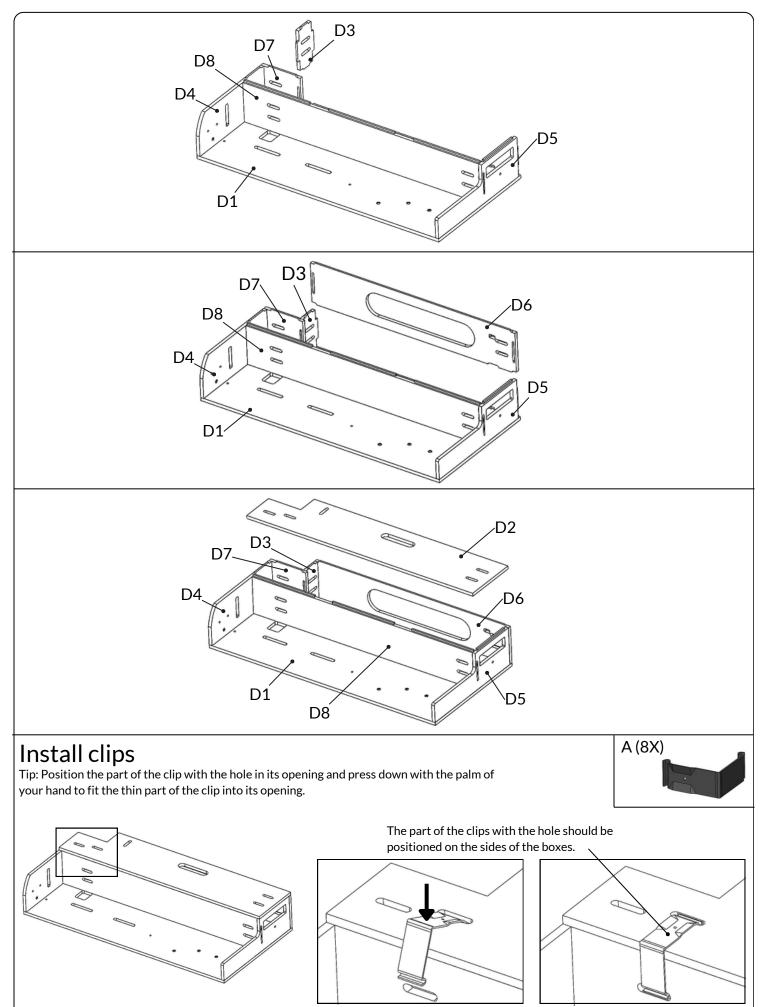


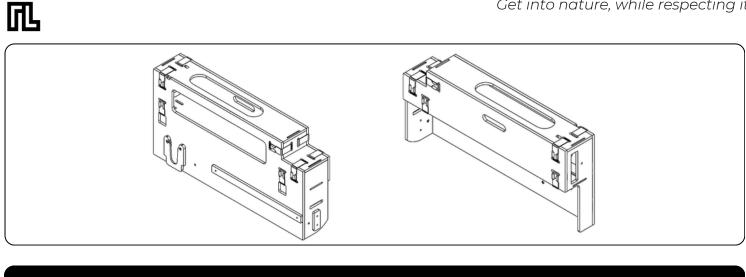



#### **11.** Assembly of the left table

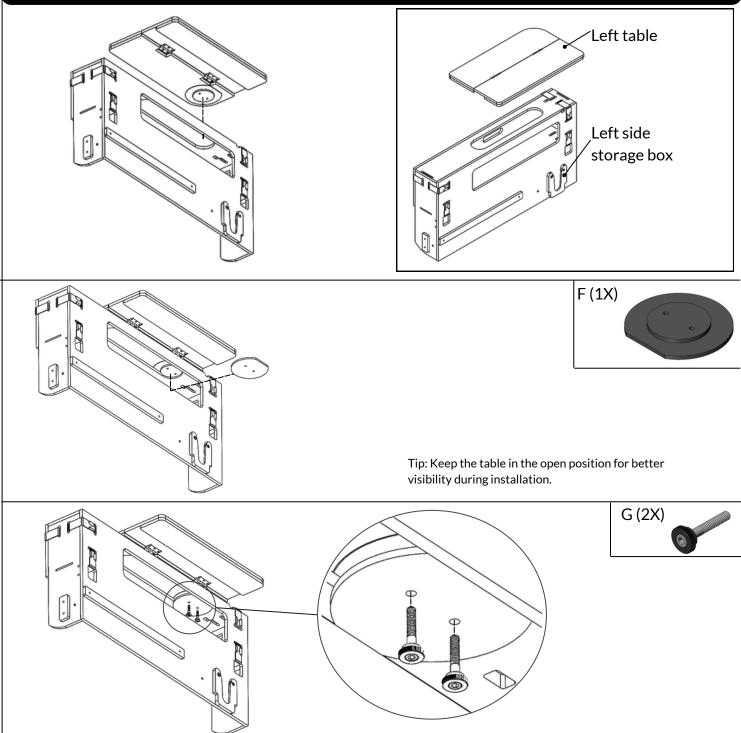


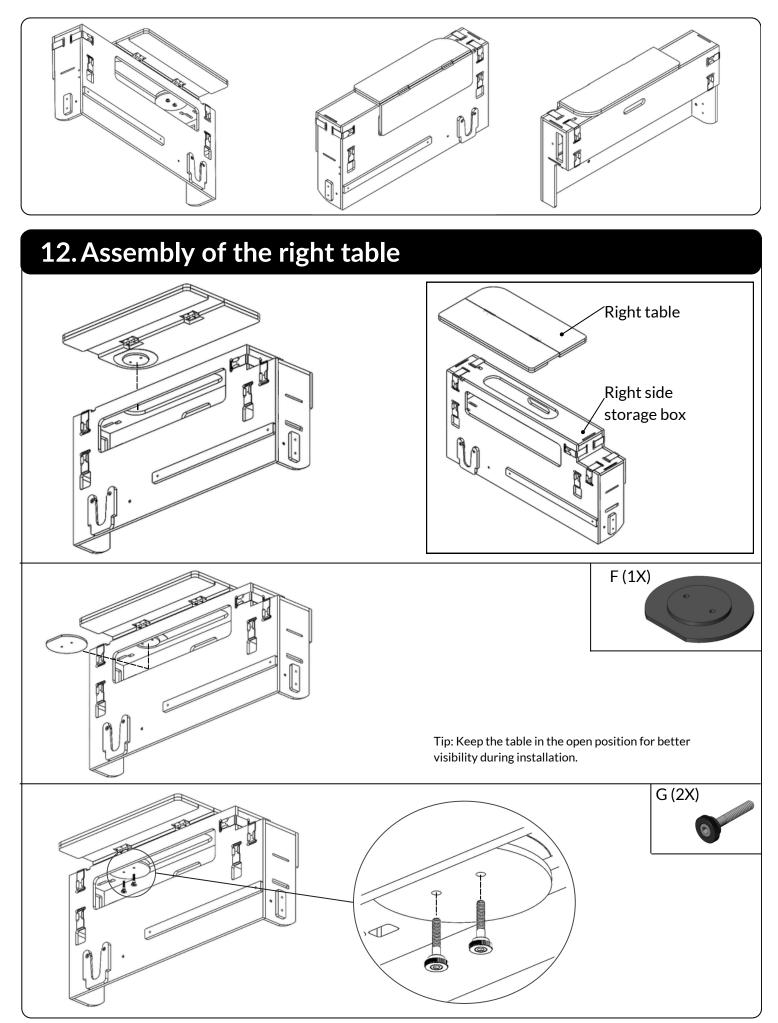

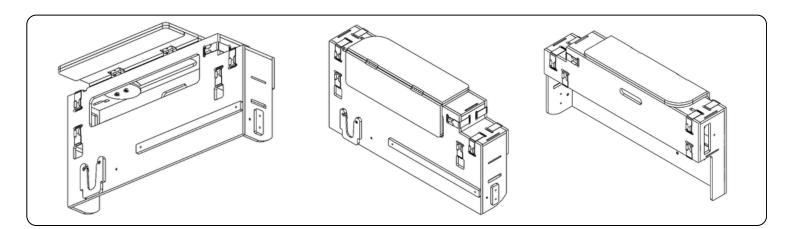


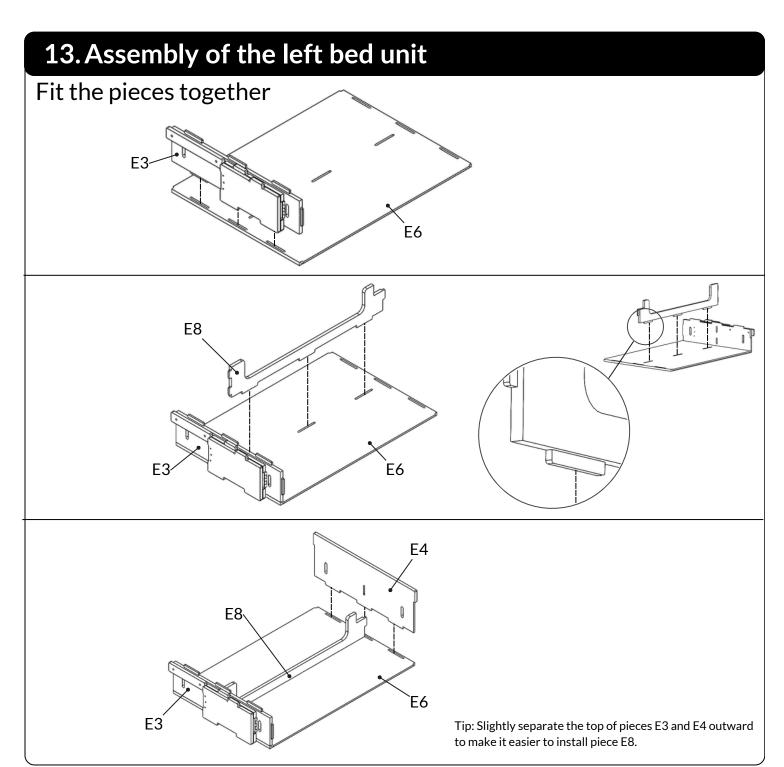


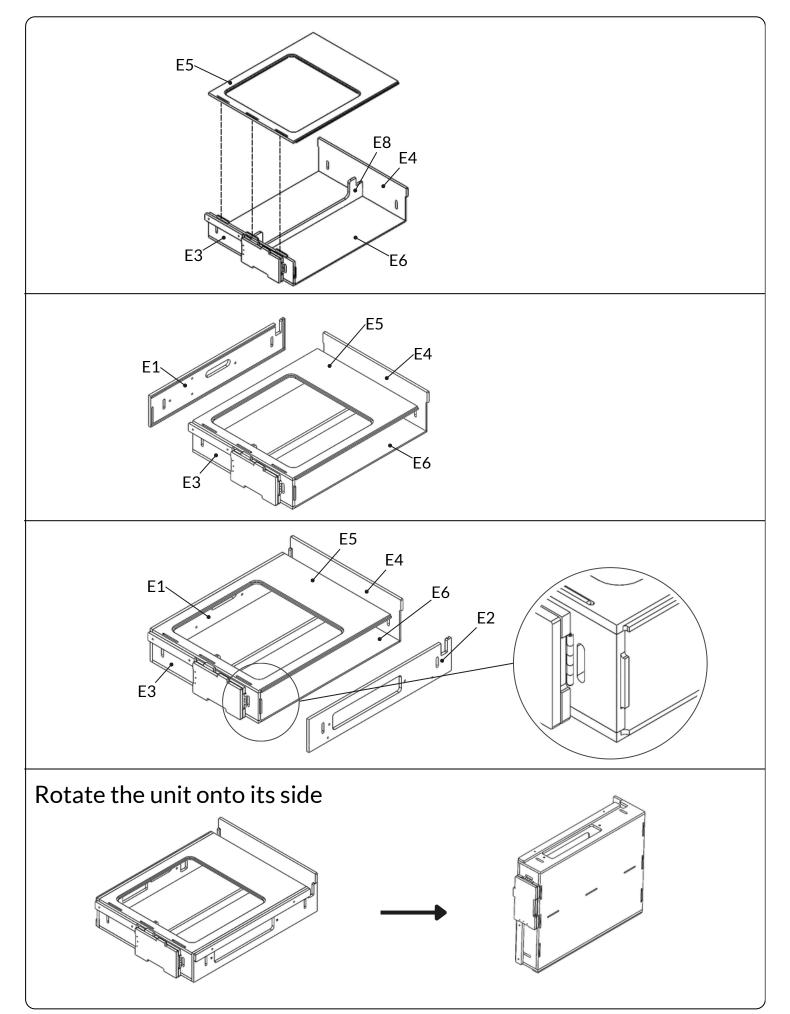


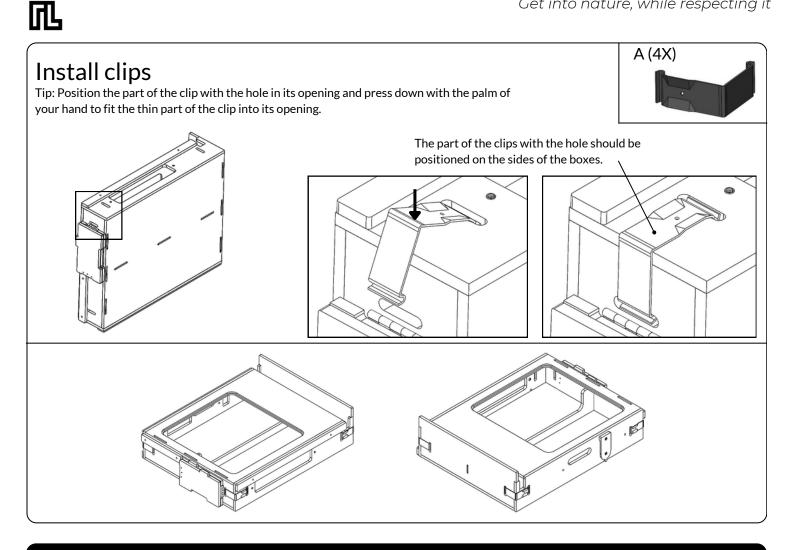



#### 14. Assembly of the right bed unit

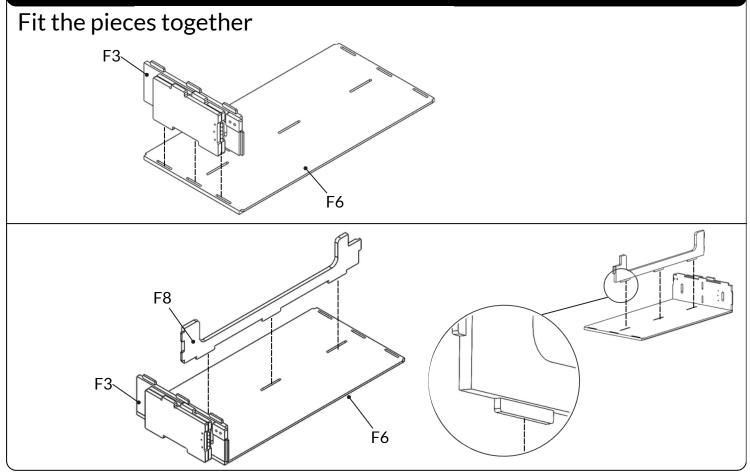


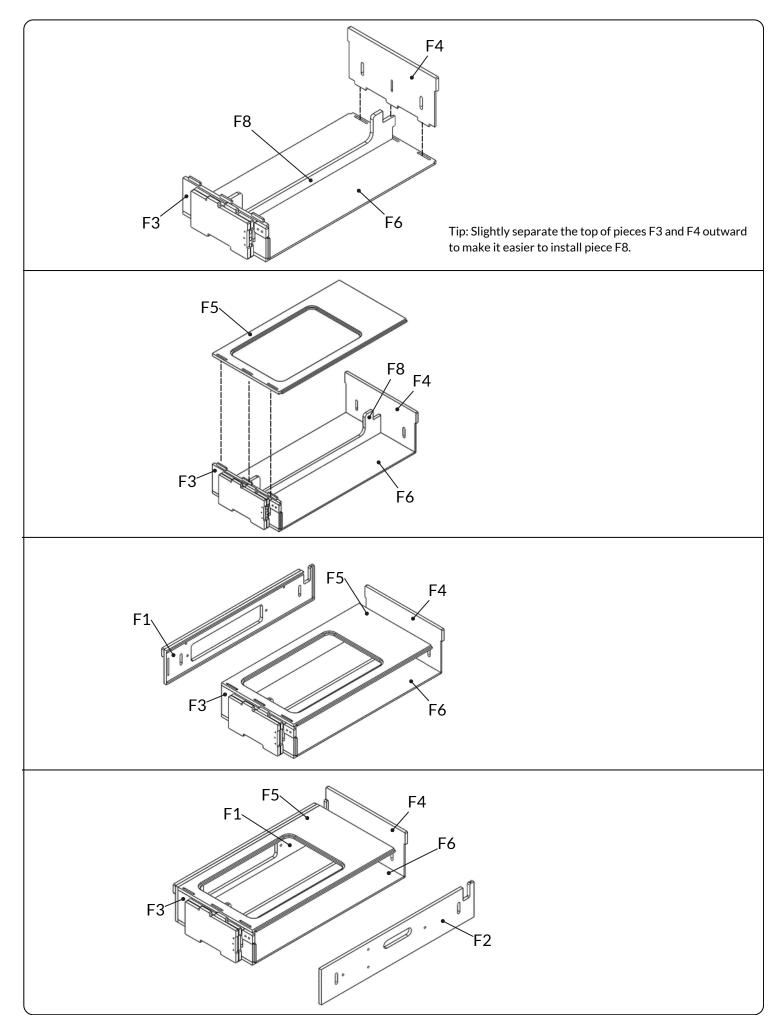

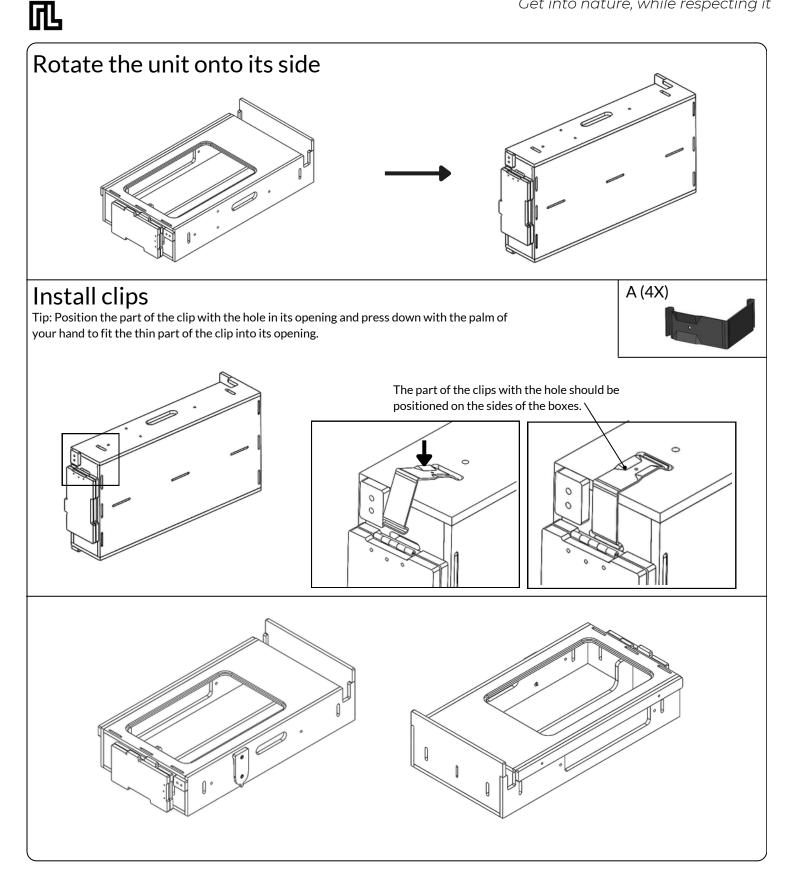


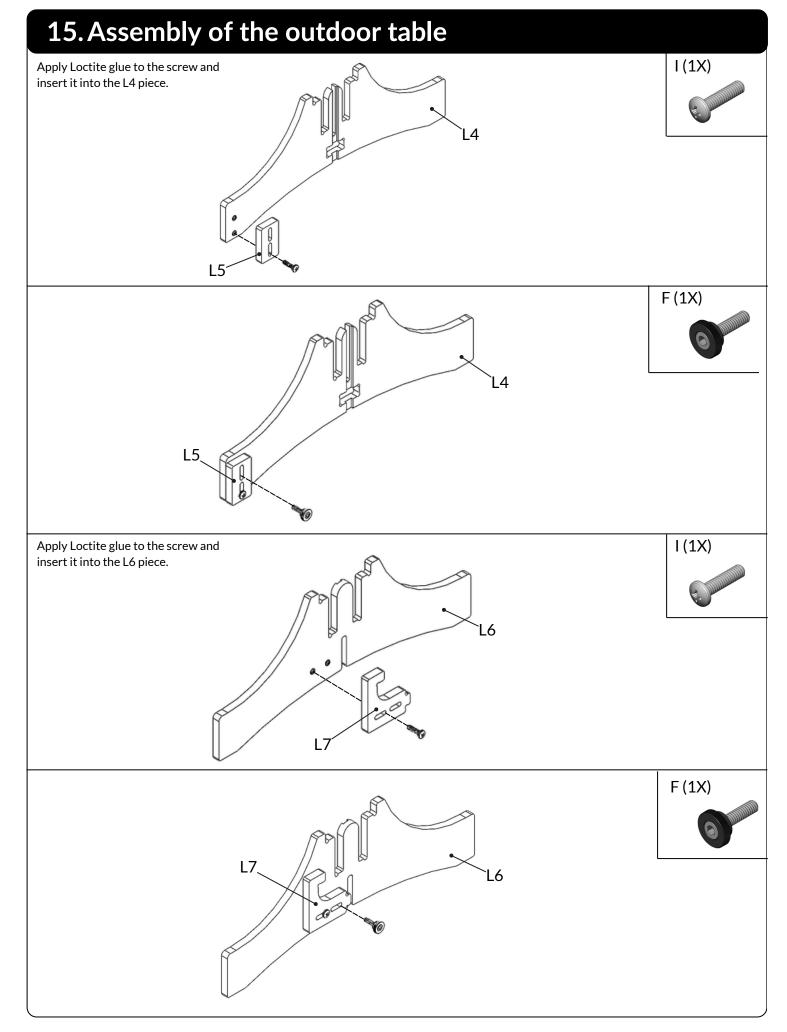

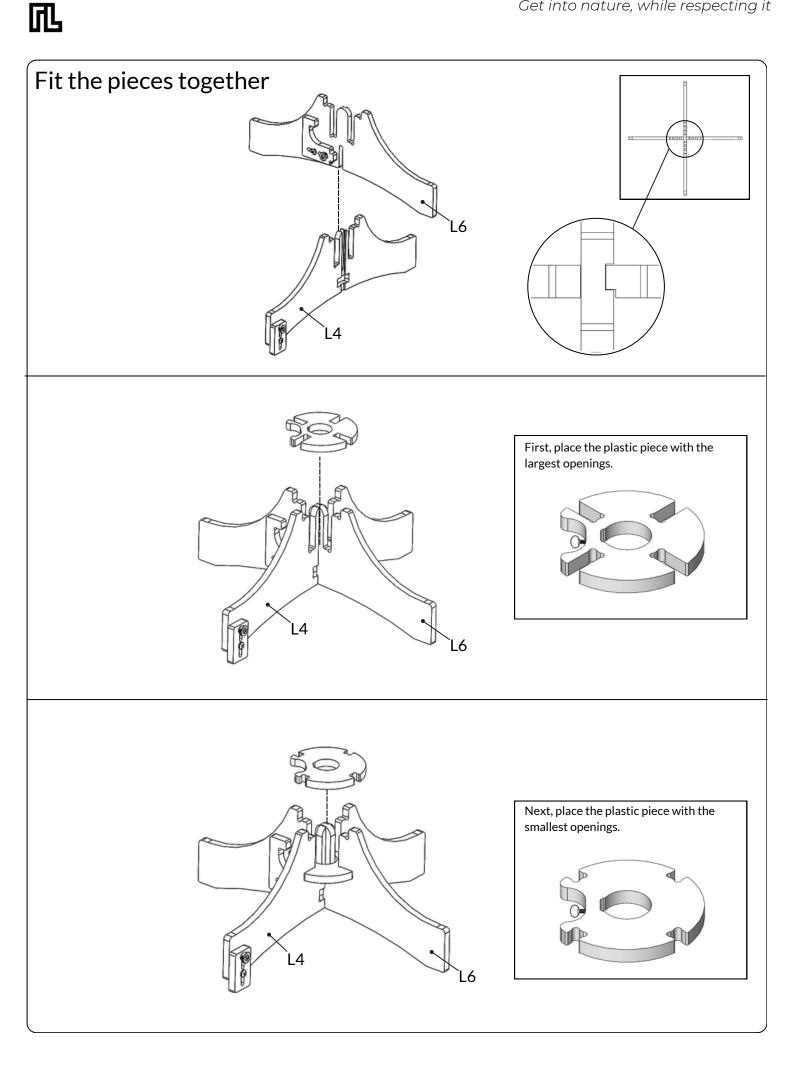

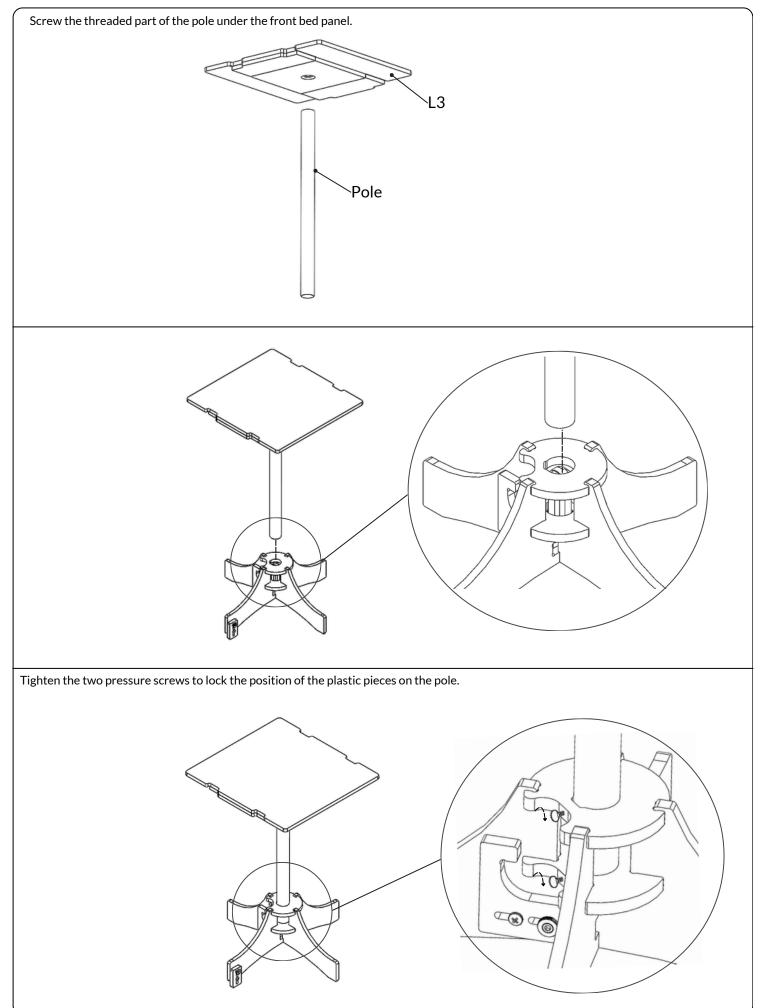



Loosen the wing nut slightly to release the lock.

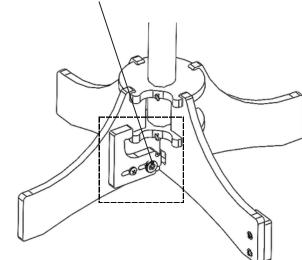

#### Level the table (if necessary)


Loosen the wing nut slightly to release the block.

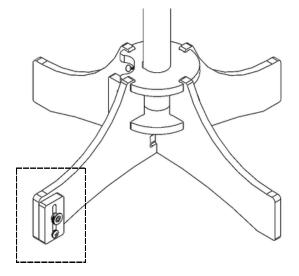


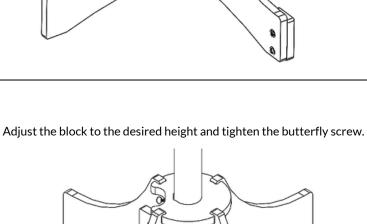


Move the lock towards the table pole and tighten the

wing nut to prevent the lock from moving.

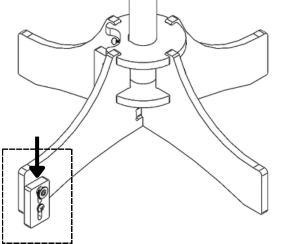

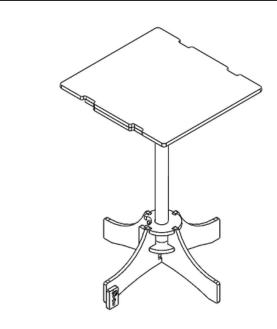

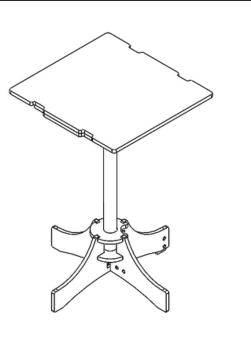



#### **User Guide**

Consult the mid-size pickup truck kit user guide before installing it in your vehicle.

#### Your Feedback is Important to Us

If you would like to help us, we would very much appreciate your feedback on our <u>Facebook page</u> and our <u>Google page</u>. Thanks in advance! Your opinion is very important to us.

You have questions? Do not hesitate to contact us. It will be our pleasure to discuss with you and help you. We are happy to contribute to your next adventures! We look forward to seeing you on the road!



#### Join the RoadLofteurs community : Roadloft Van Life

#### Our address :

695 carbon street, suite 300, Quebec, Qc, Canada, G2N 2K7

Email : info@roadloft.com

Tel : (418) 849-3087