

ASSEMBLY GUIDE

UPPER CABINETS
FOR PICKUP TRUCK



ROADLOFT



ASSEMBLY GUIDE OF THE UPPER CABINETS OF THE PICKUP TRUCK KIT

<u>3D Visualisation</u>	3
<u>List of Tools and Hardware</u>	3
<u>Pieces Identification</u>	4
<u>Assembly Steps</u>	5
<u>Your Feedback Matters</u>	10


Your first assembly? Take the time to familiarize yourself with the steps to ensure proper assembly.

For any questions, contact us :


E-mail : info@roadloft.com

Tel : (418) 849-3087

3D Visualisation

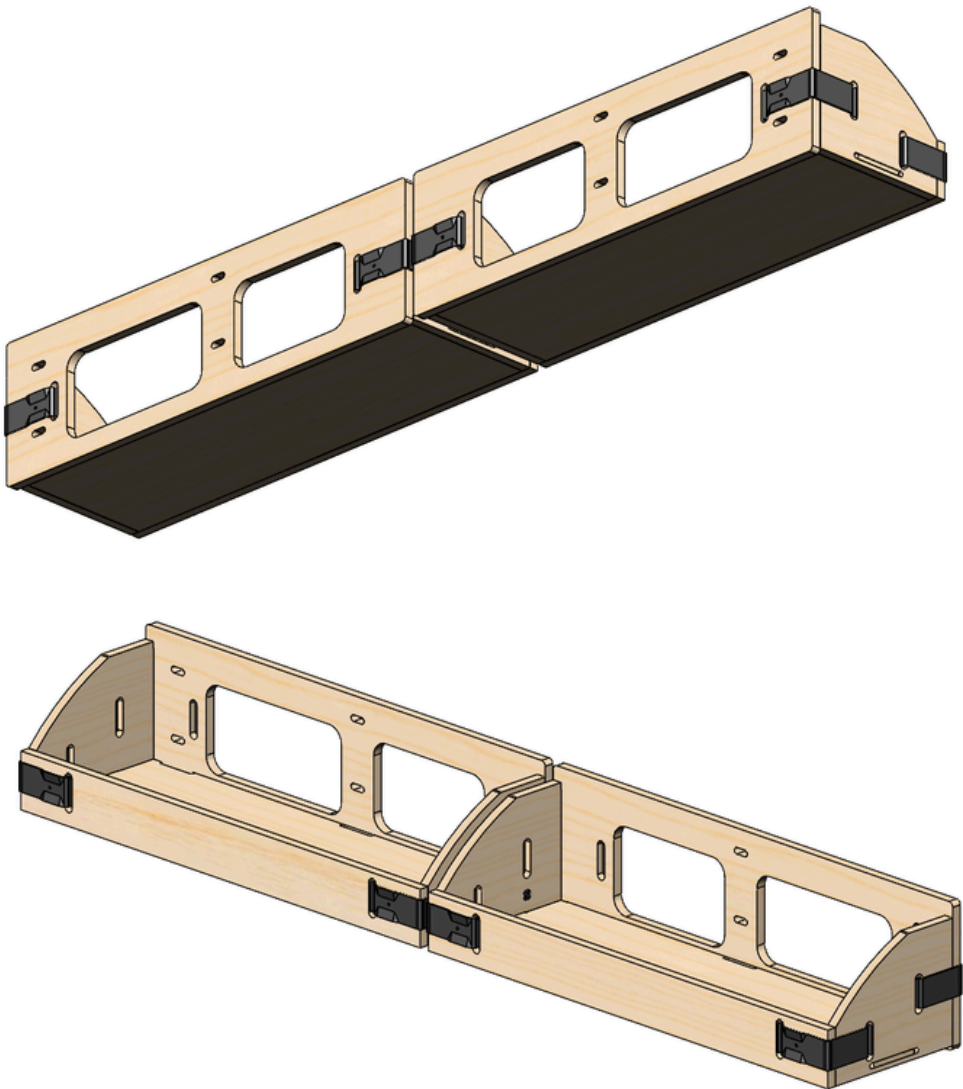


Tools and Hardware

<u>Identification</u>	<u>Hardware</u>	<u>Image</u>	<u>Quantity</u>
A	Clip		8


See the Upper Cabinet Pick-up Truck User Guide for remaining hardware.

Pieces Identification

Right Upper Storage Cabinet

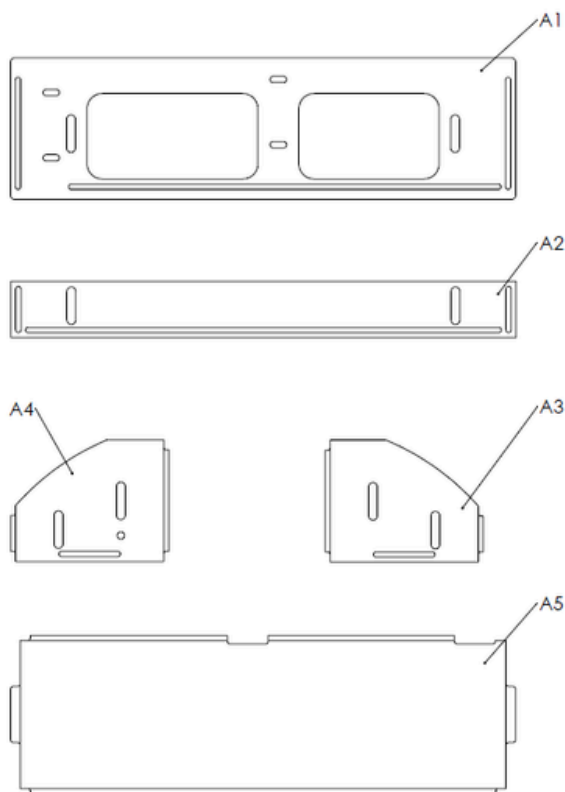

Left Upper Storage Cabinet




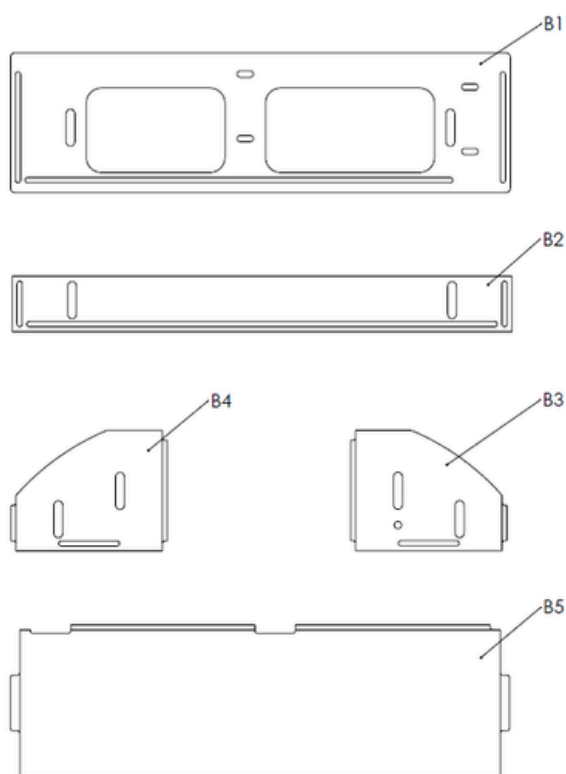


Assembly Steps

Before starting the assembly of your kit, sort the parts according to their function by referring to the number engraved on each piece.





Place the parts on a clean blanket.

During assembly, make sure the parts are properly aligned on the outside of the box.

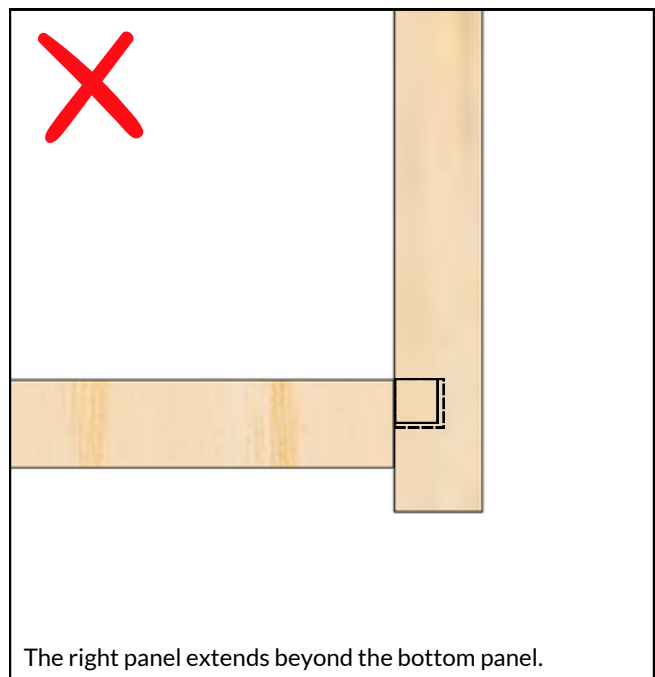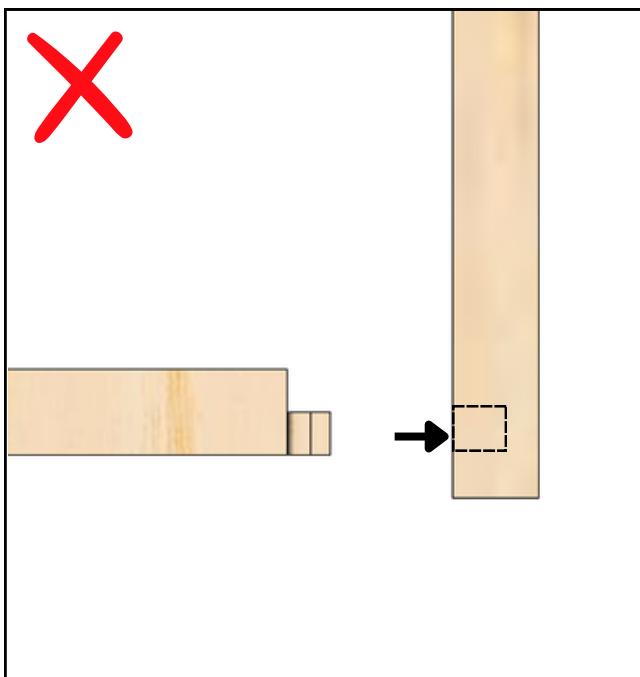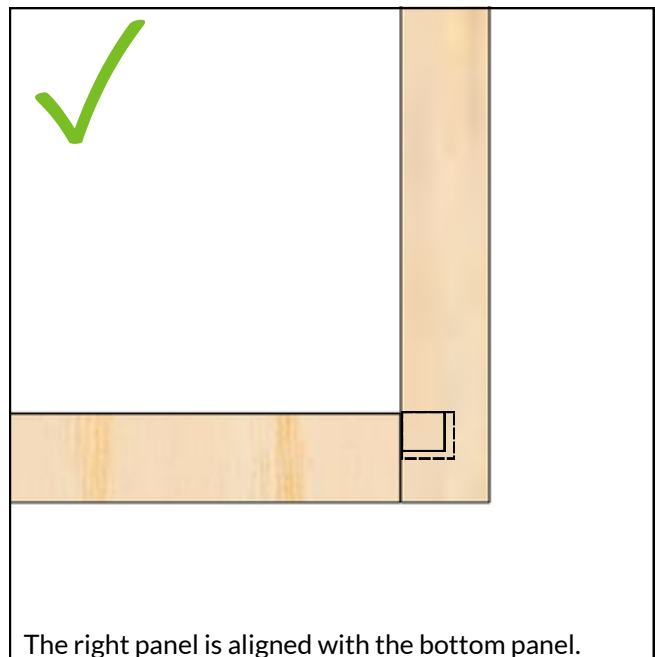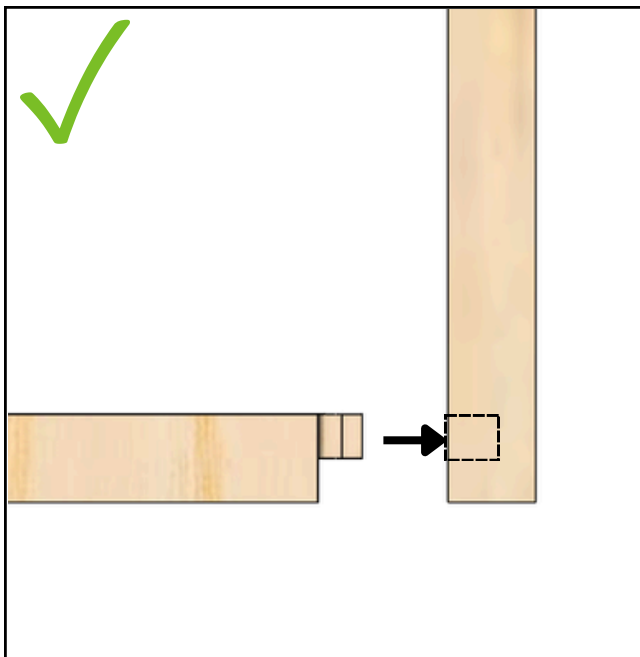


1. Assembly of the Right Upper Cabinet Unit

Fix the pieces together

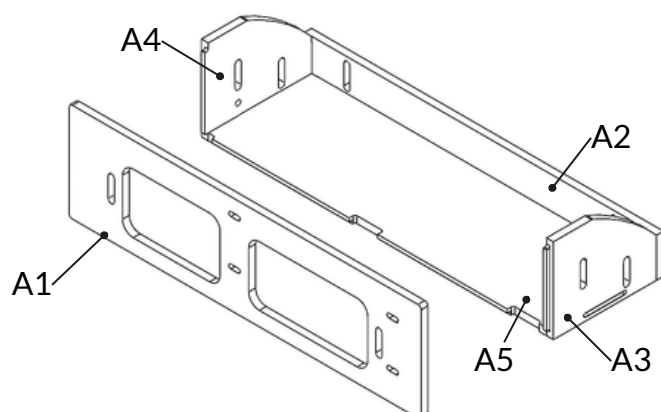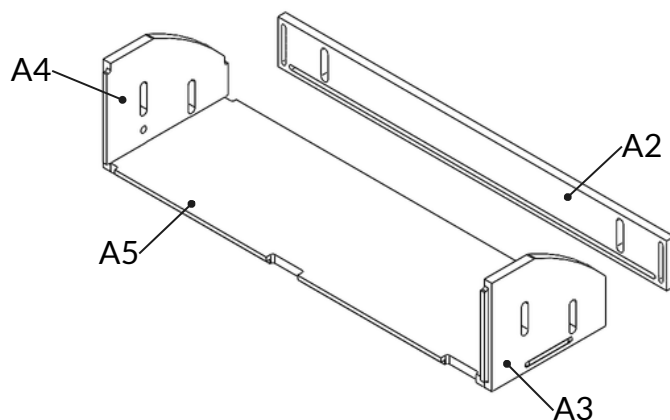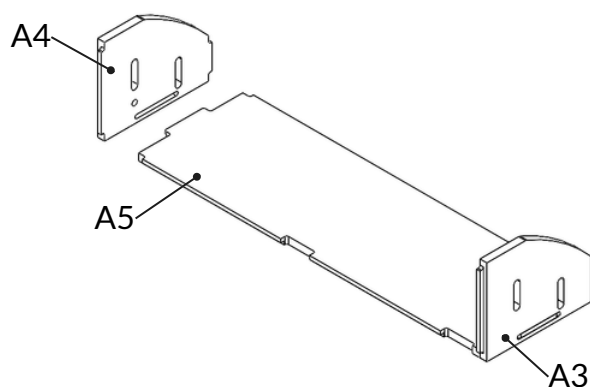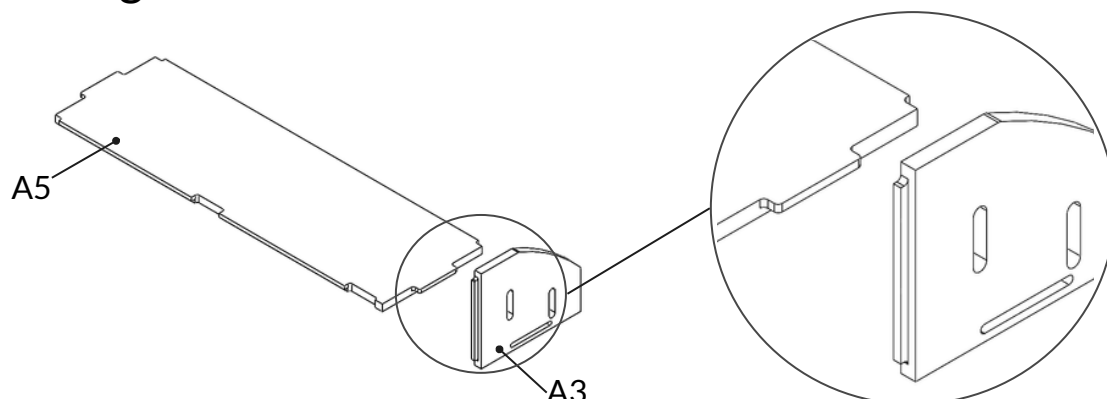

Swivel the cabinet forward

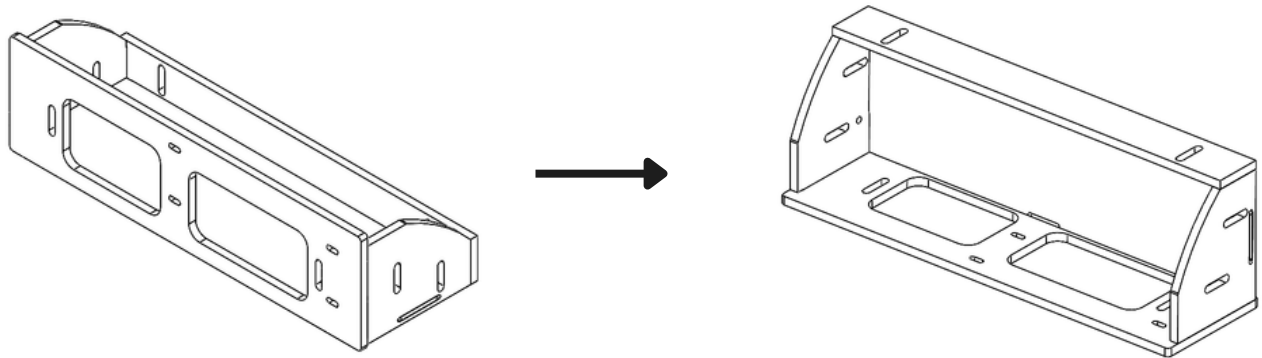






Install the clips

Tip: Position the part of the clip with the hole into its slot, then press down with the palm of your hand to snap the thin section of the clip into place.

A (4X)







The part of the clips with the hole must be positioned on the sides of the cabinets.

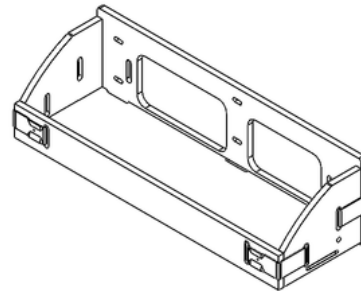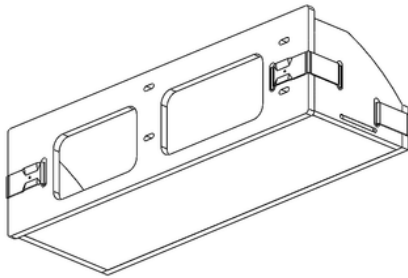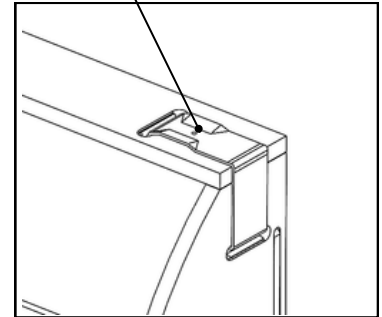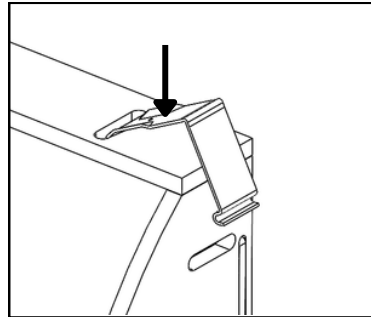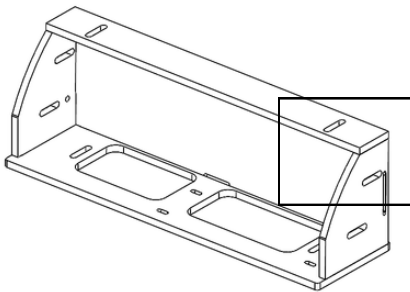


2. Assembly of the Left Upper Cabinet Unit

Fix the pieces together

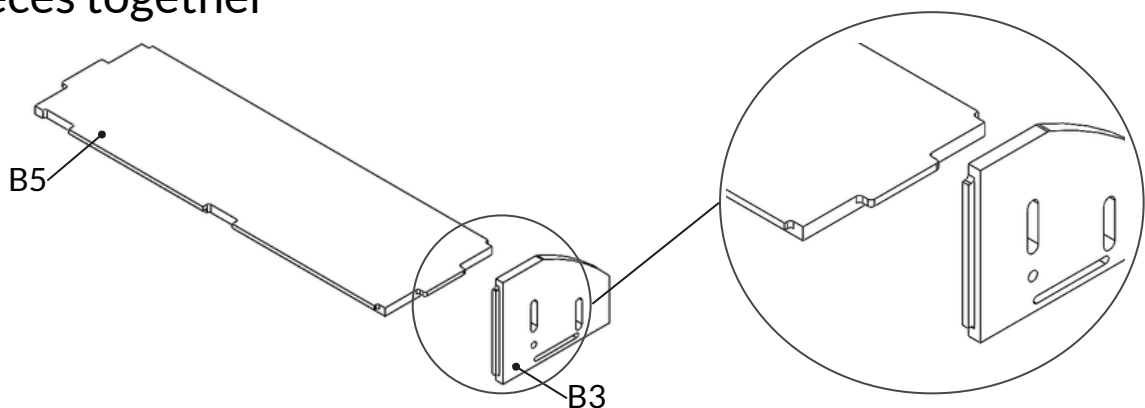

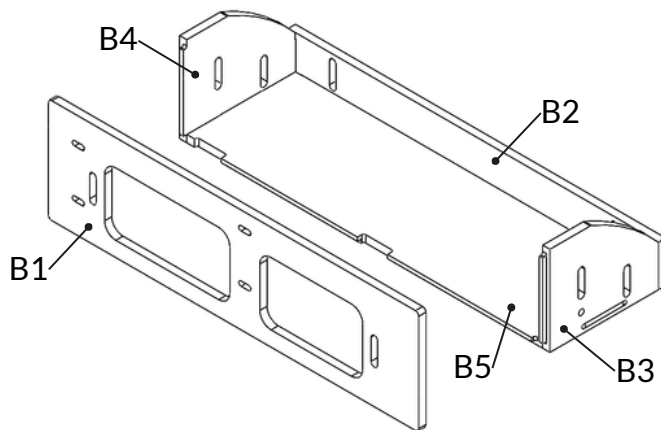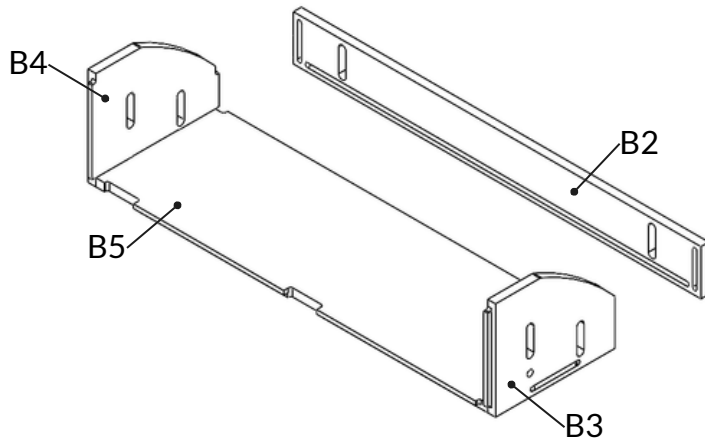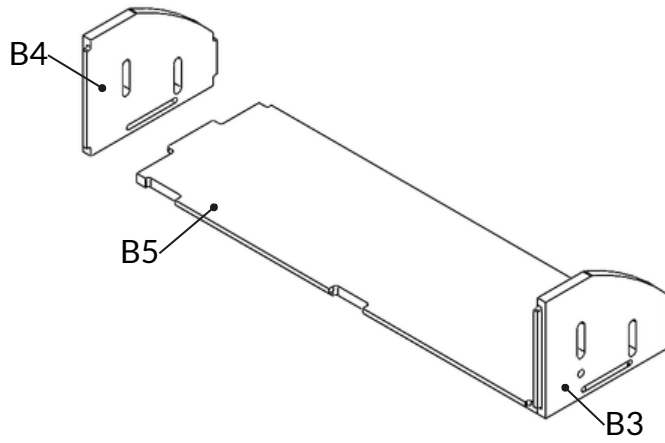

Swivel the cabinet forward

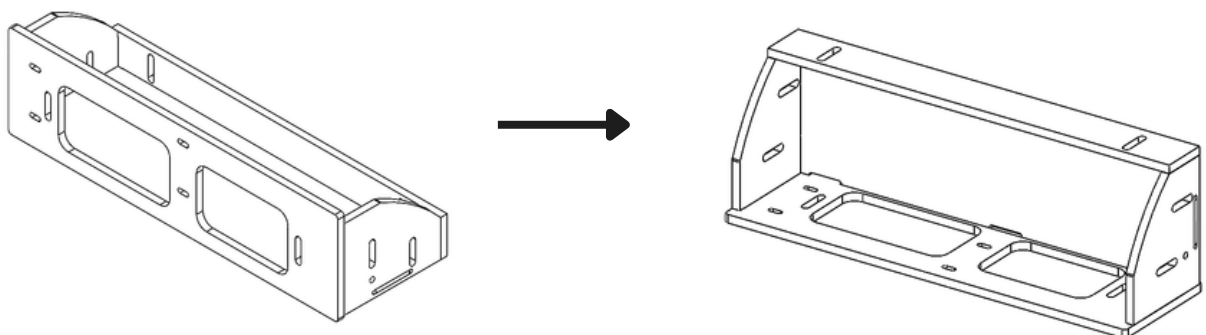








Install the clips

Tip: Position the part of the clip with the hole into its slot, then press down with the palm of your hand to snap the thin section of the clip into place.

A (4X)



The part of the clips with the hole must be positioned on the sides of the cabinets.

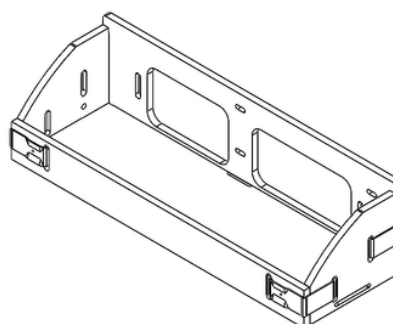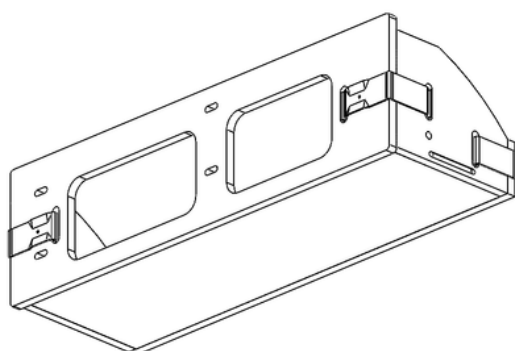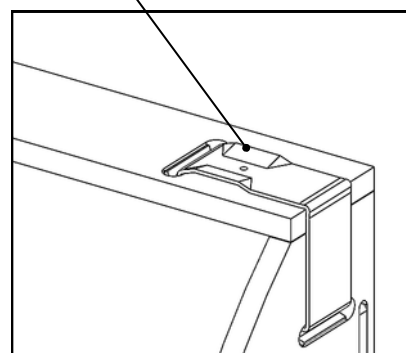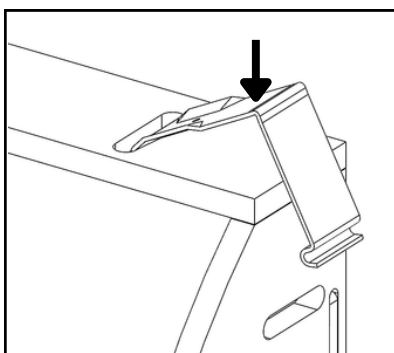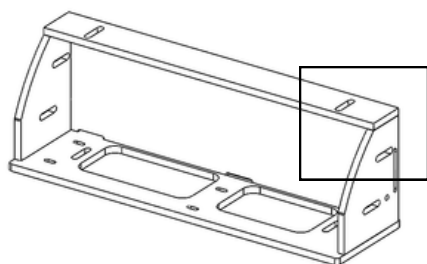

Your Feedback is Important to Us

If you would like to help us, we would very much appreciate your feedback on our [Facebook page](#) and our [Google page](#). Thanks in advance! Your opinion is very important to us.

You have questions? Do not hesitate to contact us. It will be our pleasure to discuss with you and help you. We are happy to contribute to your next adventures! We look forward to seeing you on the road!



Join the RoadLofteurs community : [Roadloft Van Life](#)

Our address :

695 carbon street, suite 300, Quebec, Qc, Canada, G2N 2K7

Email : info@roadloft.com

Tel : (418) 849-3087